

# Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879  
USA Tech Support 800-507-2338 ext. 114



## E80-82-069-01-22

2016-2022 Toyota Tacoma, 2WD/4WD

### Notes

### Kit Contents

Description	Part Number	Quantity
FRONT SPRING	F31-82-069-02-FA	2
FRONT SHOCK	82113.8003	2
REAR SHOCK	82110.8004	2
STABILIZER BAR	8001192.1	1
RETAINING RING KIT	84-1804.0	2
NYLON CABLE TIE	H70065500	2

### Shock Instructions and Safety Tips

#### Read all instructions before beginning installation

- Any time you are working under a vehicle, be sure to use the proper jack stands and tire chocks to prevent any shifting or slipping of the car. Never use a jack only to support the vehicle while changing shocks.
- Inspect shock brackets or mounting points before installation to make sure they are not broken or bent.
- Do not attempt to disassemble these shocks. Return damaged shocks to EIBACH SPRINGS for any necessary service or repairs.

# Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879  
USA Tech Support 800-507-2338 ext. 114



## Shock Instructions and Safety Tips

### IMPORTANT NOTES:

- Any time you are working under a vehicle, be sure to use the proper jack stands and tire chocks to prevent any shifting or slipping of the car. Never use a jack only to support the vehicle while changing shocks.
- Inspect shock brackets or mounting points before installation to make sure they are not broken or bent.
- Do not attempt to disassemble these shocks. Return damaged shocks to Eibach for any necessary service or repairs.

### USE THE RIGHT SHOCK FOR YOUR VEHICLE

- Use EIBACH shocks only for the applications for which they are listed. Each shock is specifically tuned for that vehicle's weight, suspension geometry, and other characteristics.
- Compare original shock mounting style and hardware with your new shocks before starting installation. If original hardware is not reusable, it should be replaced with OEM quality and style hardware.
- Shocks are tuned to vehicle manufacturer's recommendation for tire pressure, not necessarily the max inflation pressure listed on sidewall of tire.
- The OEM spring perch will have to be removed from the OEM strut assembly and installed onto the Eibach Pro Truck Sport Damper.

### ADDITIONAL NOTES

- If you are uncertain of proper shock installation procedure, please consult appropriate service manual. Torque all fasteners to vehicle manufacturer's specs. Note: On Post Mount shocks, finger tighten nut to achieve zero clearance between the retaining washers and the bushings, then continue to tighten approximately 5-6 turns to achieve proper pre-load. Bushings should be slightly bulged. Secure with Jam Nut. On some vehicles, nut may bottom out on stud before 5-6 turns, which is proper for those applications.
- OEM mounting hardware may be either standard or metric. Make sure you have the proper tools before starting. Do not interchange hardware. Use new mounting hardware provided with your shocks, and re-use original mounting hardware in all other locations.
- Eibach shocks have a high-pressure nitrogen gas charge and may come with a restraining strap, which holds the shock in a compressed position. To ease most installations, leave the strap on until you have secured one end of the shock, then cut the strap and quickly guide the other end of the shock into position as it expands. Strap must be cut before some installations, such as when strap goes around post.
- Wire ties are provided to secure the shock boot to the shock body. On some installations (especially where the shock must pass through a hole in the lower control arm), it is necessary to put the wire tie on after the shock is installed.
- After installing shocks and before driving vehicle, check for clearance of exhaust, brake or gas lines, electrical wiring, etc.
- After installation, drive the vehicle cautiously for the first few miles to develop a feel for the improved handling and ride quality. After 10 miles, inspect installation, re-check torque on all fasteners, and verify adequate component clearance.
- When installing rear shocks, install with the dust boot facing down to allow moisture to escape. Failure to do so may result in sediment and buildup around the seals causing premature failure of the shock.

# Installation Instructions


Eibach Inc. 264 Mariah Circle Corona, CA 92879  
USA Tech Support 800-507-2338 ext. 114



## Installation Notes

1. Park vehicle on level surface and set emergency brake. Raise and support the vehicle with safety stands. Refer to factory manual for proper location of safety stands
2. Power washing your chassis will make the installation cleaner. NOTE: Never work on or under a vehicle unless it is properly supported by safety stands.
3. Loosen and remove the OE shock per the factory recommended removal procedure.
4. Installation of the Eibach Pro Damper shock should be done in the reverse order of removal.

## Heights with Eibach PRO-LIFT-KIT Springs

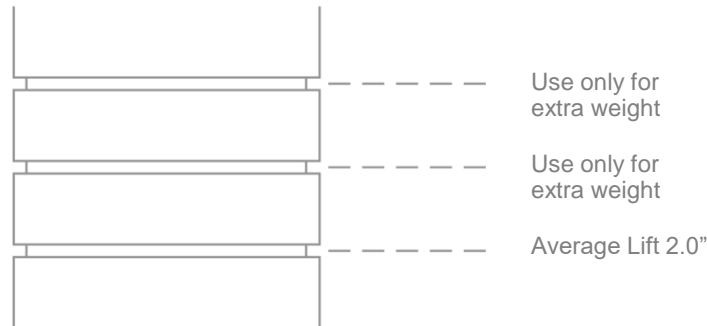

- 
- Shocks are tuned to vehicle manufacturer's recommendation for tire pressure, not necessarily the max inflation pressure listed on sidewall of tire.
  - The OEM spring perch will have to be removed from the OEM strut assembly and installed onto the Eibach Pro Truck Sport Damper.



# Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879  
USA Tech Support 800-507-2338 ext. 114



## Perch Installation

1. Ensure that the Snap Ring is fully seated in the snap ring groove (you should be able to rotate it manually).
2. Install the spacer ring if included in the orientation shown, making sure the snap ring is fully seated into the groove on the bottom side of the spacer ring. **Improper installation will cause permanent damage to the shock.**

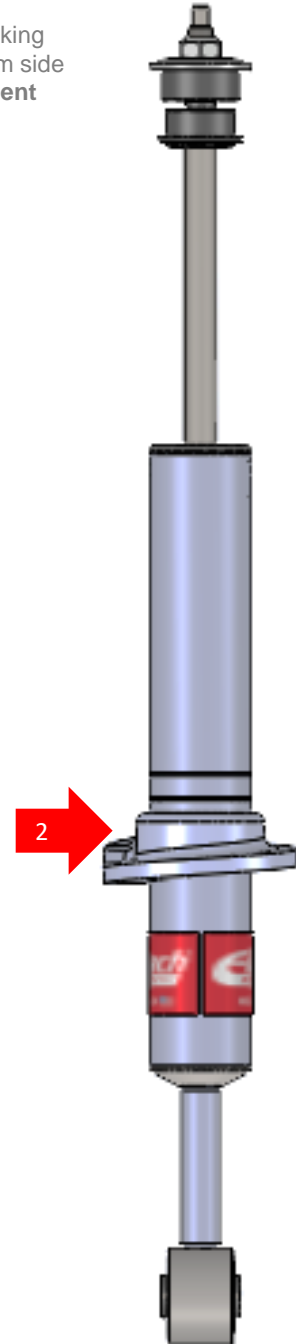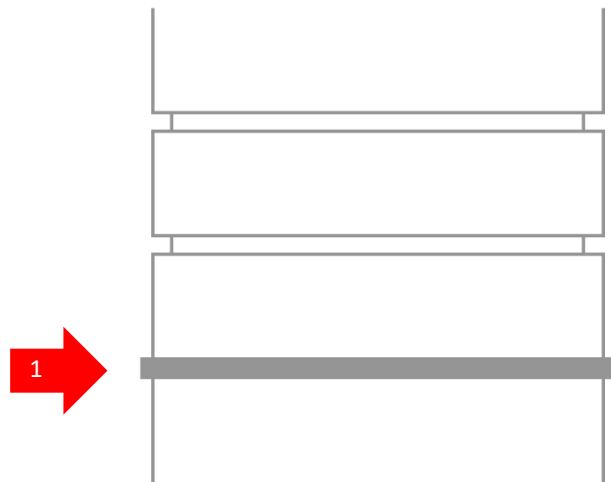

# Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

## Stabilizer Bar Relocation Bracket #8001192.1

### 2005-17 Toyota Tacoma

Kit Contents	Description	Part Number	Qty
	Relocation Bracket	8001192	2
	Bolt, M10-1.5 Hex	H13074749	4
	Washer, M10	H50025100	4
	Instructions	8001192.1INST	1

#### NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

#### Stabilizer Bar Relocation Bracket Install



Photo 1

1. Loosen and remove the hardware that secures the underbody cover, then, remove the cover as shown. (See Photo 1)

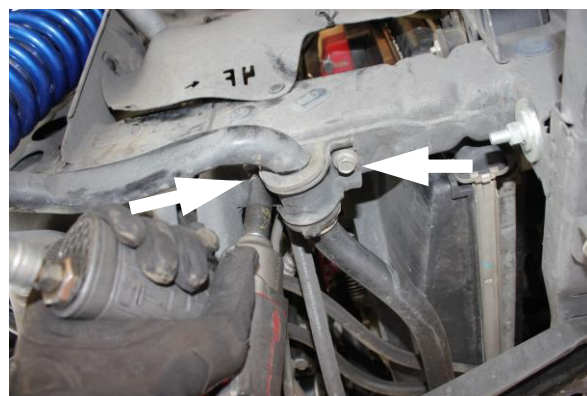


Photo 2



Photo 3

2. Loosen and remove the OE hardware that secures both the left and right side bushing brackets to the frame and let the bar rotate downward as shown. (See Photos 2 & 3)

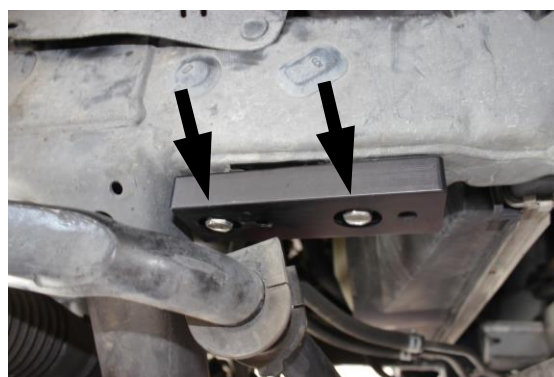


Photo 4

3. Install both left and right side Eibach relocation brackets and secure them to the frame with the OE hardware removed in Step 2 Photo 2. (See Photo 4)

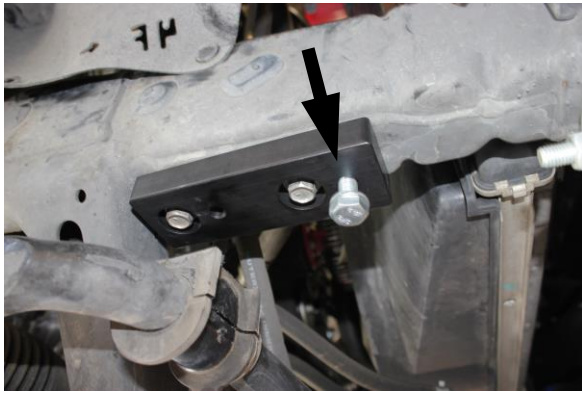


Photo 5



Photo 6



Photo 7

4. Install one of the provided hex bolts into the forward hole, but do not tighten, then, reinstall the OE bushing bracket onto the bushing and slide the slotted end of the bracket forward until its fully seated against the hex bolt as shown. **Note: Do not tighten the hardware at this time. (See Photos 5, 6 & 7)**



Photo 8



Photo 9

5. You can now install the provided rear hex bolt and secure the bushing bracket as shown. **Note: If the holes don't line up with the bushing bracket, you may need to loosen the relocation bracket hardware to adjust the alignment for better fitment. (See Photos 8 & 9)**
6. Double check to make sure everything is properly positioned and tightened, then, reinstall the underbody cover using the OE hardware.
7. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.