

LKAPR1 INSTALLATION





INSTALLATION INSTRUCTIONS

- 1) REMOVE SCREW IN BOTTOM OF FOUNTAIN ARM AND SLIDE COVER PLATE AWAY FROM THE WALL.
- 2) USE ROUGH-IN DIMENSIONS IN FIG. 1 ON PAGE 2 TO LOCATE AND ATTACH THE ANTI-ROTATION SPACER (ITEM 2) TO THE WALL.
- 3) REPLACE THE COVER PLATE AND SCREW.

LKAPR1 INSTALLATION

- 4) INSERT SCREW (ITEM 1) INTO HOLE AT BACK OF FOUNTAIN ARM (SEE FIG. 2). THIS HOLE ALIGNS WITH THE KEY HOLE SLOT IN THE CANE APRON (ITEM 3). USE THE CANE APRON AS A DEPTH GAGE WHEN INSERTING THE SCREW.
- 5) ATTACH THE CANE APRON TO THE FOUNTAIN ARM. SLIDE THE CANE APRON UP TO THE BOTTOM OF THE ARM AND ONCE THE KEY HOLE SLOT IS ALIGNED WITH THE SCREW SLIDE TOWARDS BACK (SEE FIG 3) ALIGNING THE ANTI-ROTATION SPACER THAT YOU PLACE ON THE WALL INTO THE GROOVE IN CANE APRON. ONCE IN PLACE, INSERT SCREW INTO FRONT HOLE OF THE CANE APRON INTO THE FOUNTAIN ARM (SEE FIG. 3).
- 6) USE A LONG PHILLIPS SCREW DRIVER TO TIGHTEN SCREW IN KEY HOLE SLOT, SCREW IS ACCESSIBLE THROUGH HOLE IN BOTTOM OF CANE APRON (SEE FIG. 4).

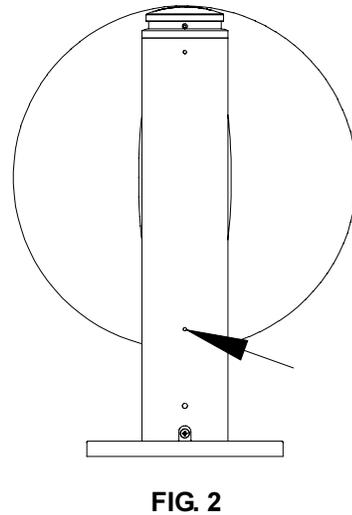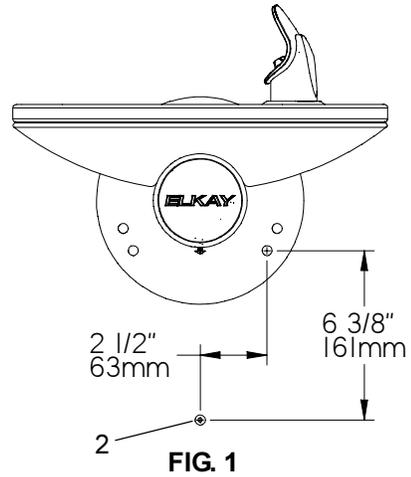

PARTS LIST		
ITEM NO.	PART NO.	DESCRIPTION
1	75668C	SCREW-#8-32 X .62 THTC
2	56234C	SPACR-ANTI ROTATION
3	56238C	APRON-CANE LKAPR1

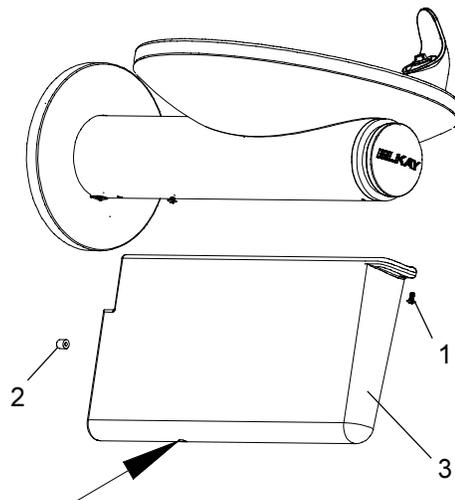
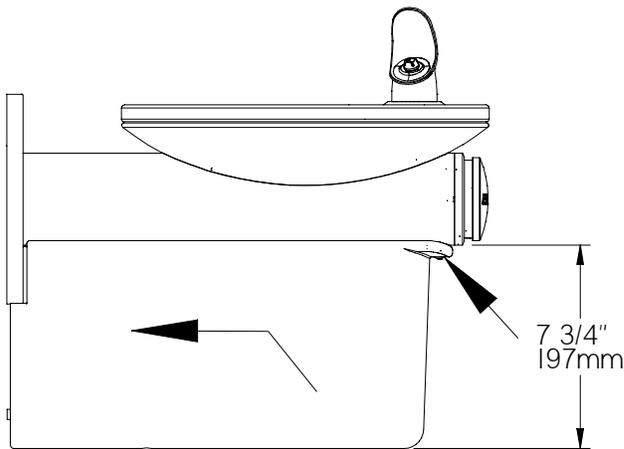


FIG. 3

FIG. 4

FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.323.0620
 ELKAY MANUFACTURING COMPANY • 2222 CAMDEN COURT • OAK BROOK, IL 60523 • 630.574.8484