



Step-By-Step Guide

CND™ SHELLAC™ GEL POLISH REMOVAL

CND™ SHELLAC™ is a patented breathable formula providing safe and easy removal with no nail damage to the natural nail allowing for an effortless **Butterfly Removal™** after 2+ weeks of wear.

CND™ PRODUCTS REQUIRED

- CND™ COOLBLUE™ Hand Cleanser
- CND™ OFFLY FAST™ Moisturizing Remover
- CND™ Foil Remover Wraps

ACCESSORIES/EQUIPMENT REQUIRED

- Hand towels
- Hand soap
- Plastic-backed, lint-free pads


Step 1 CLEANSE HANDS

1. Have the client wash their hands with soap and running water for 20-30 seconds and towel dry.
2. Massage CND™ COOLBLUE™ Hand Cleanser into the client's hands to cleanse the skin.



Step 2 WRAP THE NAILS

1. Assess the nail for potential problems.
 - a. Saturate the cotton pad on the CND™ Foil Remover Wrap with CND™ OFFLY FAST™ Moisturizing Remover.
 - b. Place wrap under the finger with the edge of the cotton pad underneath the extension edge of the nail.
 - c. Place the cotton pad over the top of the nail.
 - d. Wrap the CND™ Foil Remover Wrap around the finger, ensuring a snug fit.
 - e. Squeeze the top center of the foil together to secure. (*Pro Tip: Use plastic gel polish remover tip clips to keep Remover Wraps in place.*)

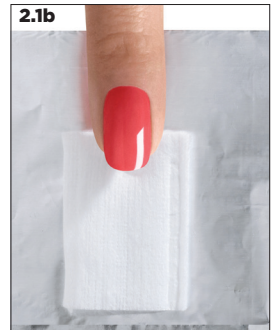

Step 3 SET A TIMER

1. Leave the CND™ Foil Remover Wrap on the finger for the designated time based on the CND™ SHELLAC™ Top Coat used during application.

3.1

CND™ SHELLAC™ Top Coat	REMOVAL TIMES
XPRESS™	5 MINUTES
ORIGINAL	8 MINUTES
DURAFORCE™	15 MINUTES
NO WIPE+	8-15 MINUTES
SPECIAL EFFECTS	8-10 MINUTES



Step 4

REMOVE THE WRAP

1. Press and massage the nail using a twisting motion to pull the wrap off.
2. Clean the nail with a plastic-backed, lint-free pad saturated with **CND™ OFFLY FAST™** Moisturizing Remover to remove any residue.

Removal over enhancements: To maintain the integrity of the enhancement, remove **CND™ Shellac™ using a 180-grit file or medium grit bit for E-File.*

4.1



4.2a



4.2b

