



ONLINE Bedrooms | **DRAWER CHEST** **ASSEMBLY INSTRUCTIONS**



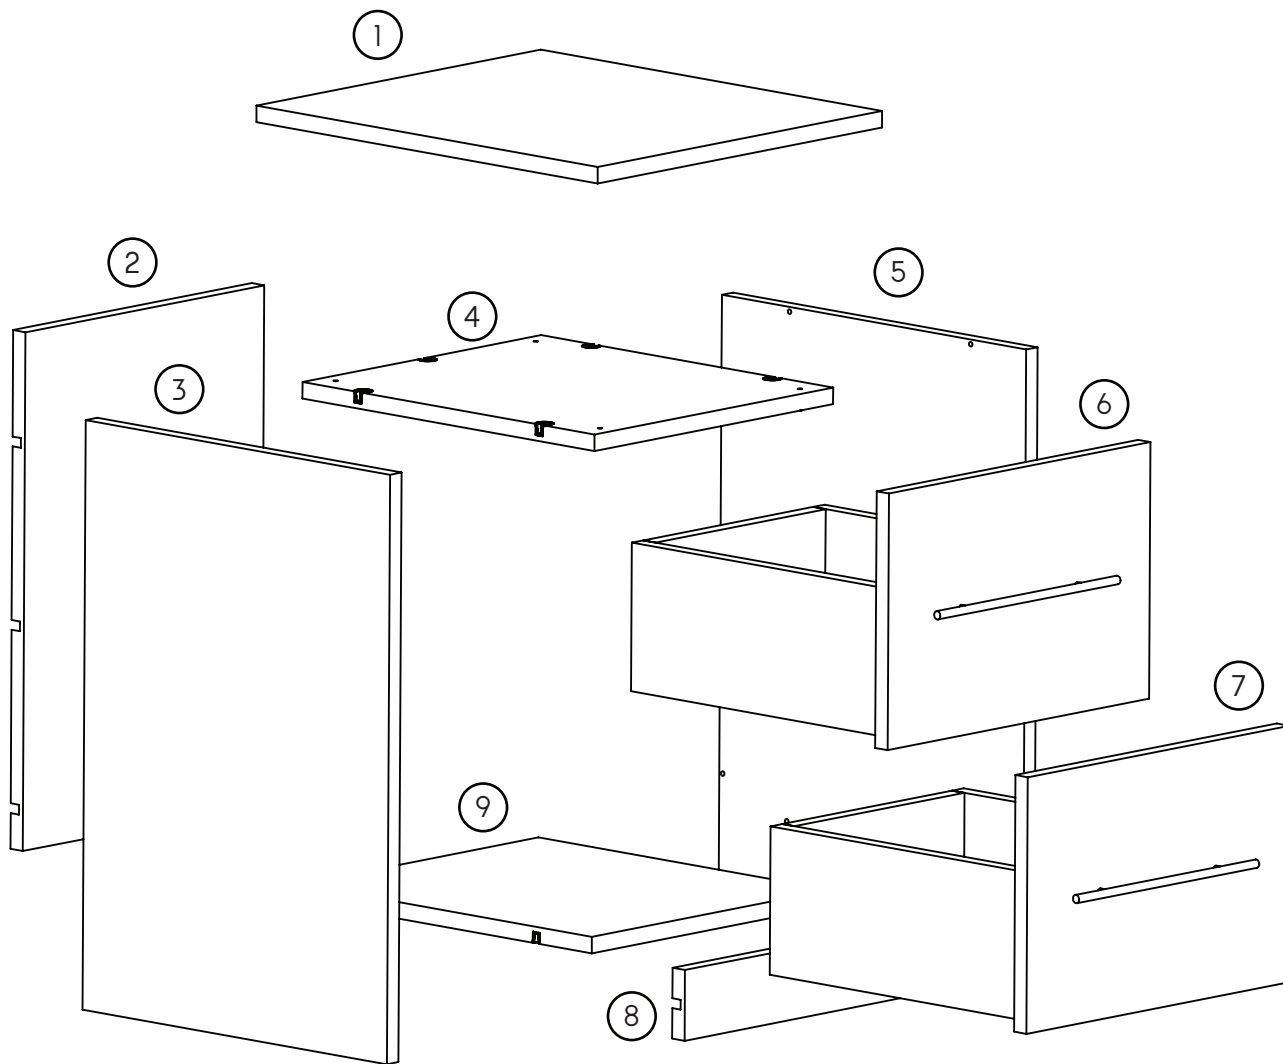


Parts




6x30 mm Bolt


Tools




Step 01

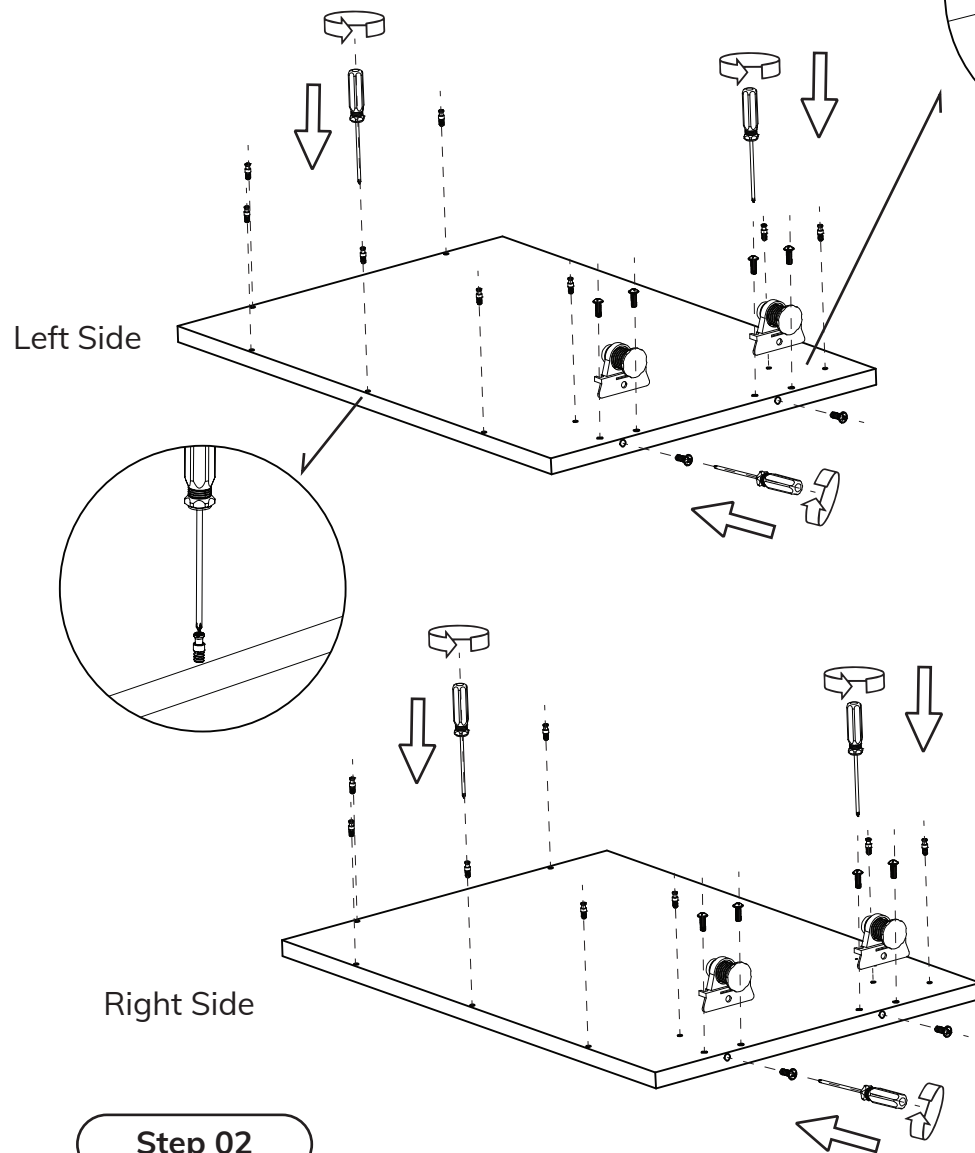

Step 02

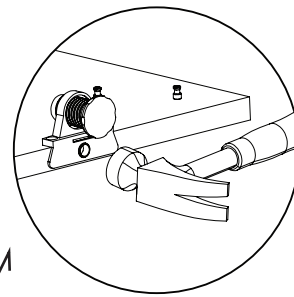


Step 1:
Hammer the
Leg in first

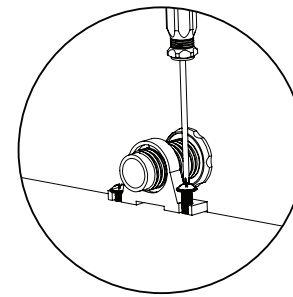


Step 2:
Screw it in
place


Step 03

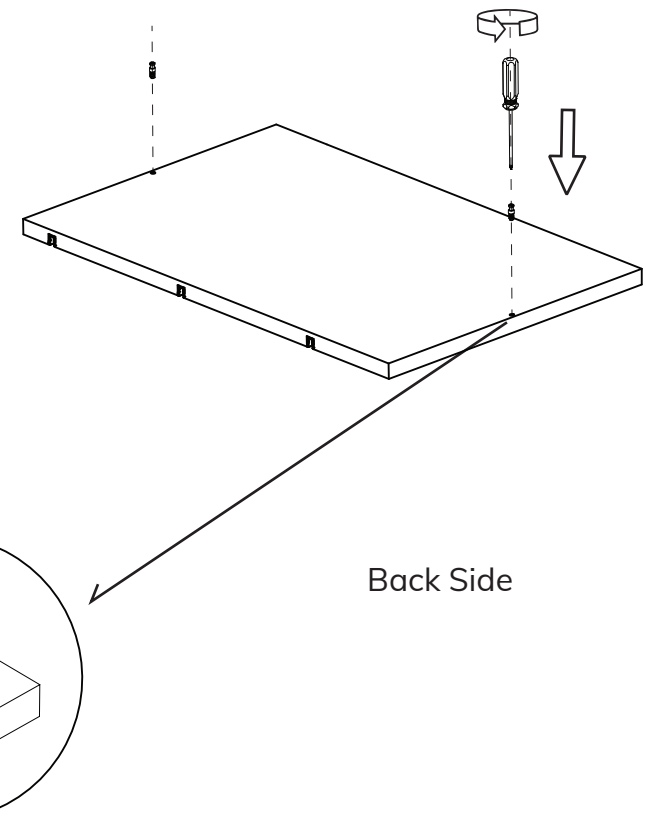


Step 04

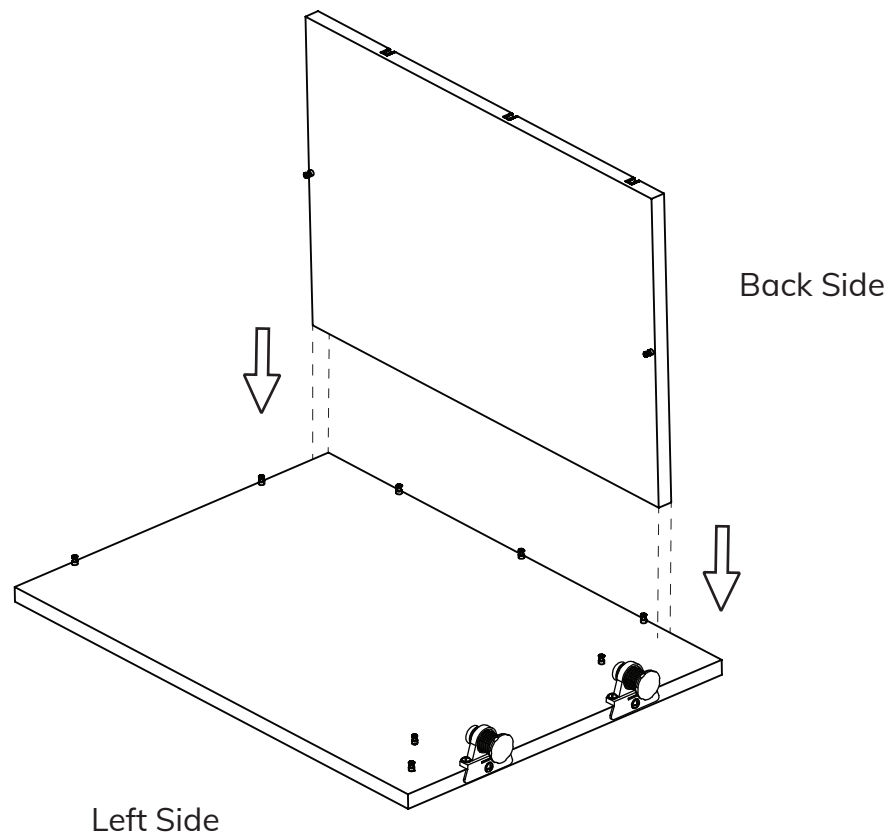


Step 05

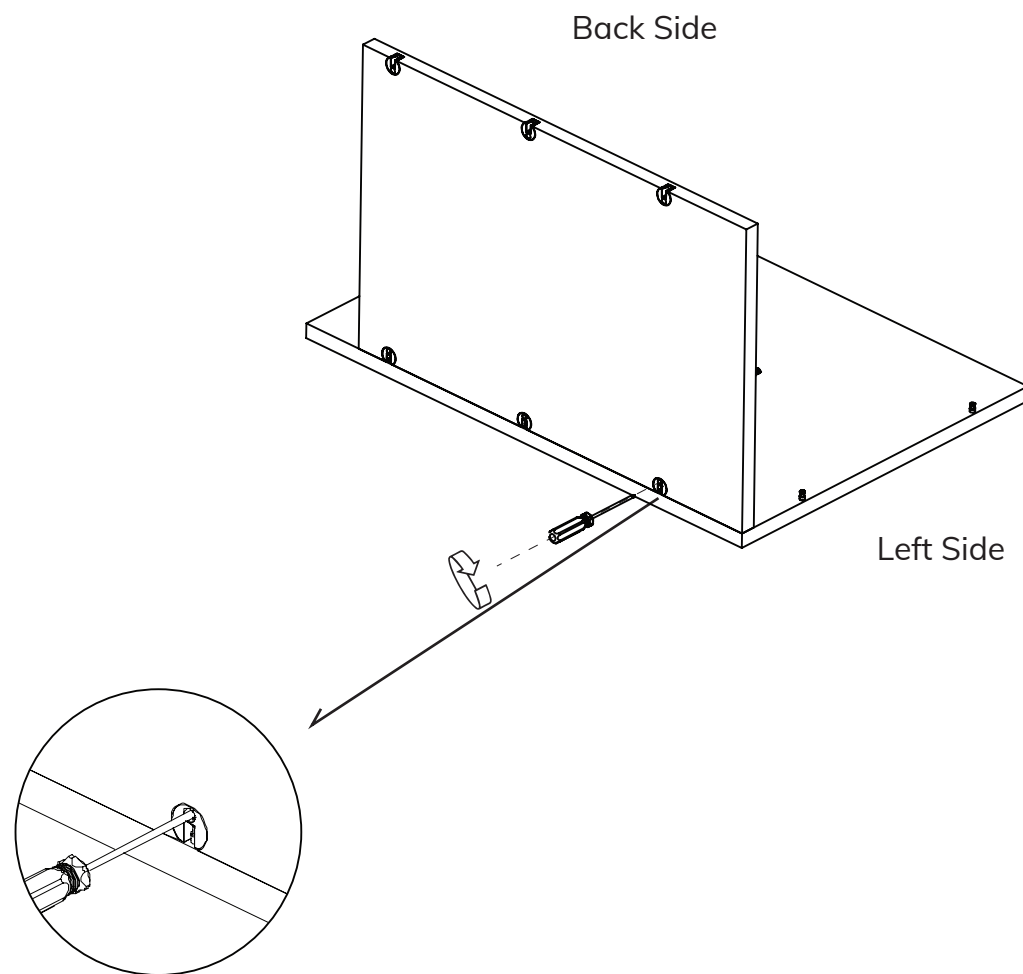


Step 06

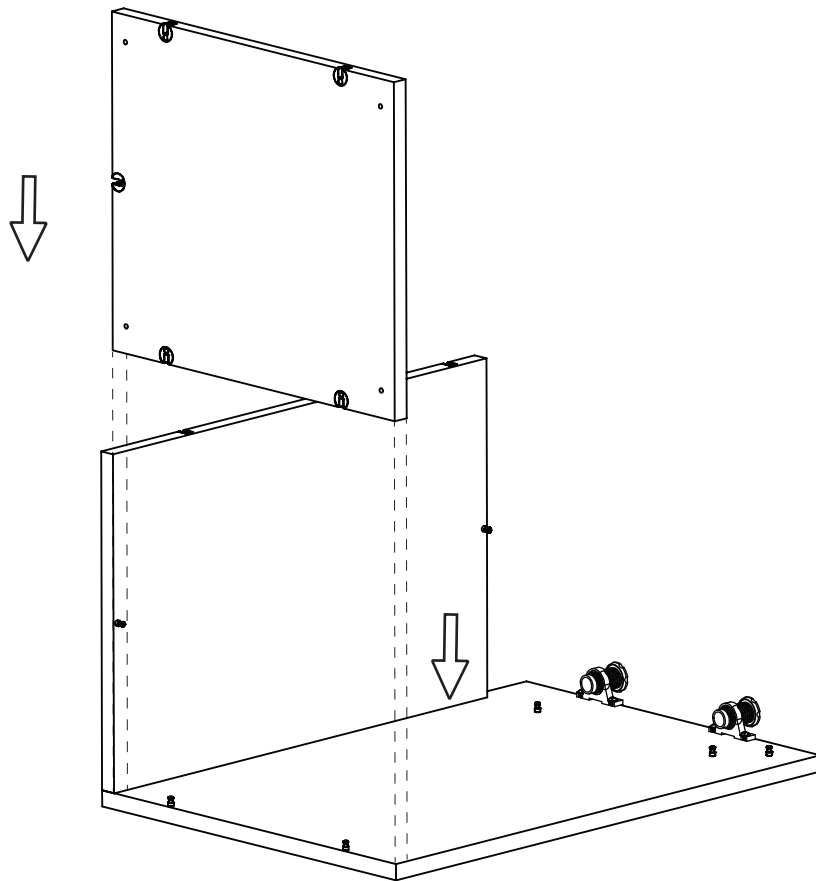


Step 07

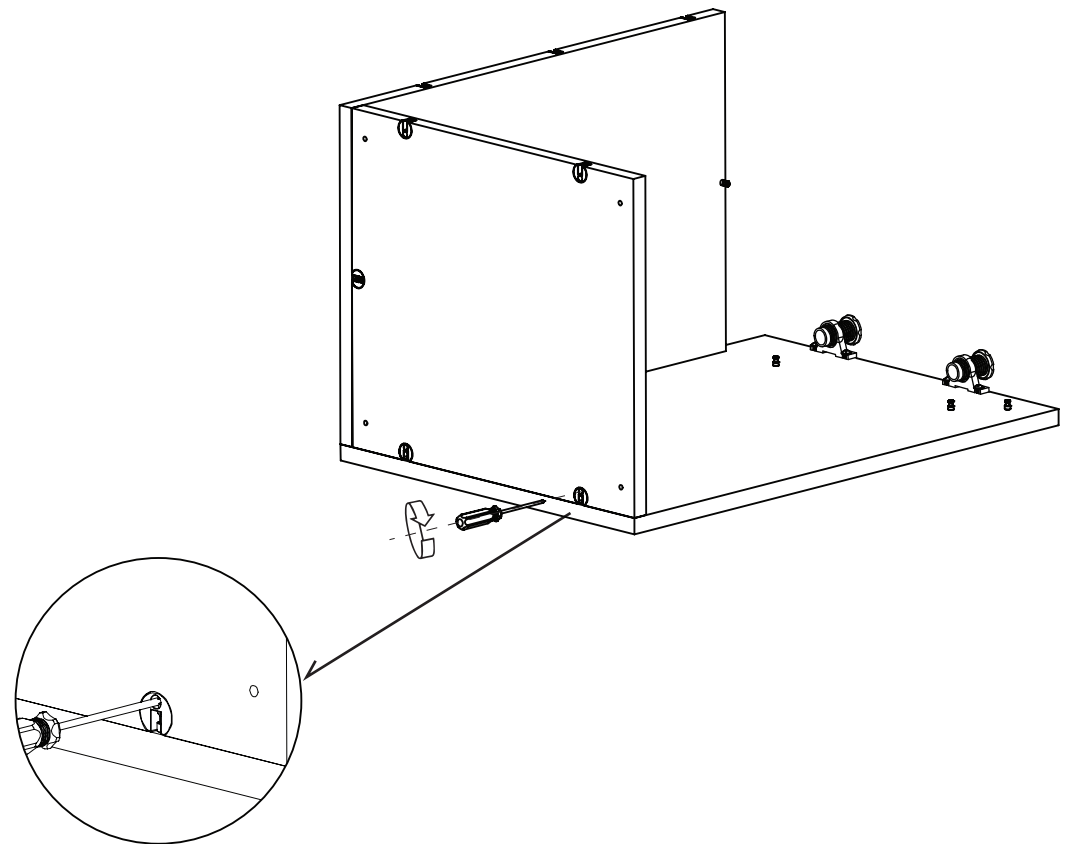


Step 08

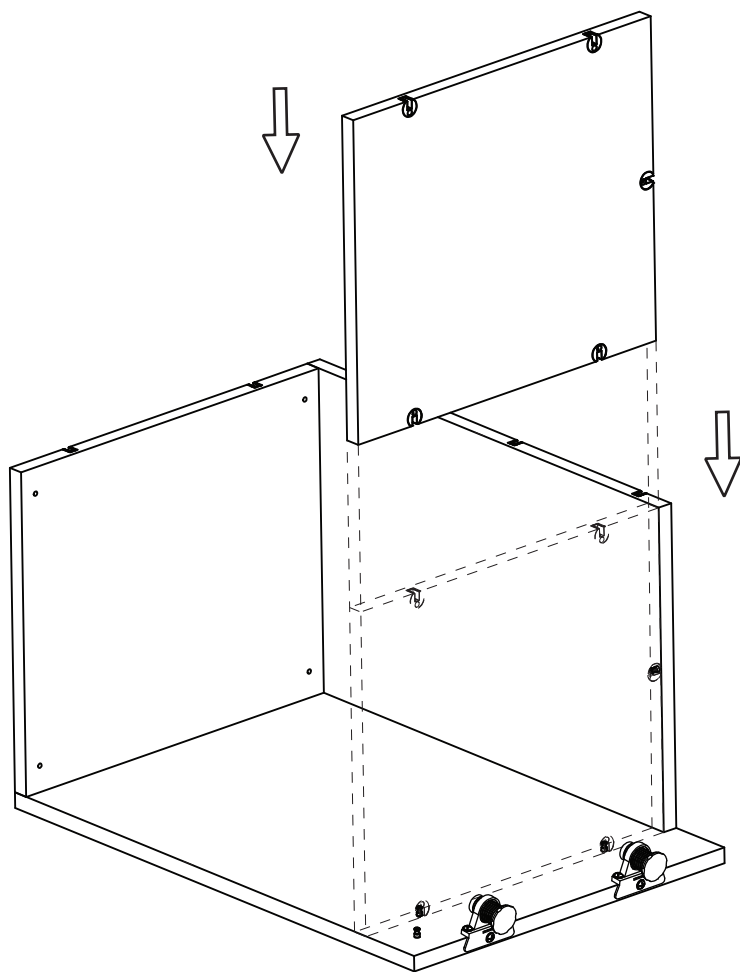


Step 9

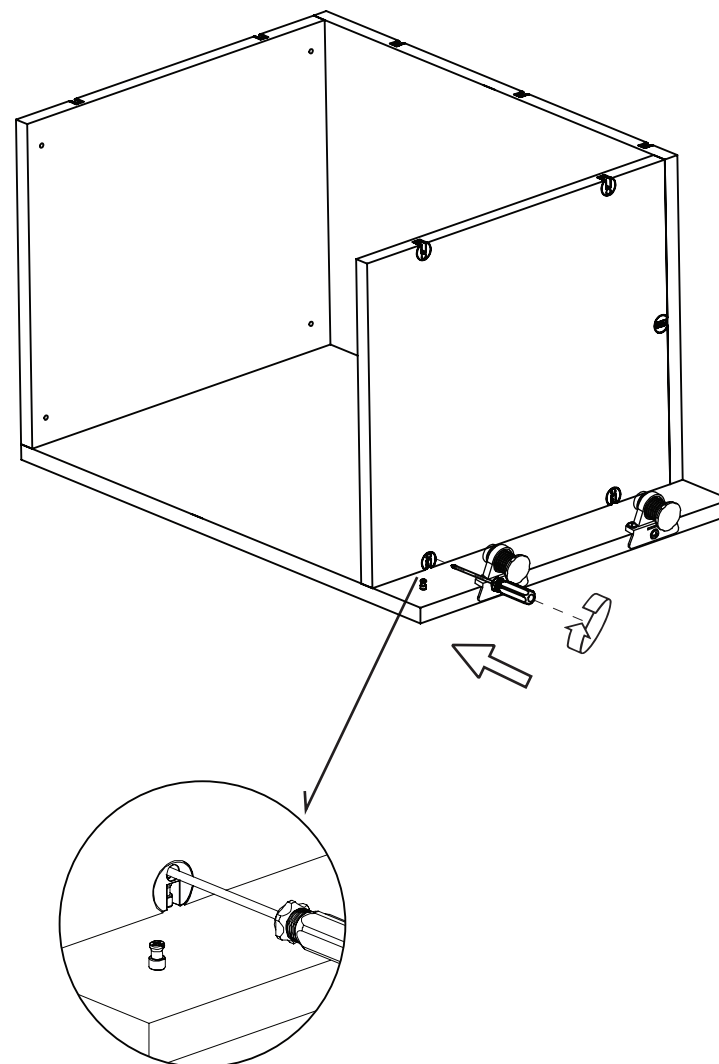


Step 10

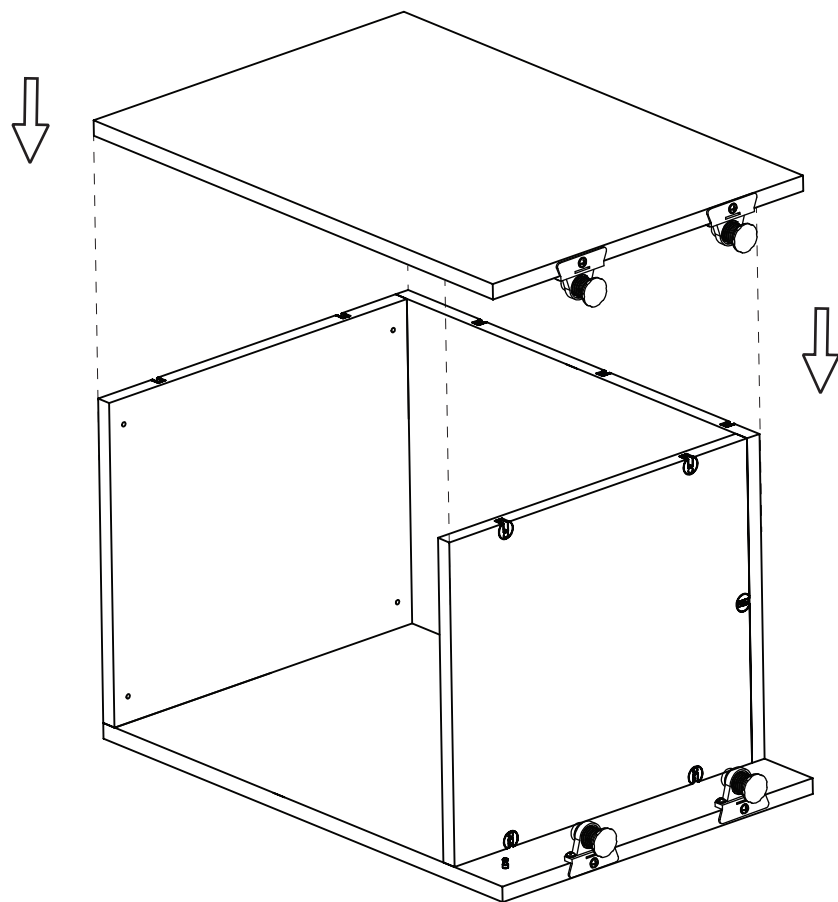


Step 11

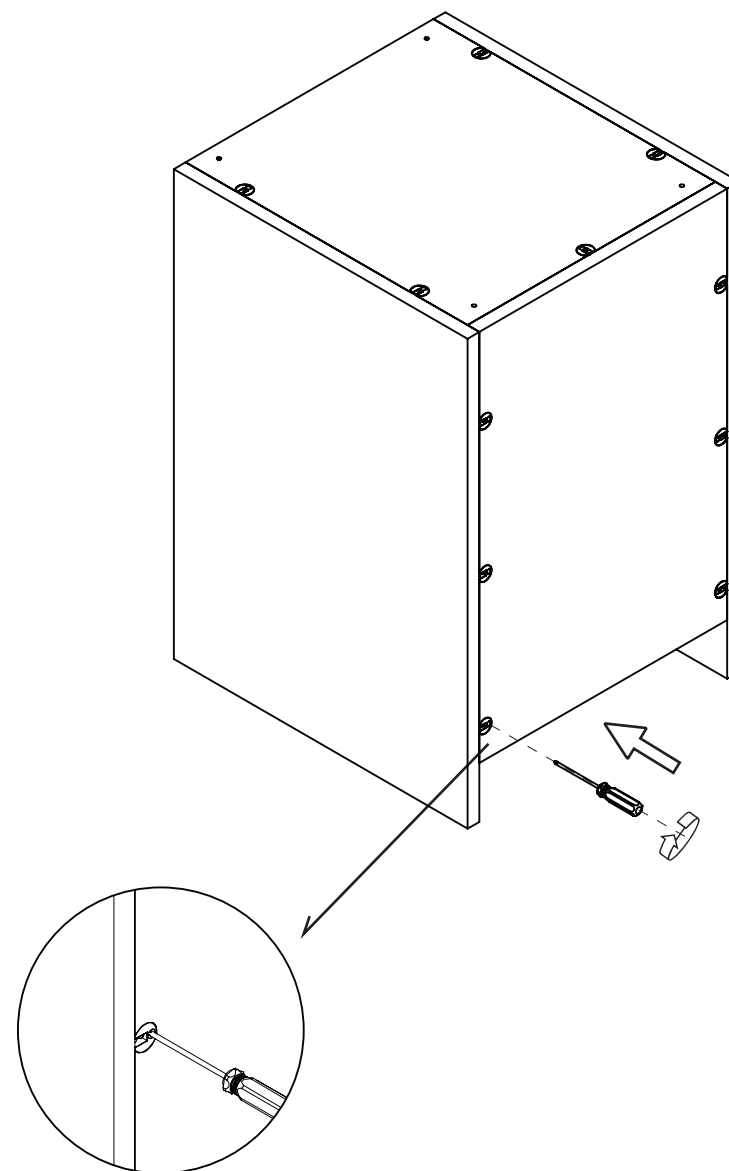


Step 12

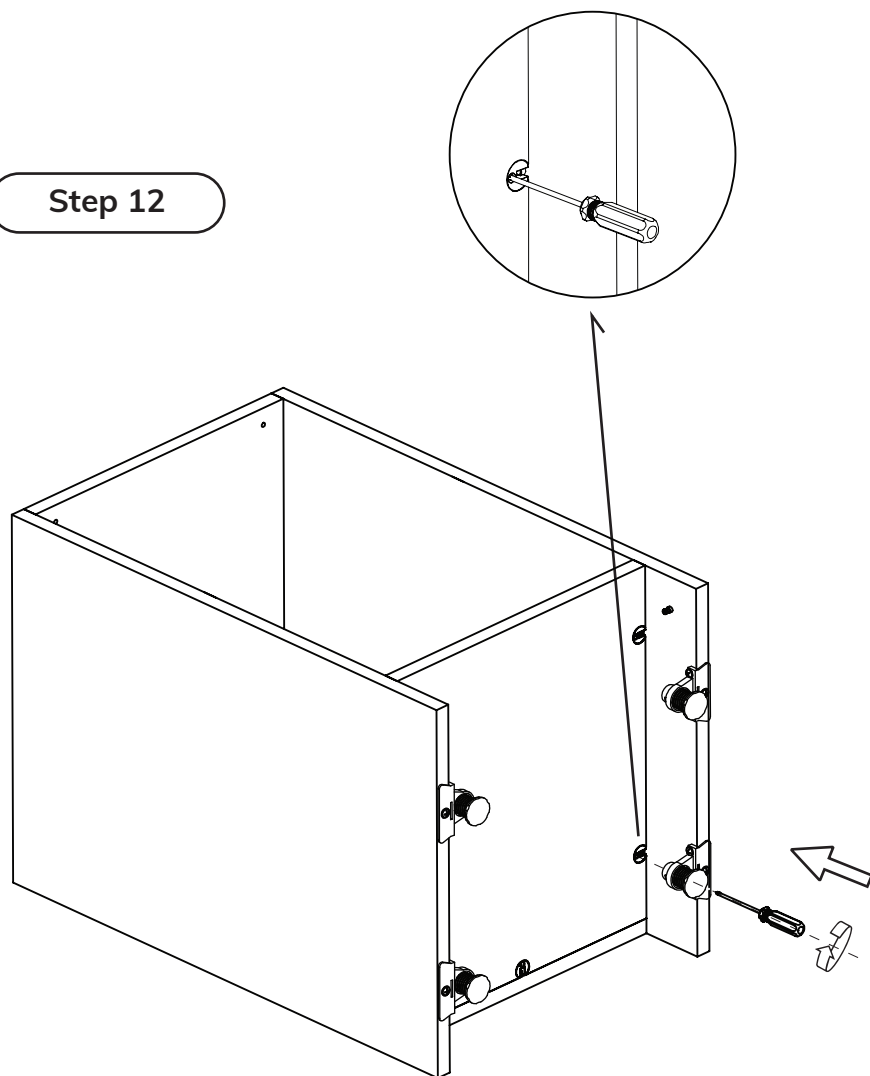


Step 13

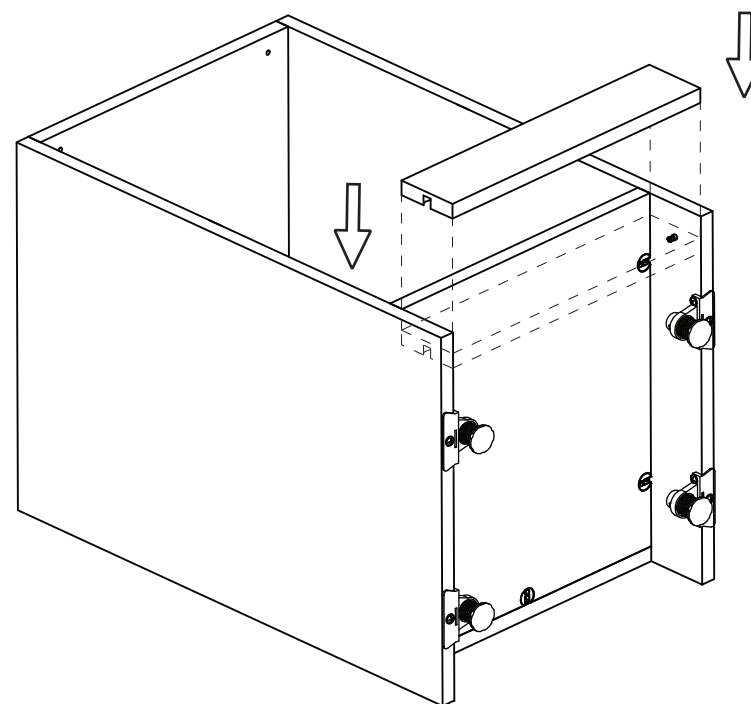


Step 14

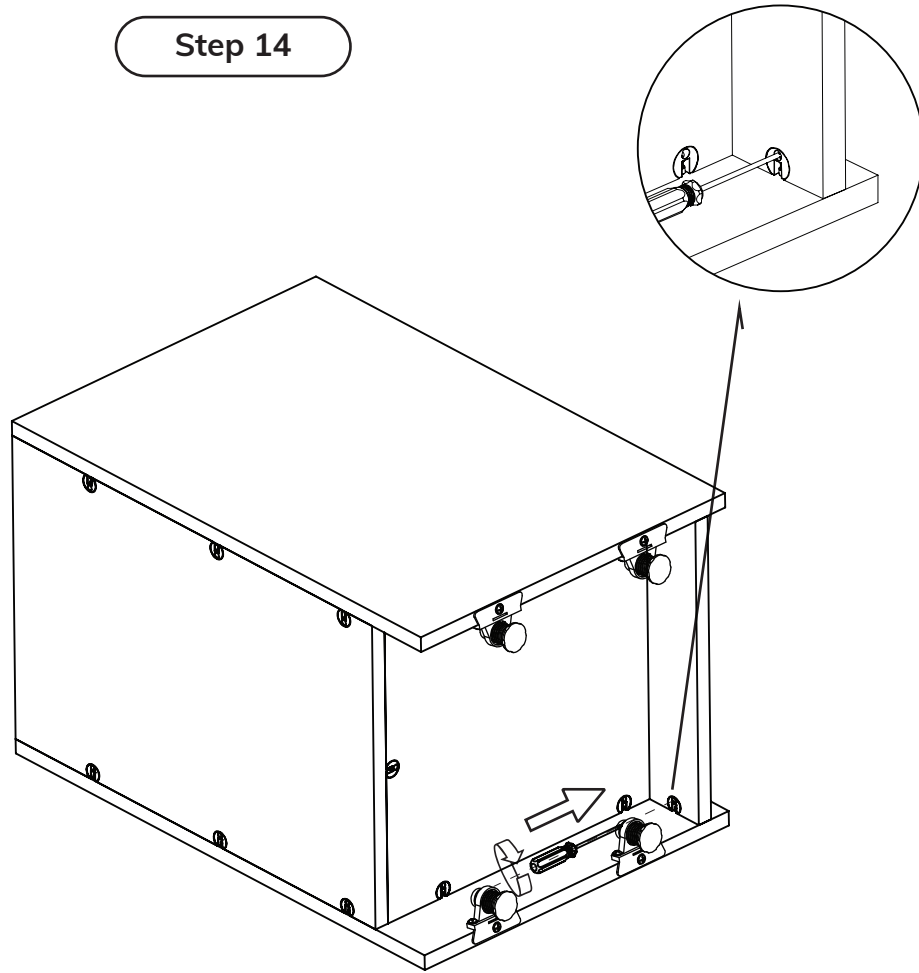


Step 15

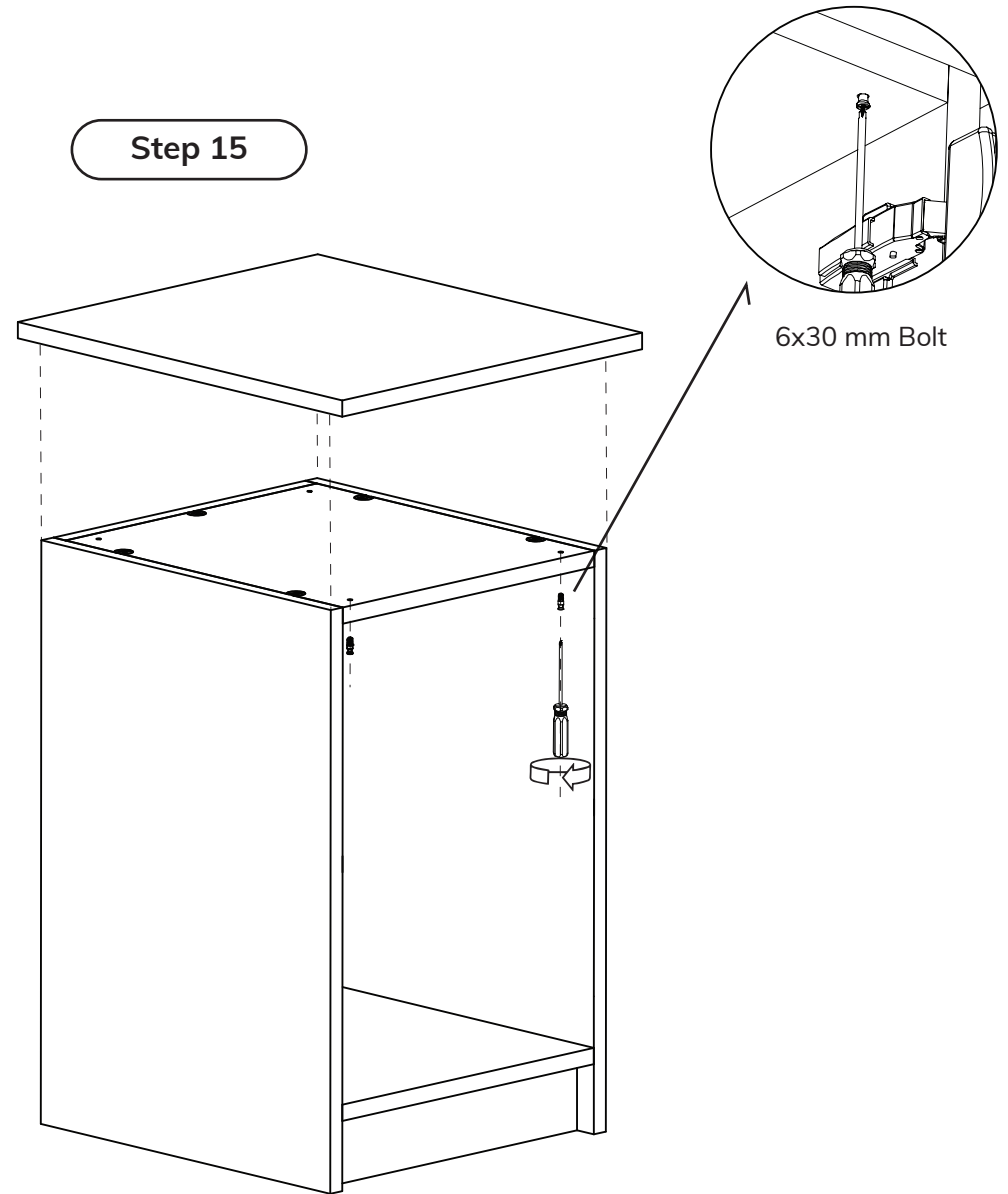

Step 16

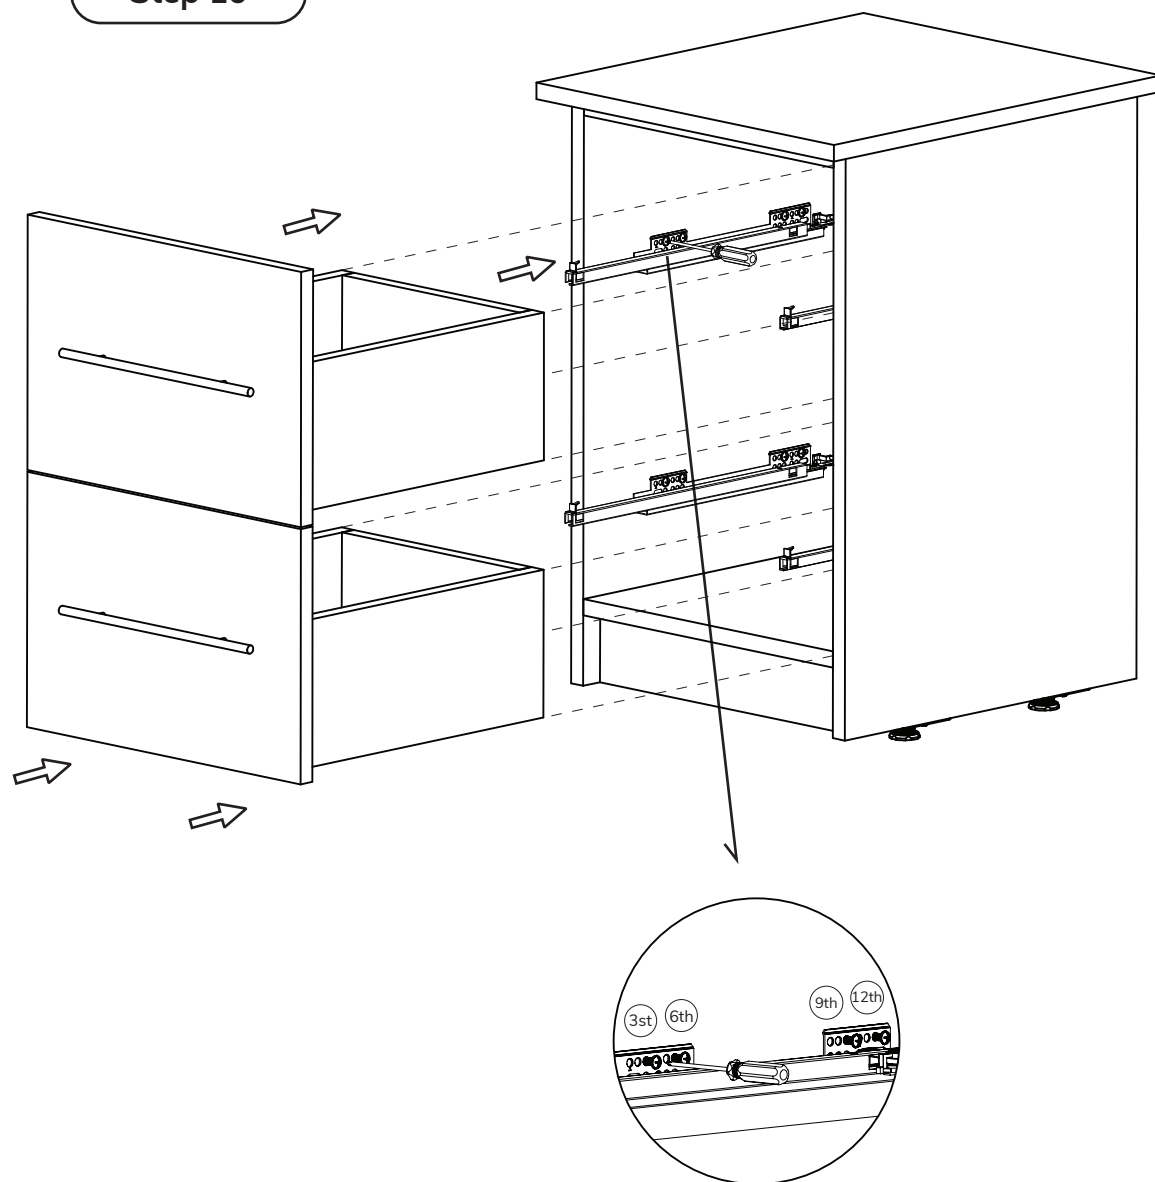

Step 17

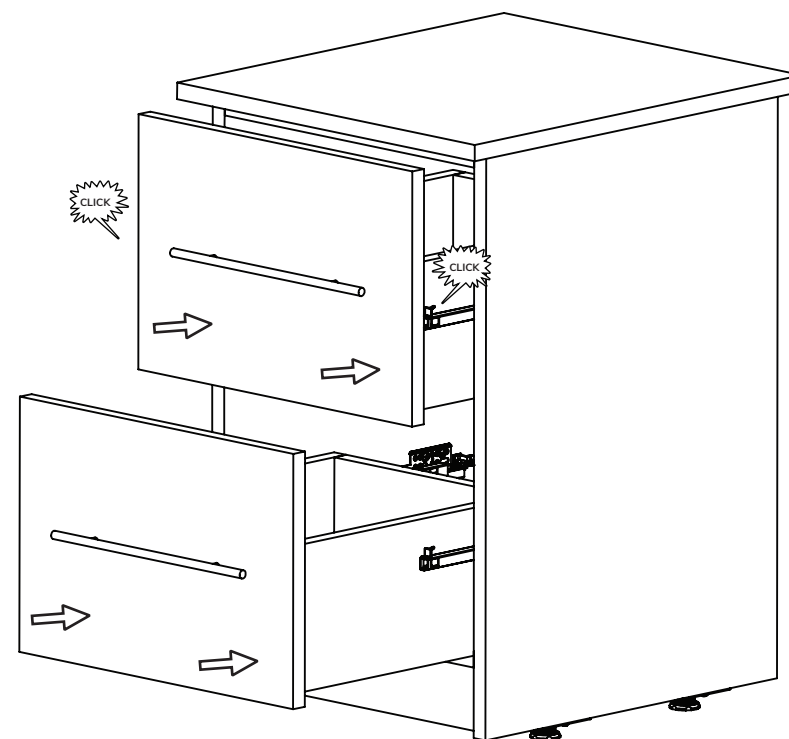

Base Cabinet | Instruction Manual

© 2020 Pb Design Studio.