




BASE CABINET ASSEMBLY INSTRUCTIONS.

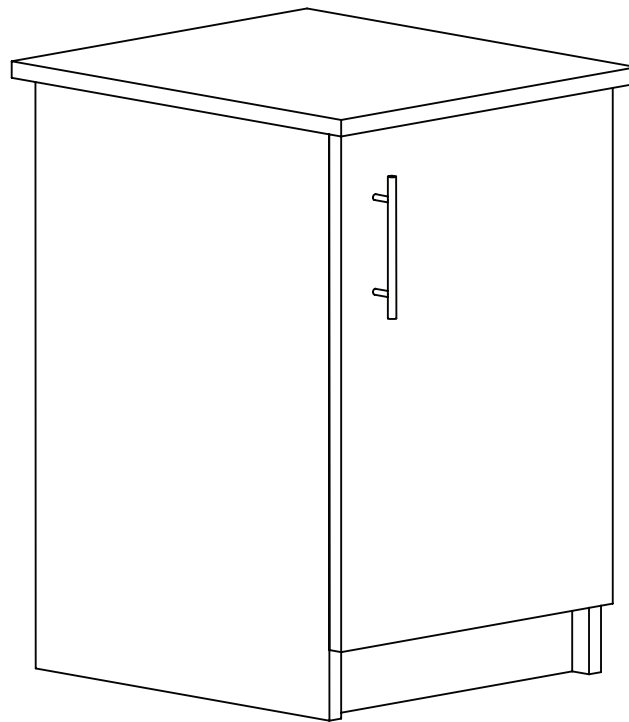


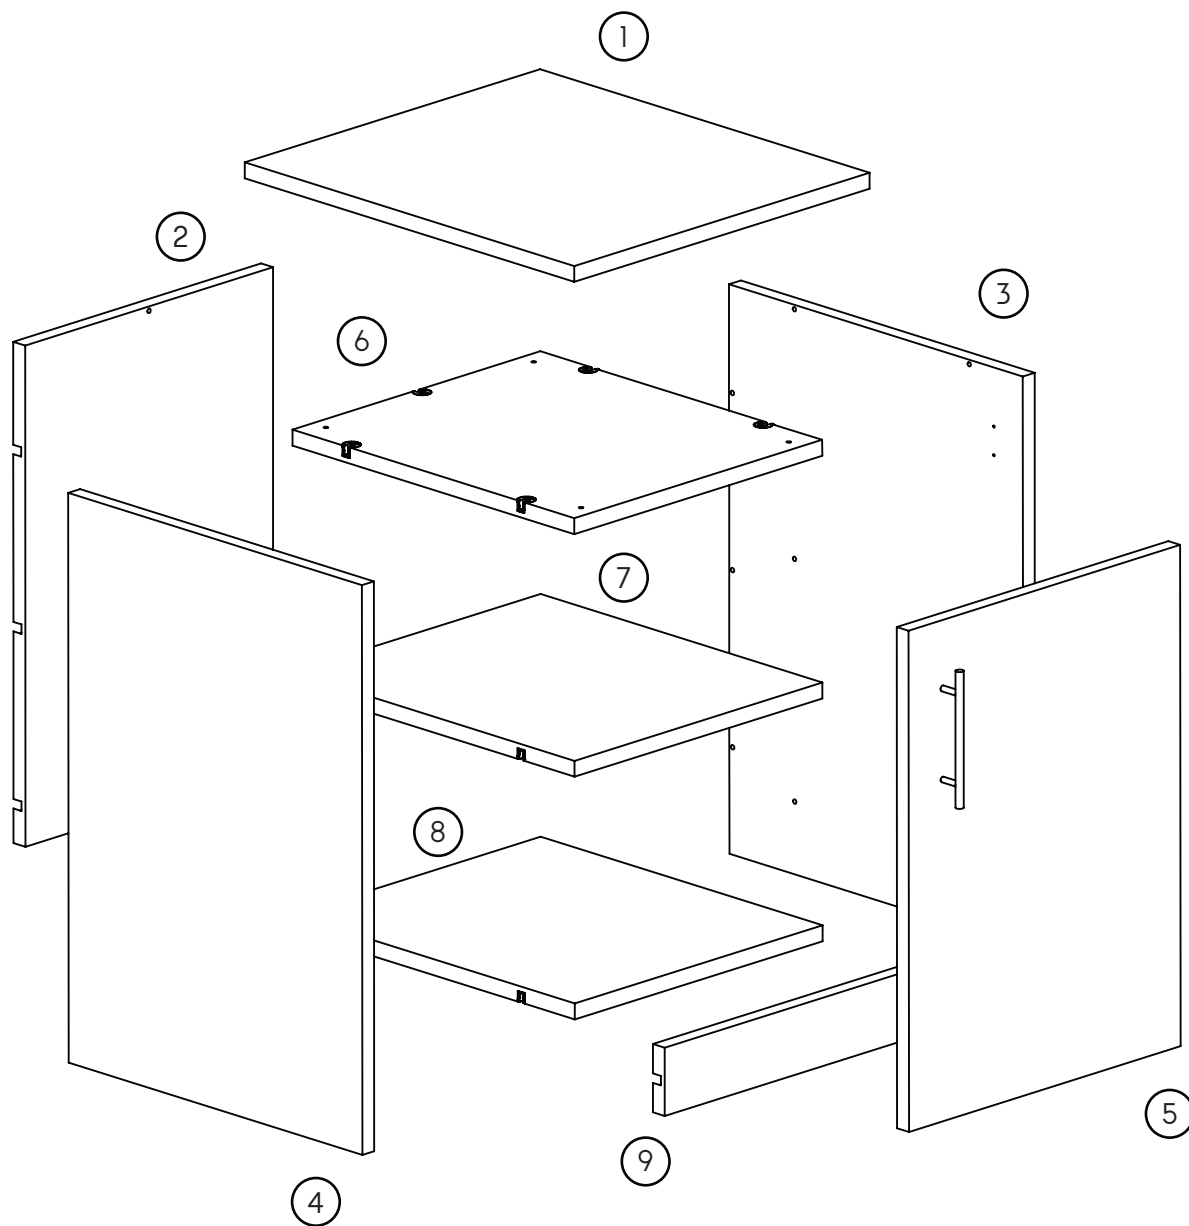


Parts



Tools




Step 01

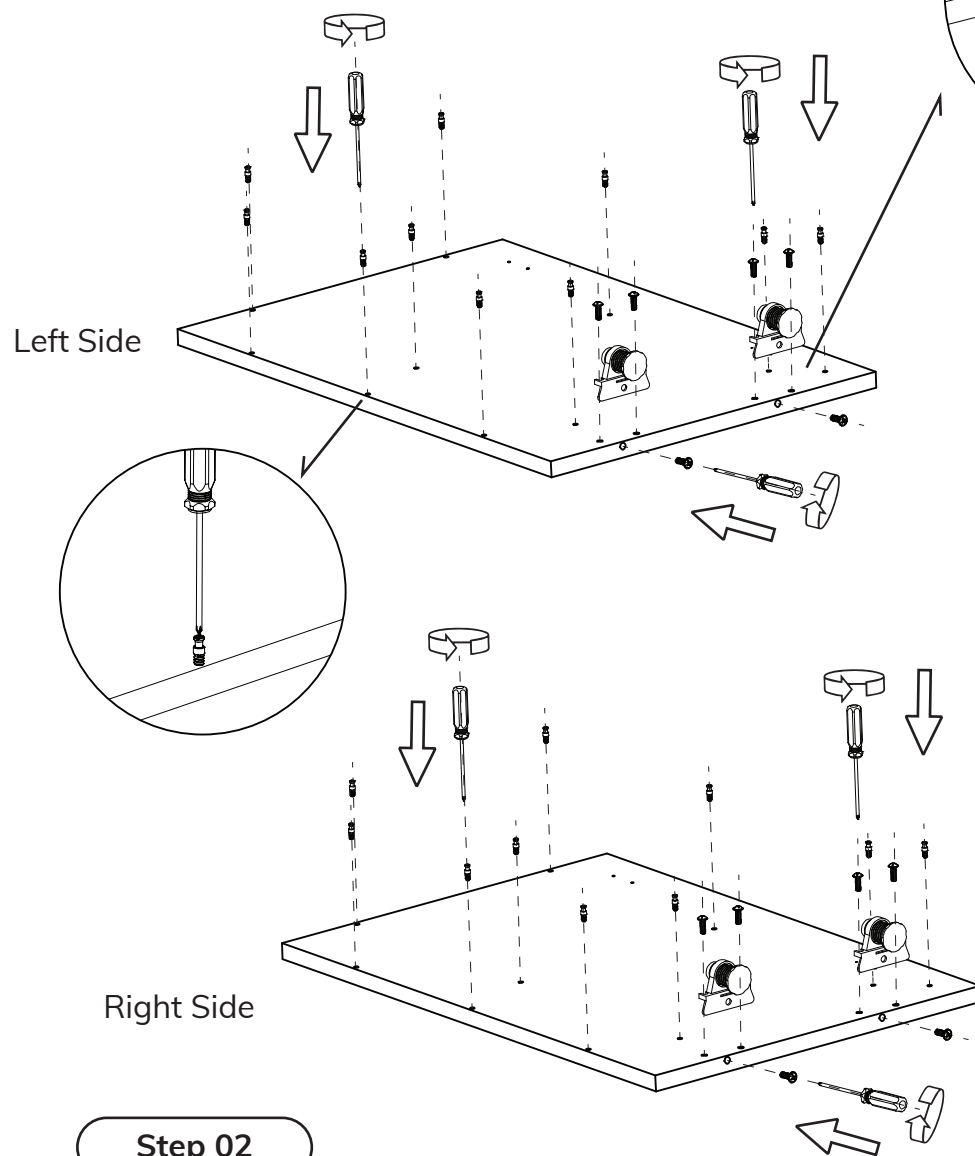


Step 1:
Hammer the
Leg in first

Step 2:
Screw it in
place


Step 03

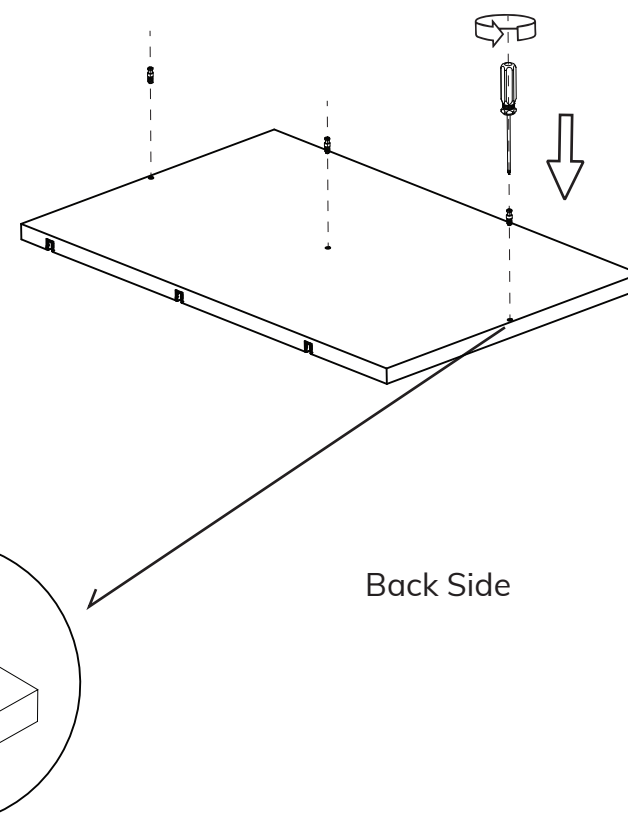


Step 04

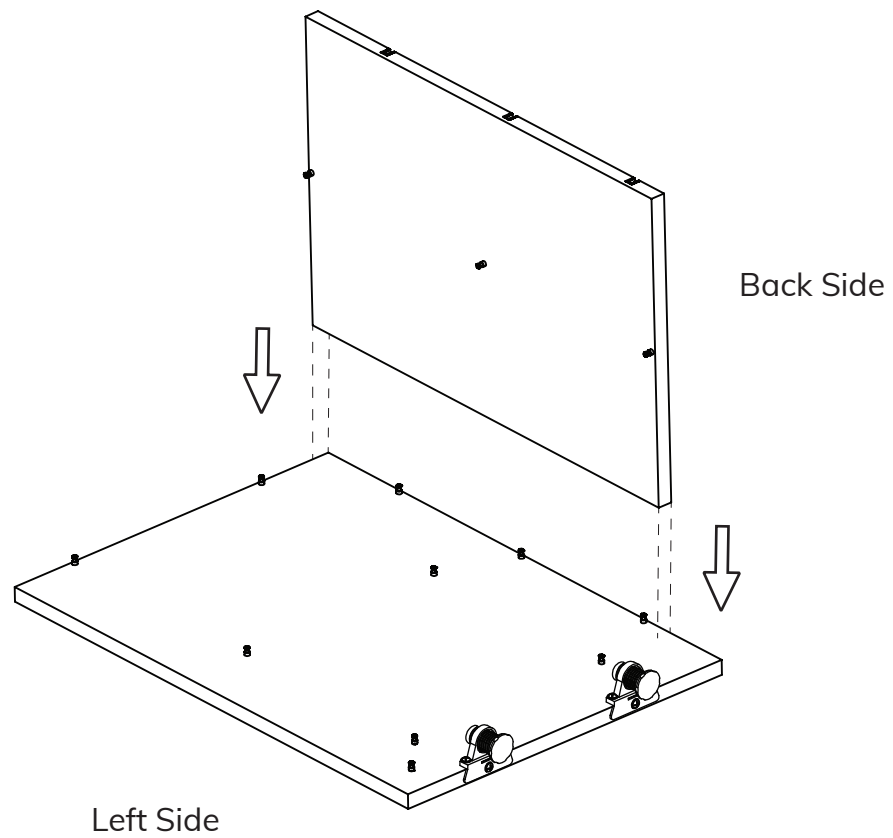


Step 05

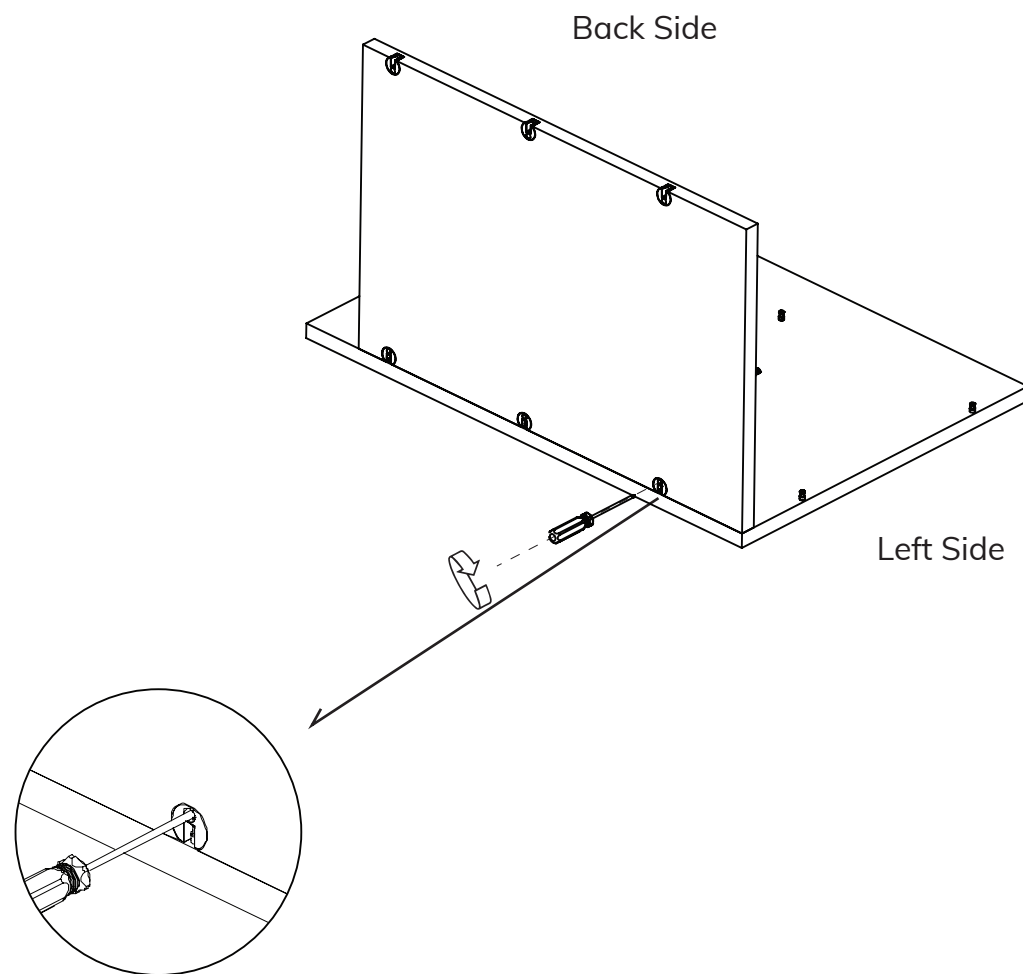


Step 06

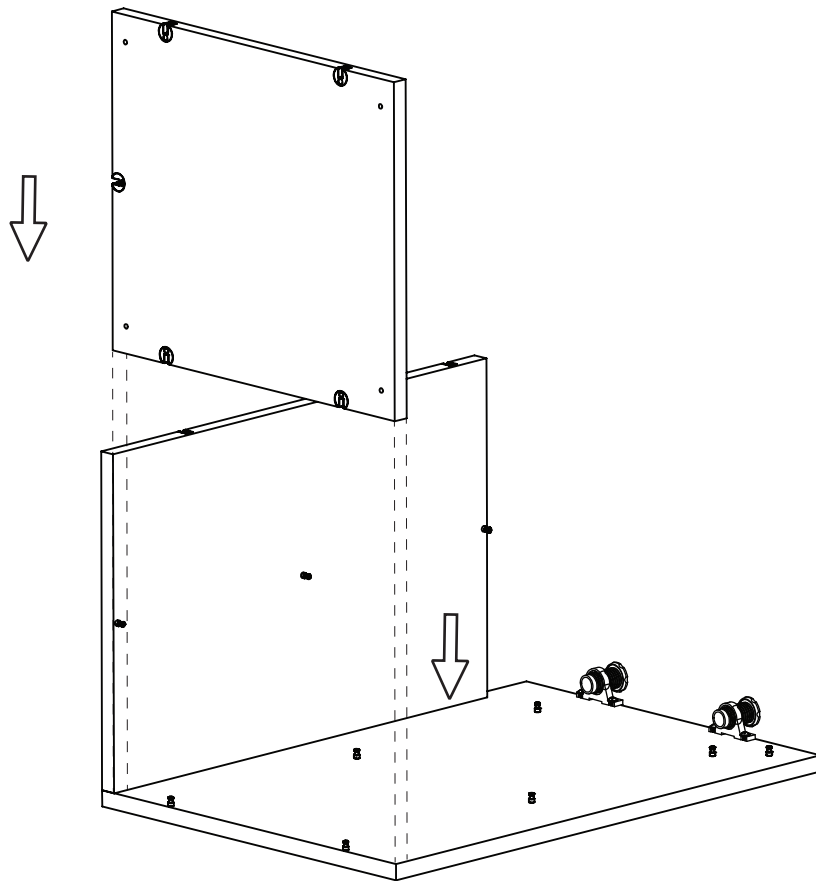


Step 07

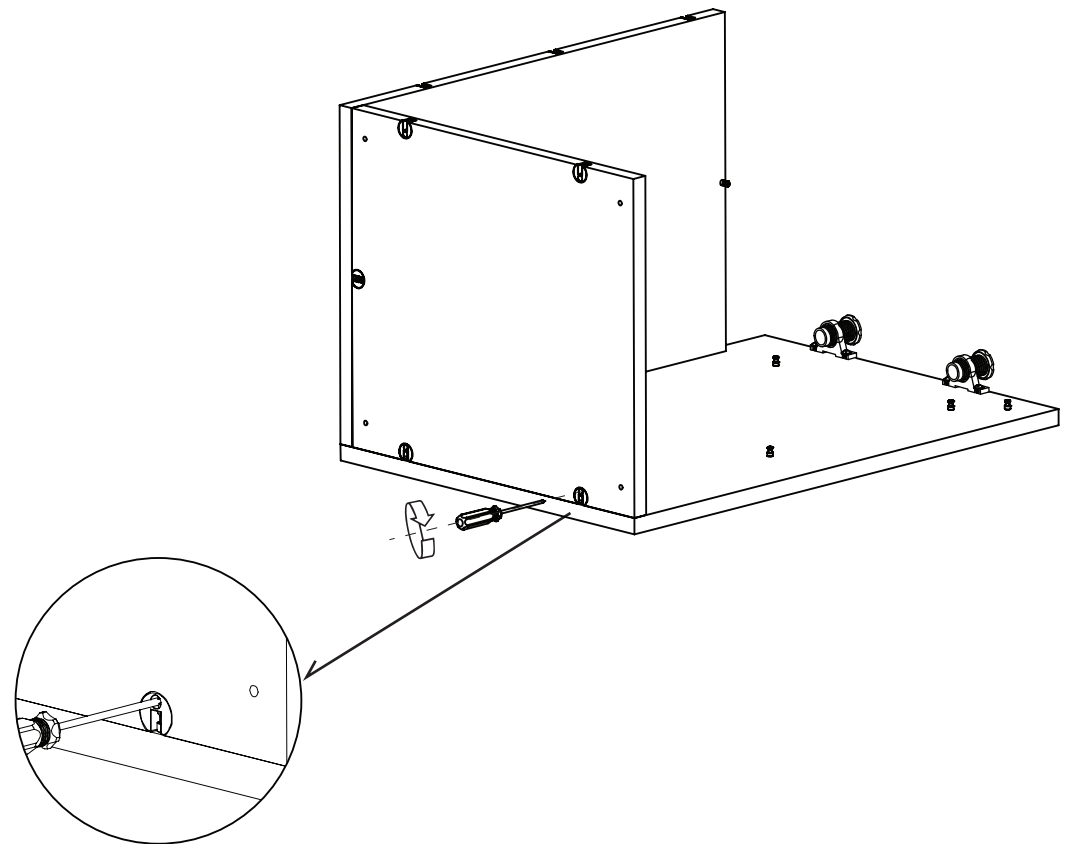


Step 08

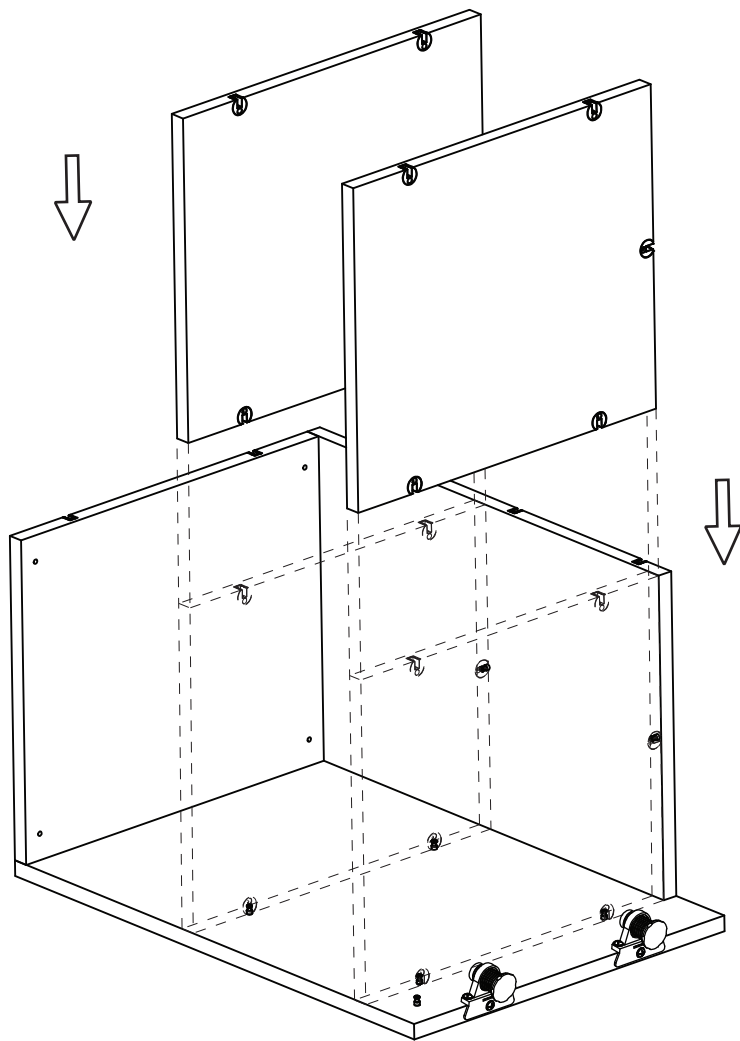


Step 9

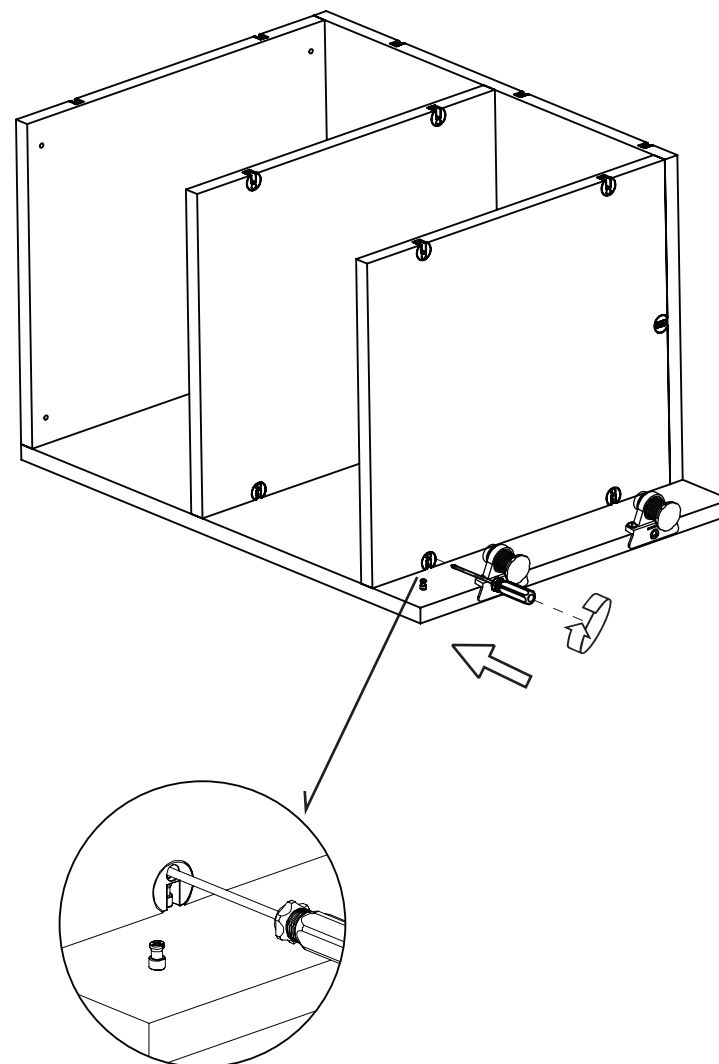


Step 10

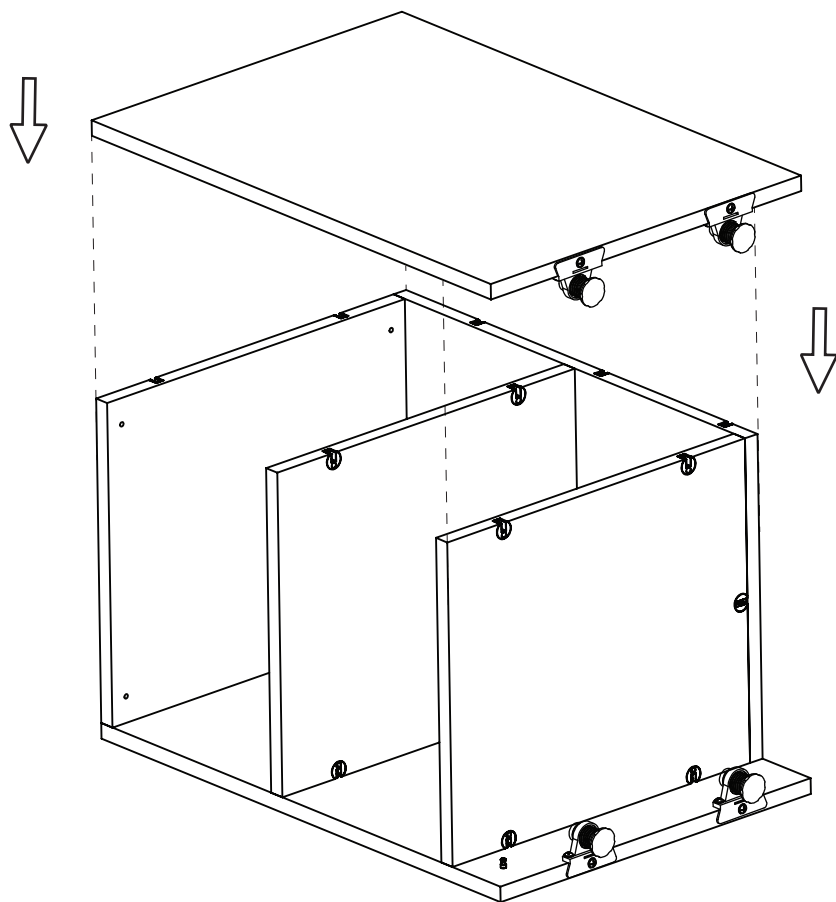


Step 11

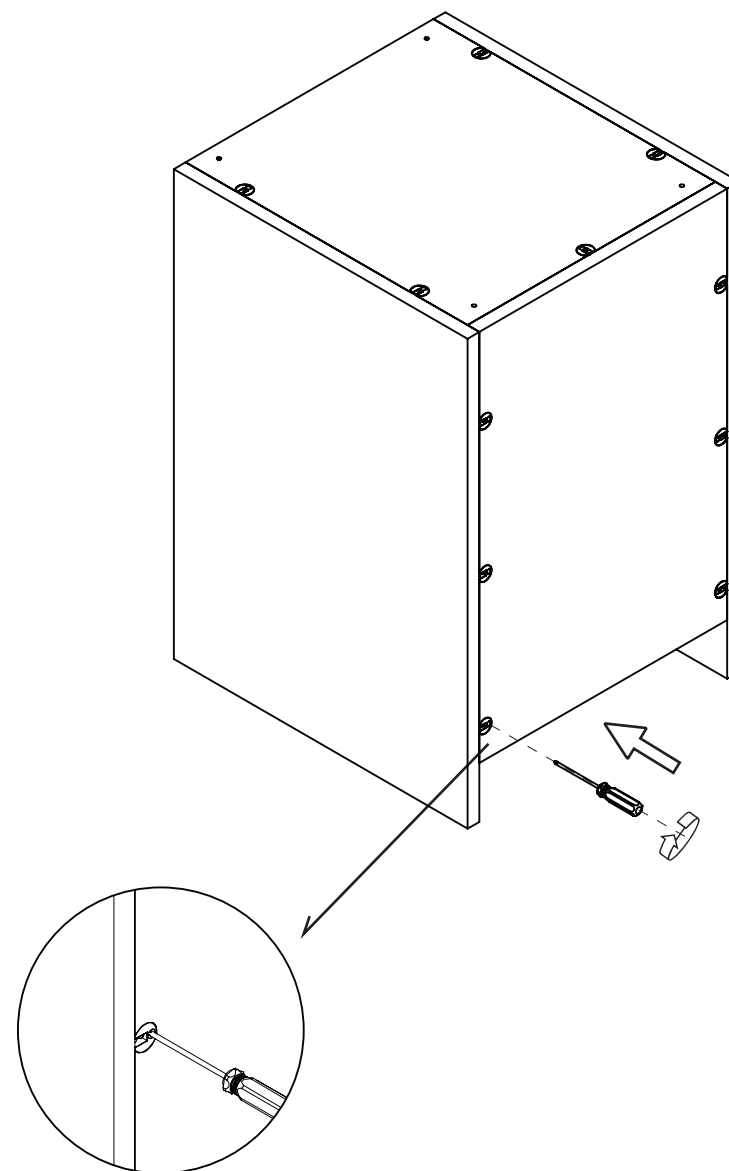


Step 12

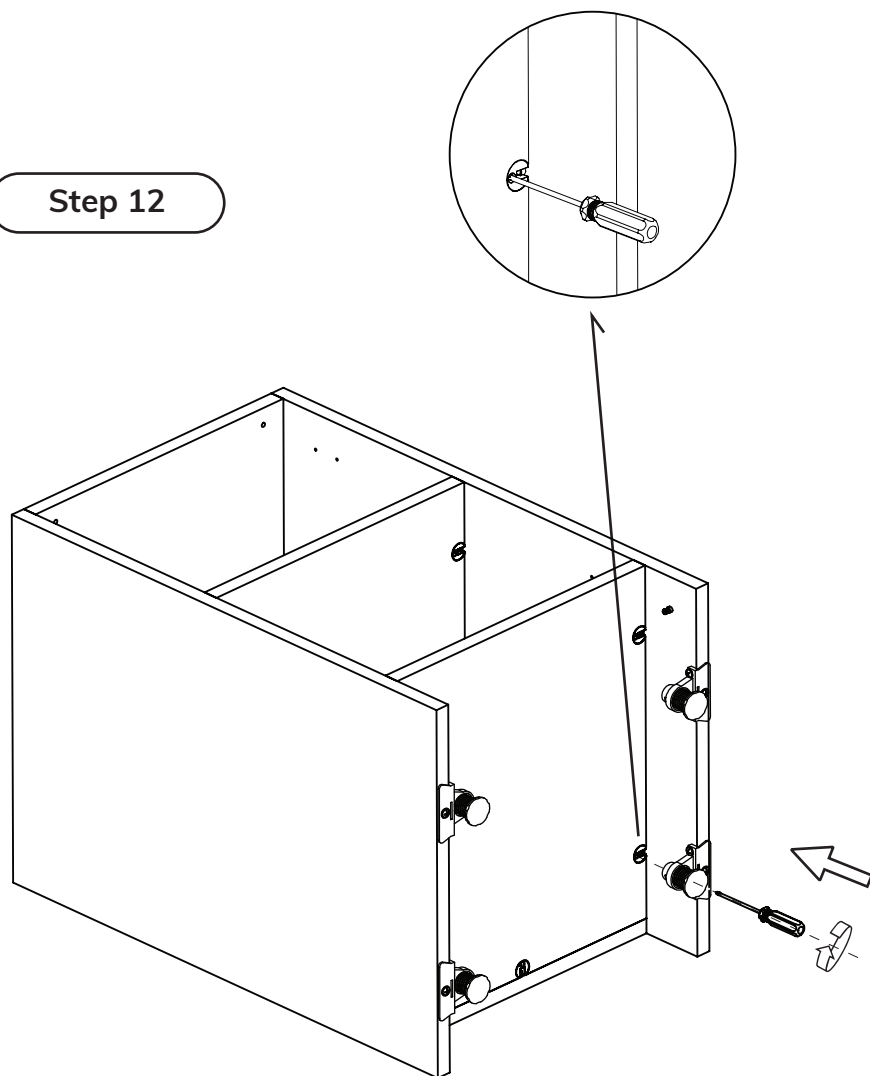


Step 13

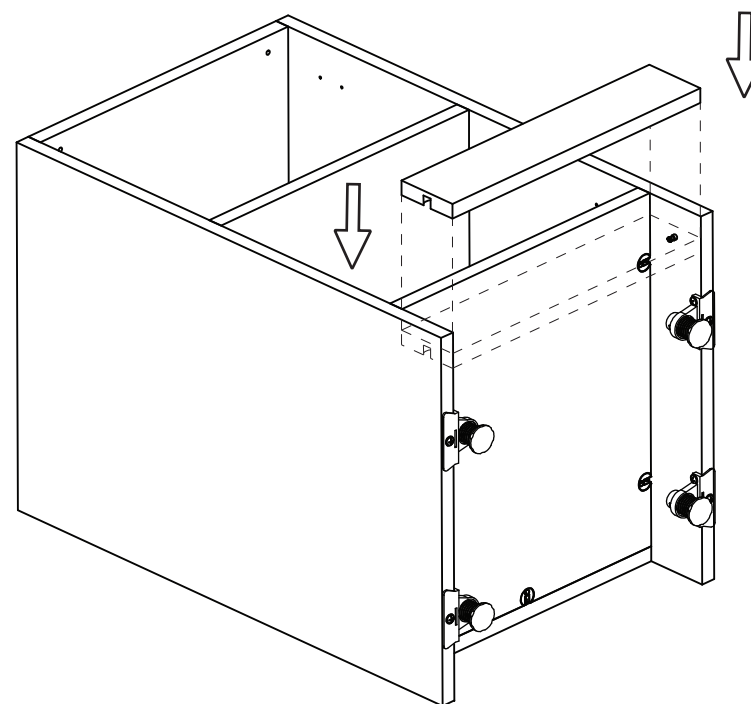


Step 14

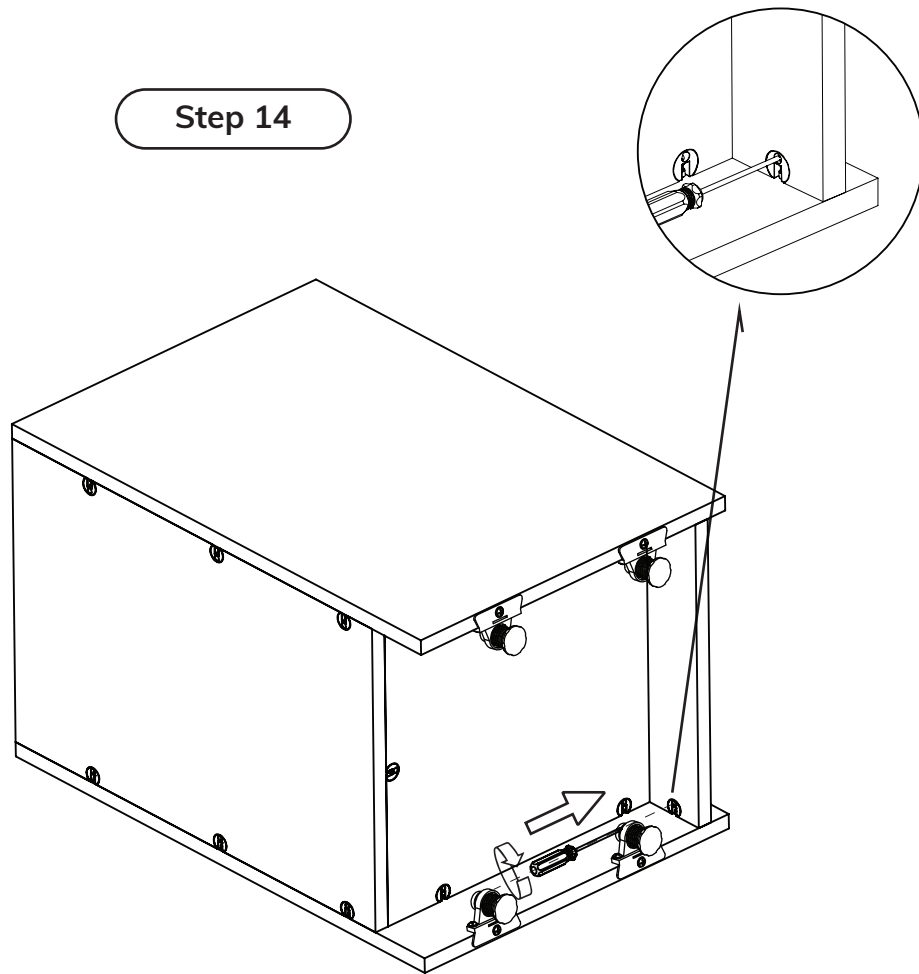


Step 15

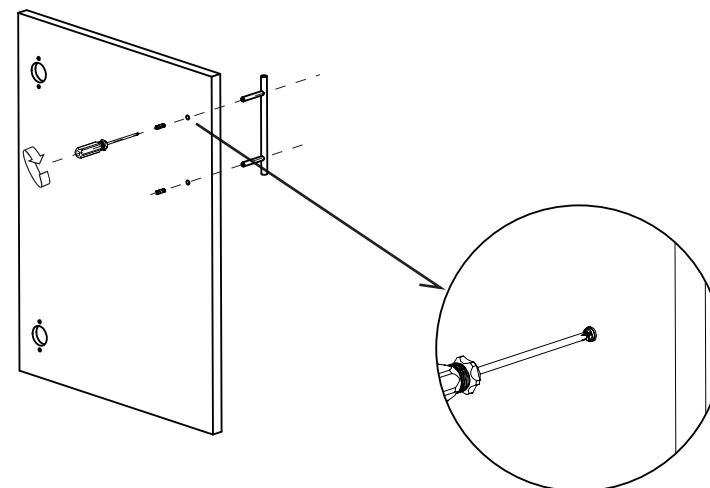


Step 16

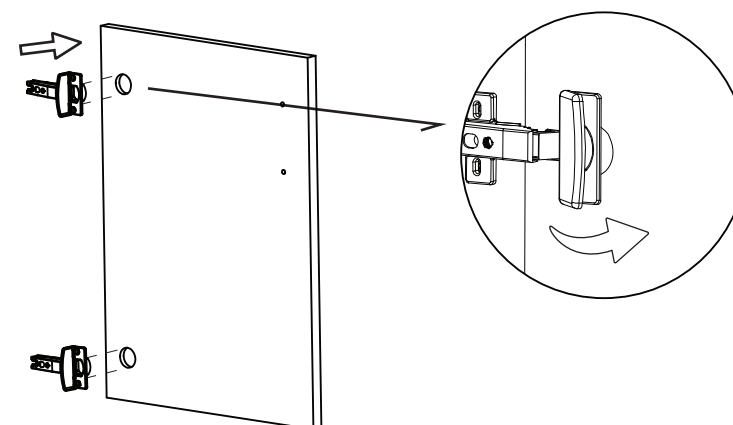

Step 17

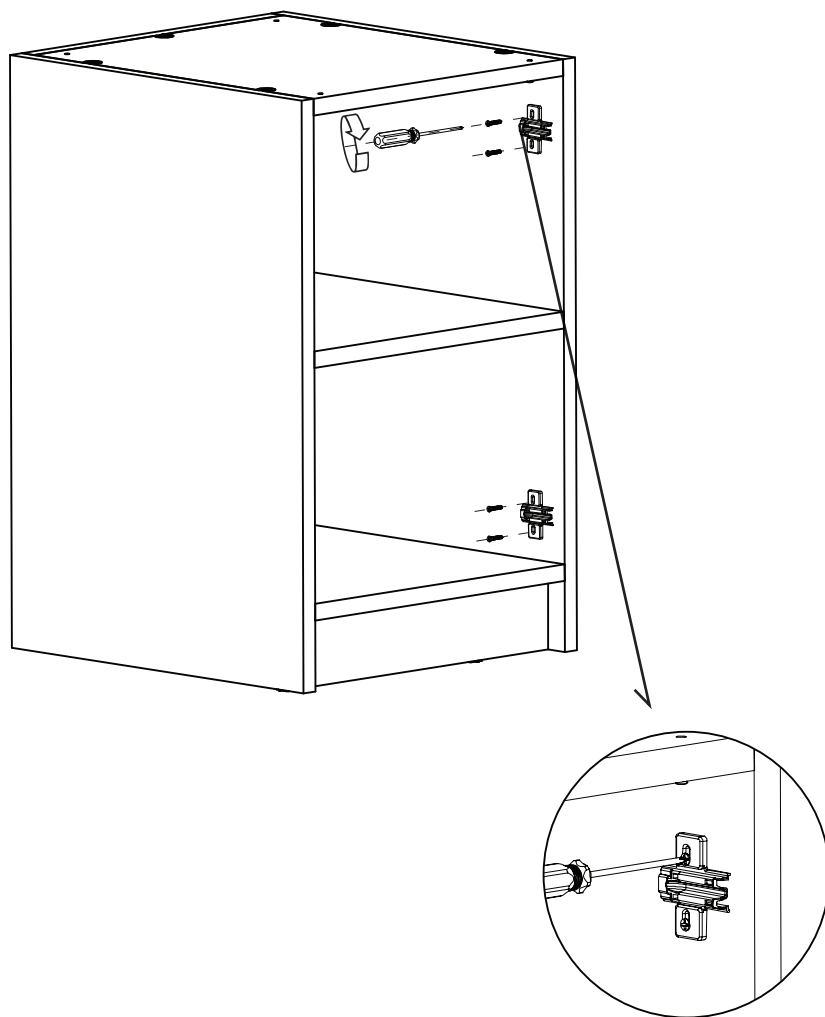


Step 18

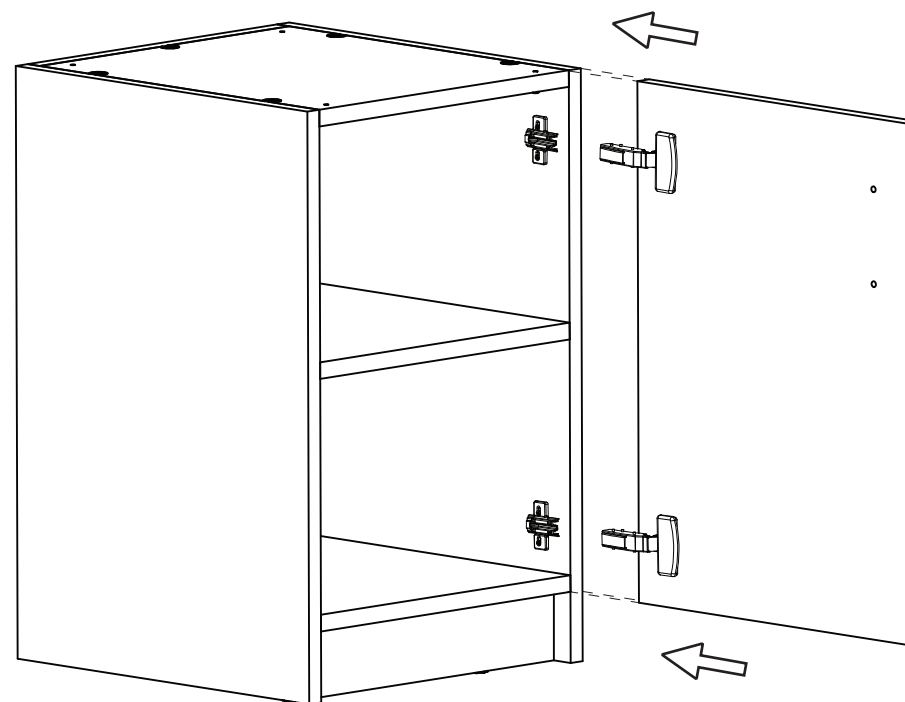


Step : Attaching the Door


Step 1

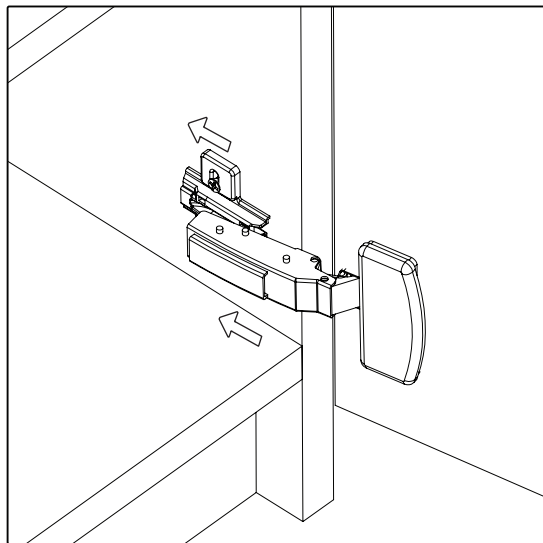

Step 2

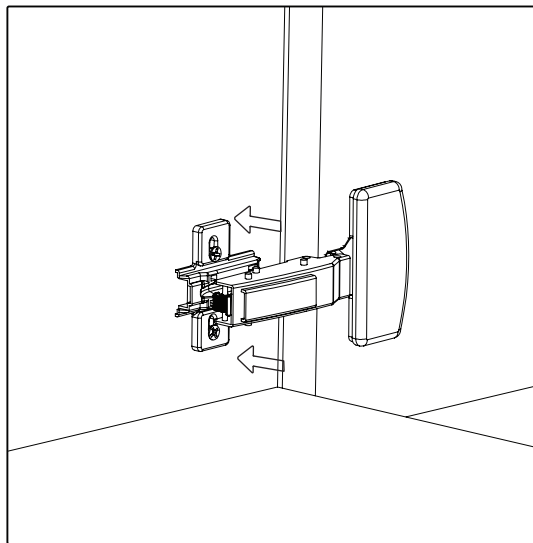


To remove the Door

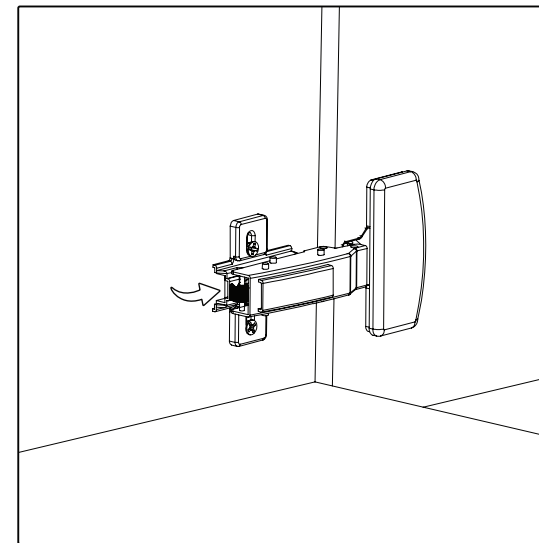


Step : Door Adjustment


Step 1

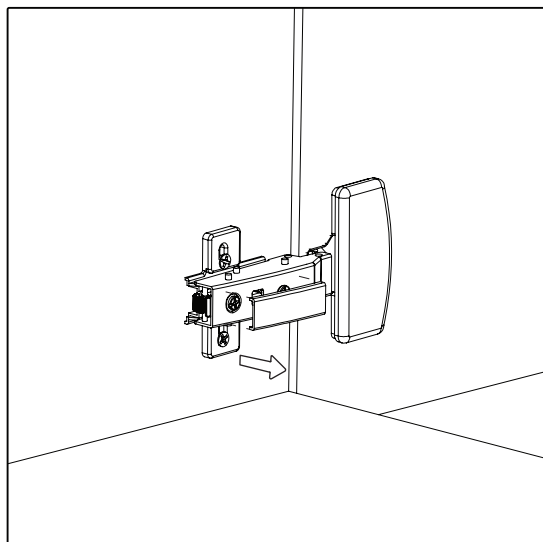


Step 2

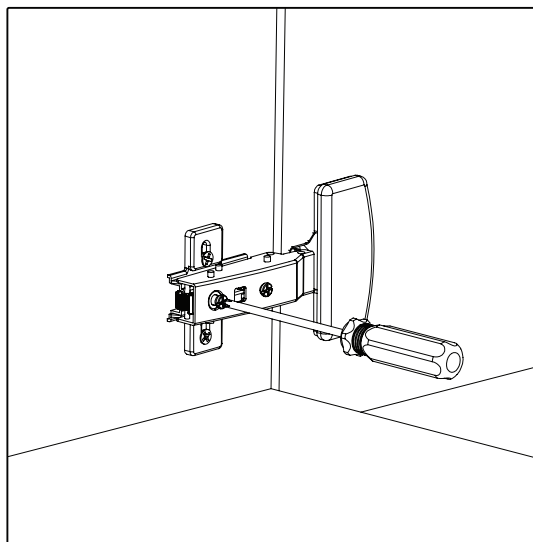

Step 3

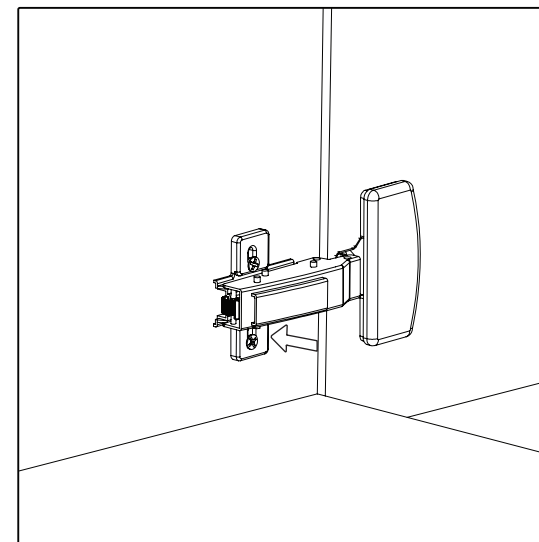

Step 19

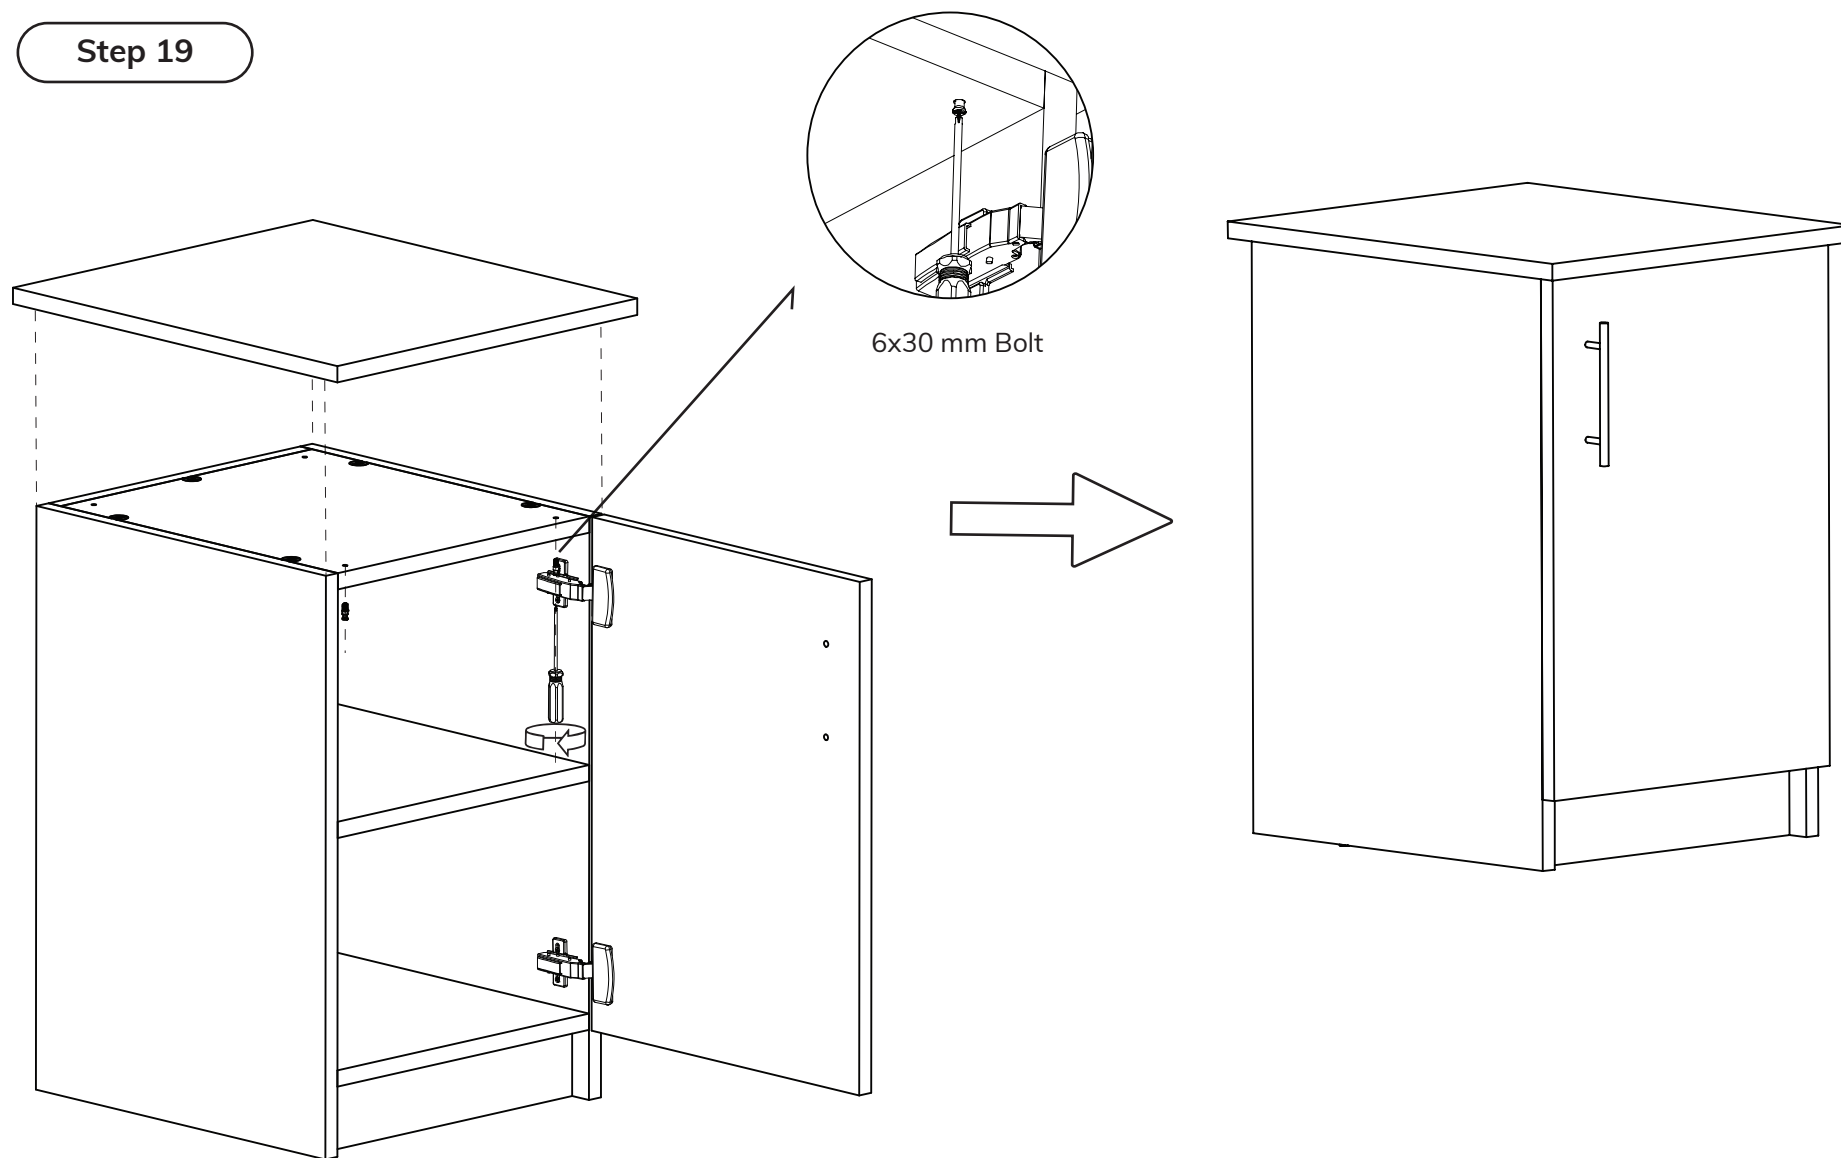

Base Cabinet | Instruction Manual

© 2020 Pb Design Studio.