

FLAT TOP

TOYOTA HILUX N80 Strut Fitting Instructions



1. Remove bar



2. Lay upside down on foam
remove brackets




3. Thread brackets



4. Attach to underside of infil mouldings (bolt on)



5. Lay foam tape across front edge of infil to sit on and seal

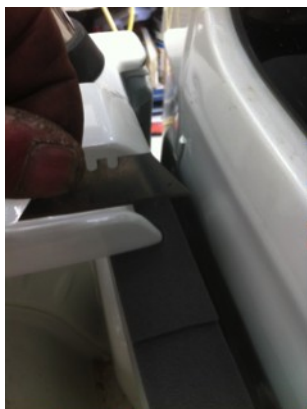

6. Trim foam



7. Replace infil with
bar attached



8. Tighten brackets when
in position

TOYOTA HILUX N80 Strut Fitting Instructions



9. Remove bar



10. Lay upside down on foam remove brackets



11. Thread brackets



12. Mount female hinge



13. Assemble Hinge on tub



14. Reposition lid and secure lid with 8x ss bolts, lightly tighten



15. Attach pin retainer /locator Button.

- Once the lid is all lined up the bolts can be tighten
- Make sure the infil edges line up to the lid on the outside of Tub
- Make sure there is NO rubbing by off centre lid
- Struts and Locking mechanism can now be attached

SEE SEPARATE GENERIC POWER STRUT INSTRUCTION