



## Assembly Guidelines

1. Attach the upper harness bar brackets to the mount base using the four black counter sunk screws provided and tighten using the 3/32" hex key.

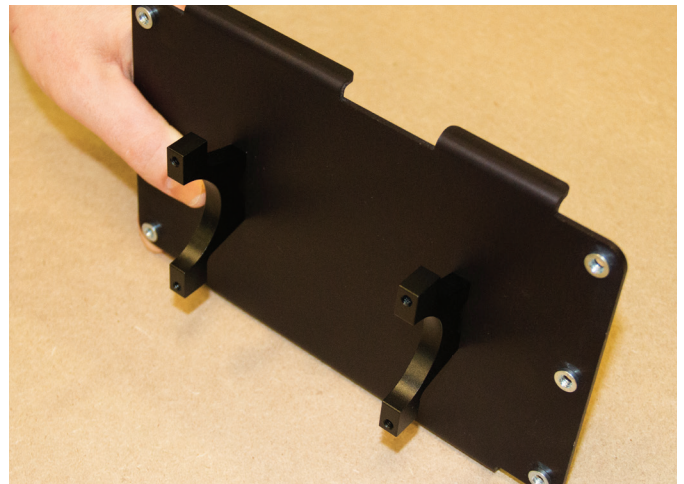

2. Place the **VIDEO VBOX HD2** on the mount base and secure by attaching the upper half of the mount using the six button head screws and the 3mm hex key.

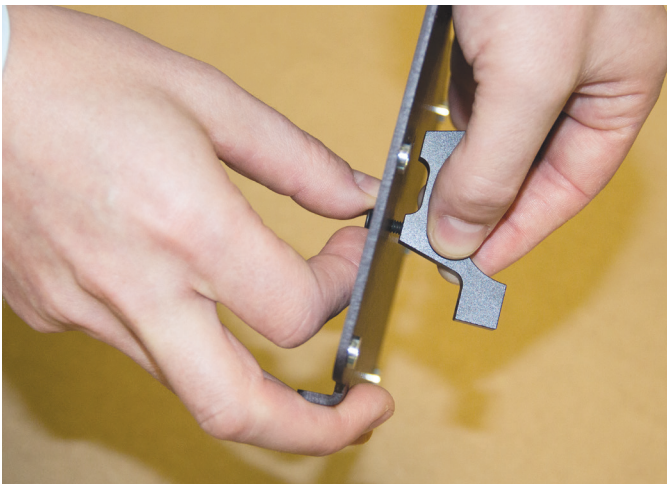

3. Ensure the **VIDEO VBOX HD2** is straight and mounted securely.




# VBOX VIDEO HD2 Mounting

## Bracket Assembly Guide (ACS268-ASSEM)

VBOX  
RACELOGIC

4. Place the upper harness bar brackets on the desired vehicle roll cage location and secure using the lower harness bar brackets and the four cap head screws provided. Tighten using the 9/64" hex key.

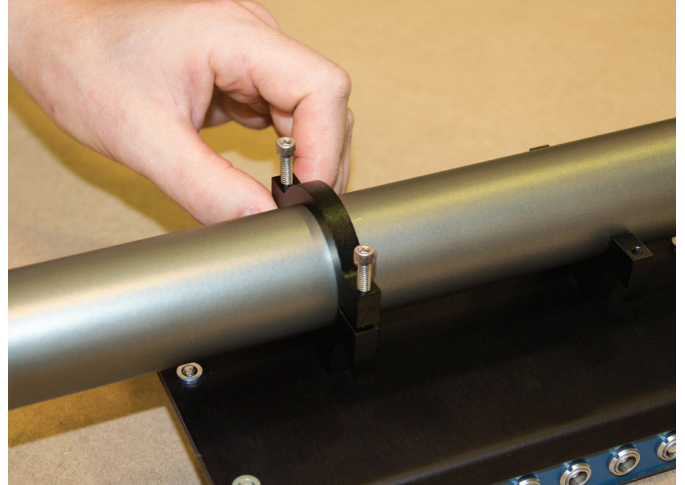

5. Ensure the mount is straight and secure before use.

