

EN RADRUNNER 3 PLUS CENTER KICKSTAND

The RadRunner 3 Plus Center Kickstand is designed to be compatible with the RadRunner 3 Plus, and is not compatible with earlier models.

! Before using this accessory, you **MUST** read and understand all warnings in this document AND the owner's manual that shipped with your ebike. The latest version of these instructions and your owner's manual are available at radpowerbikes.com/help (USA/Canada) or radpowerbikes.eu/help (Europe).

CONTENTS:

- Center Kickstand x1
- Hardware kit:
 - 25 mm M10 bolt x2
 - M10 split washer x2
 - M10 flat washer x2

TOOLS NEEDED:

- 5 mm Allen wrench
- 8 mm Allen wrench
- Torque wrench with 8 mm Allen bit
- Nitrile gloves (optional)

NOTICE: Hardware may vary (bolt head style) and/or require different tools. Use the appropriate head size and type of tool for your bolts.

Ensure the tool is pressed firmly into the bolt head and turn slowly to prevent stripping.

WARNINGS AND NOTICES

! **Incorrect assembly, installation, maintenance, or use of this accessory can cause component failure, loss of control, serious injury, or death.** If you are not sure you have the experience, skills, and tools to correctly perform all the steps for proper installation, consult a local, professional, reputable bike mechanic.


! **The center kickstand is designed to be used on a flat, hard, stable surface.** Do not assume the center kickstand alone will keep the ebike stable when loaded with cargo or people. Always hold onto the ebike when a passenger or cargo is being loaded or in place on the ebike.

INSTALLATION

1. **Get the ebike ready for maintenance.** Turn off the ebike, remove the battery, and press the on/off button on the remote to discharge remaining power.
2. **Remove the original kickstand.** Balance the ebike against a wall for support while removing the original kickstand and installing the new center kickstand.
 - a. Use a 5 mm Allen wrench to remove the two bolts on the non-drive side chainstay that hold the kickstand in place.
 - b. Remove the kickstand and recycle according to local rules (if possible).
3. **Install the center kickstand.** Locate the center kickstand and mounting hardware to prepare for installation.
 - a. Remove the pre-installed bolts and washers from the center kickstand.
 - b. Move the split washers and flat washers against the bolt ends.
 - c. Orient the center kickstand so that the legs fold toward the rear of the ebike.
 - d. Position the center kickstand under the mounting bracket in front of the rear wheel so that the center block fits through the mounting bracket and the bolt holes are aligned.

! **WARNING!** Be careful that the brake cable mounted on the chainstay does not get pinched between the kickstand and mounting bracket during installation, as this can result in rear brake failure leading to accidents, serious injury, or death.

- e. Thread the bolts by hand through the mounting bracket, and then use an 8 mm Allen wrench to tighten the bolts until secure.
 - f. Use a torque wrench to torque the bolts to 50 Nm.
4. **Reinstall the battery, test the ebike fully, and have your work inspected by a local, professional, reputable bike mechanic.**

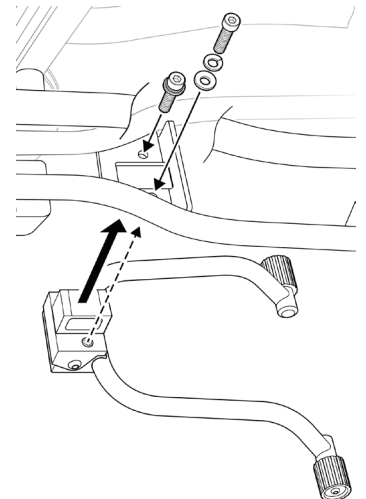

Center kickstand positioned under mounting bracket



Get help online at
Hilfe erhalten Sie online unter
Obtenez de l'aide en ligne sur
Krijg online hulp op

USA/Canada Help Center
radpowerbikes.com/help

EU/UK Help Centre
radpowerbikes.eu/help