

WINNARD

Page 1 of 3

BRAKE PAD INSTALLATION GUIDE FOR BRAKE PADS

WP139 (FITTING KIT WA254 & WA275)


WP1279 (FITTING KIT WA235)

WP1389 (FITTING KIT WA223) & **WP1584**

Installation of Anti-Rattle Spring and Wear Warning Indicator

Step 1.


Insert the wear warning indicator plugs into the brake pad backing plate, as shown in the picture below:

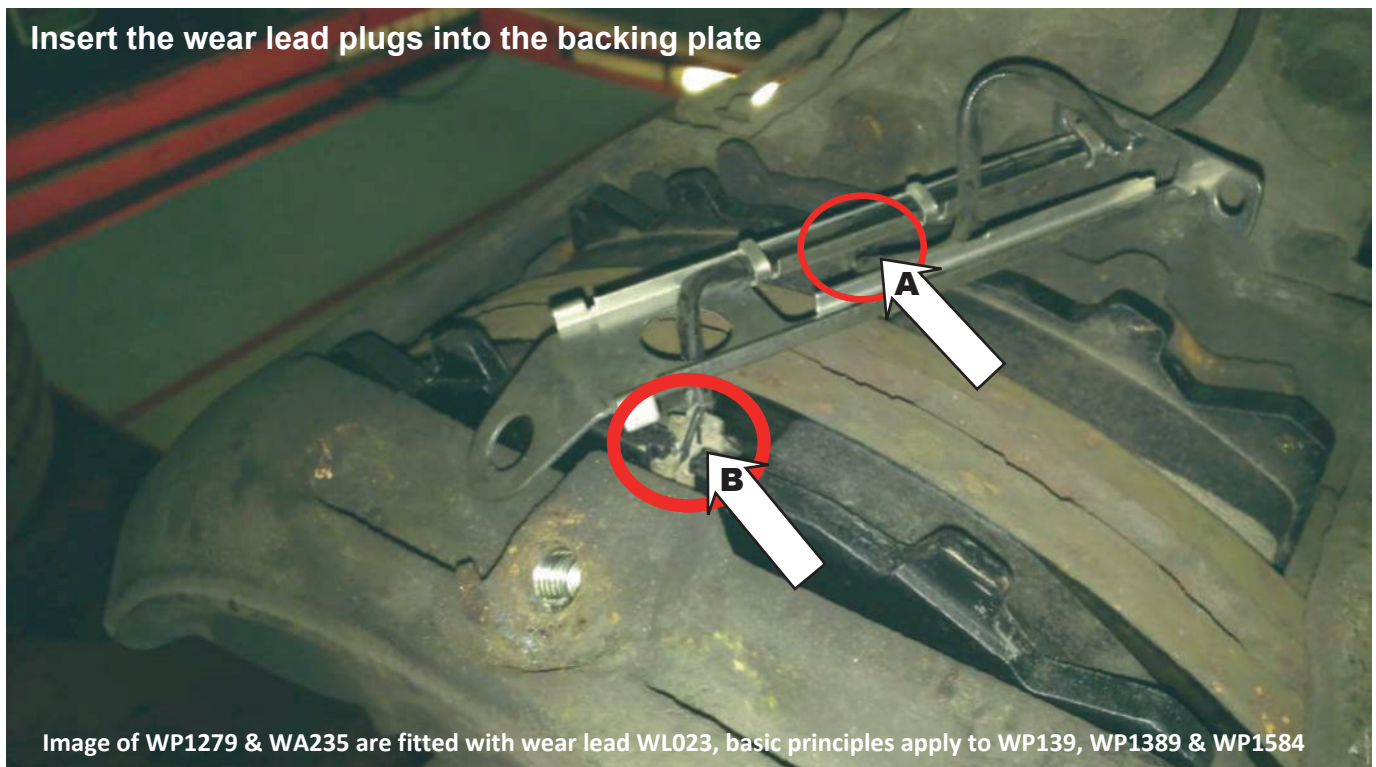

PLEASE NOTE: THE WEAR LEAD PLATES SITS ON TOP OF THE RETAINING SPRINGS - NOT UNDERNEATH.


Step 2

Install the hold down springs onto the brake pad backing plates and the heat plate, making sure that the springs are located **underneath** the wear warning indicator plate, as shown in the picture below. Note that the springs should locate on the outside of the wear warning indicator wires as shown below.

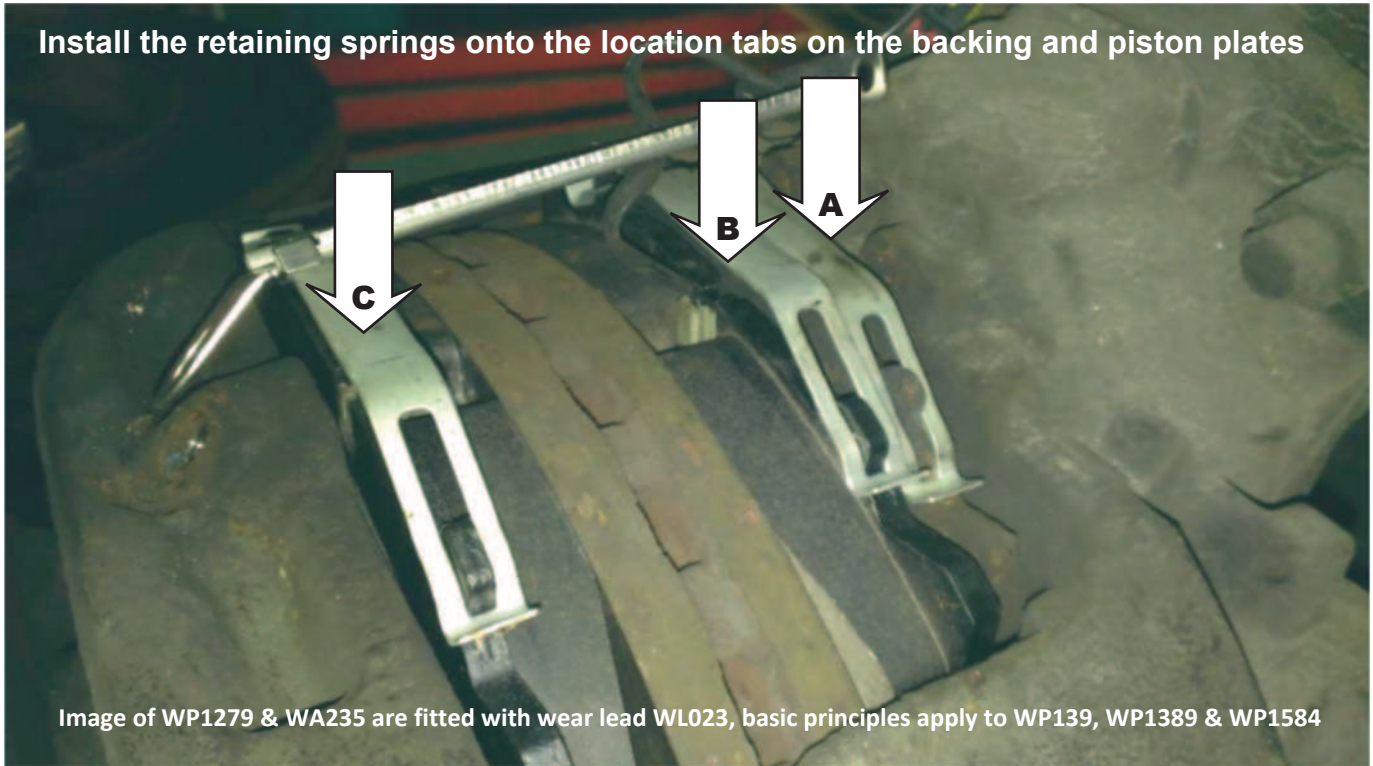


Step

Insert the pad retention clamp bar into the caliper (A) and compress the springs (B).

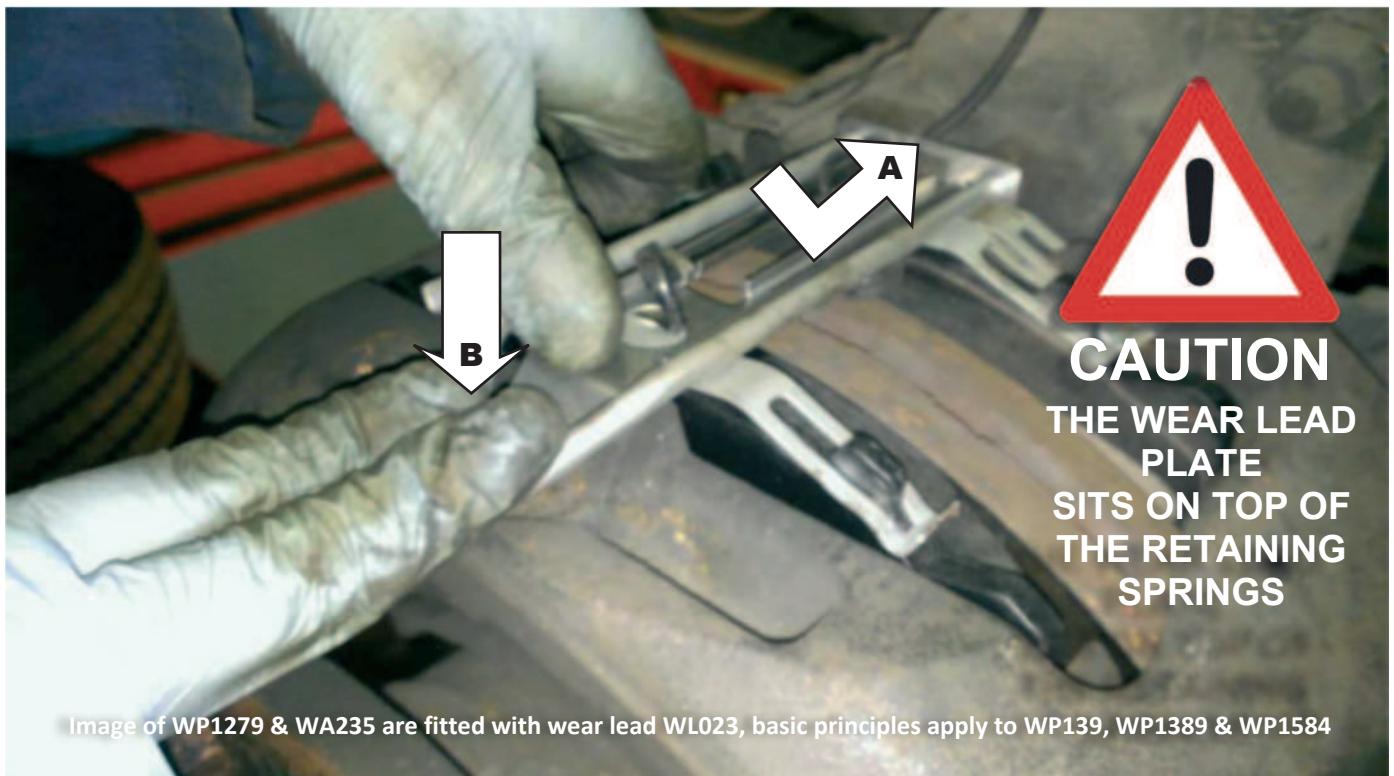

Step 4

Secure the pad retention clamp bar using the bolt supplied, as normal and torque to the manufacturer's recommended torque setting.

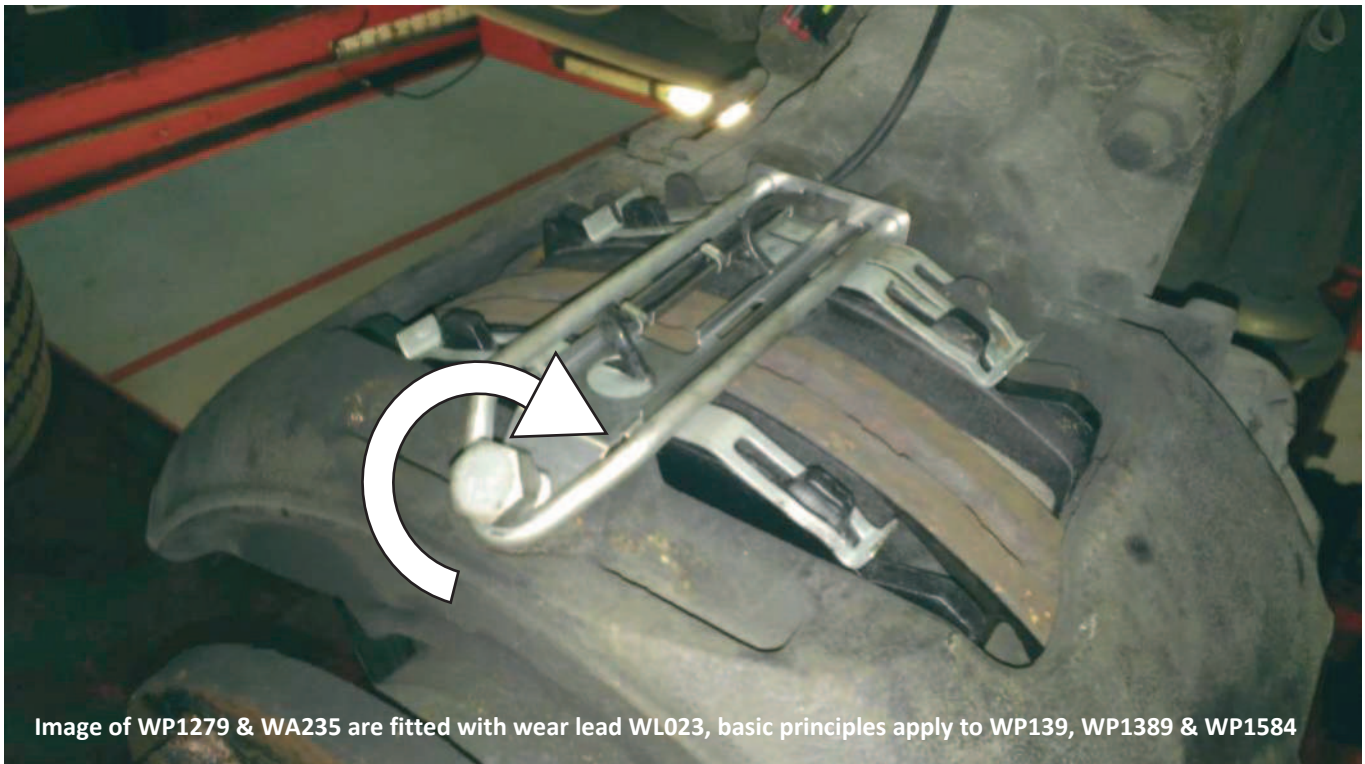

FINISH

The picture below shows the finished installation.

