





# PERMA TRANS™ Wood Transfer

Inkjet & Laser Transfer  
Paper for Wooden Substrates





# NuCoat

Product Code: S541  
Green Line

## ITEMS YOU WILL NEED








## STEP ONE – PRINTING YOUR IMAGE




TYPE	BRAND	MEDIA	MODE
Inkjet	HP	HP Iron on Transfer	Normal
Inkjet	Epson	Plain Paper	Photo
Inkjet	Canon	Photo Paper Plus Glossy	Thick
Laser	HP	Media Type: Heavy	
Laser	OKI	Media Type: Heavy	
Laser	Ricoh	Media Type: Thick	


## STEP TWO – TRANSFERRING THE IMAGE

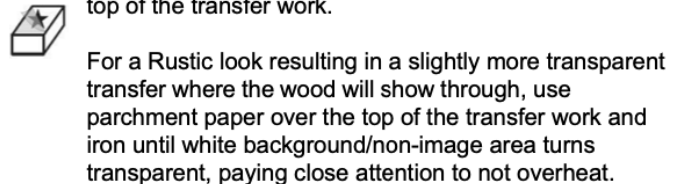

### Option 1) CRICUT PRESS

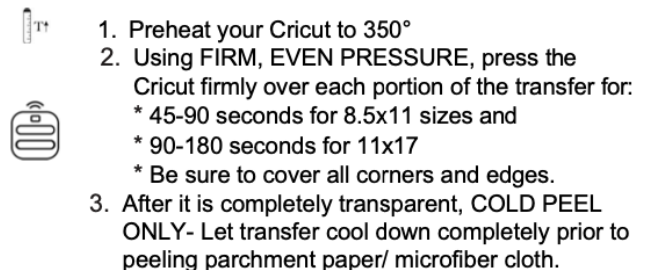

### Option 2) HAND IRON

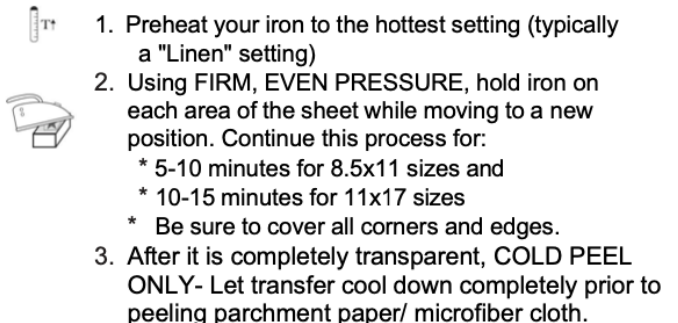

## NOTES

- When transferring several images, be sure to cover all applications to ensure none of the transfers are damaged from direct exposure to heat.
- The final transfer is supposed to look rustic in nature.
- For best results, use craft wood that is untreated or stained.
- Lift up a corner of the parchment to make sure it is transferred completely, if it isn't replace parchment and continue ironing.
- Overheating/burning the transfer may cause bubbles/cracking appear.