




GRANDCELLAR™
COLLECTION

Standard Corner | Assembly Guide

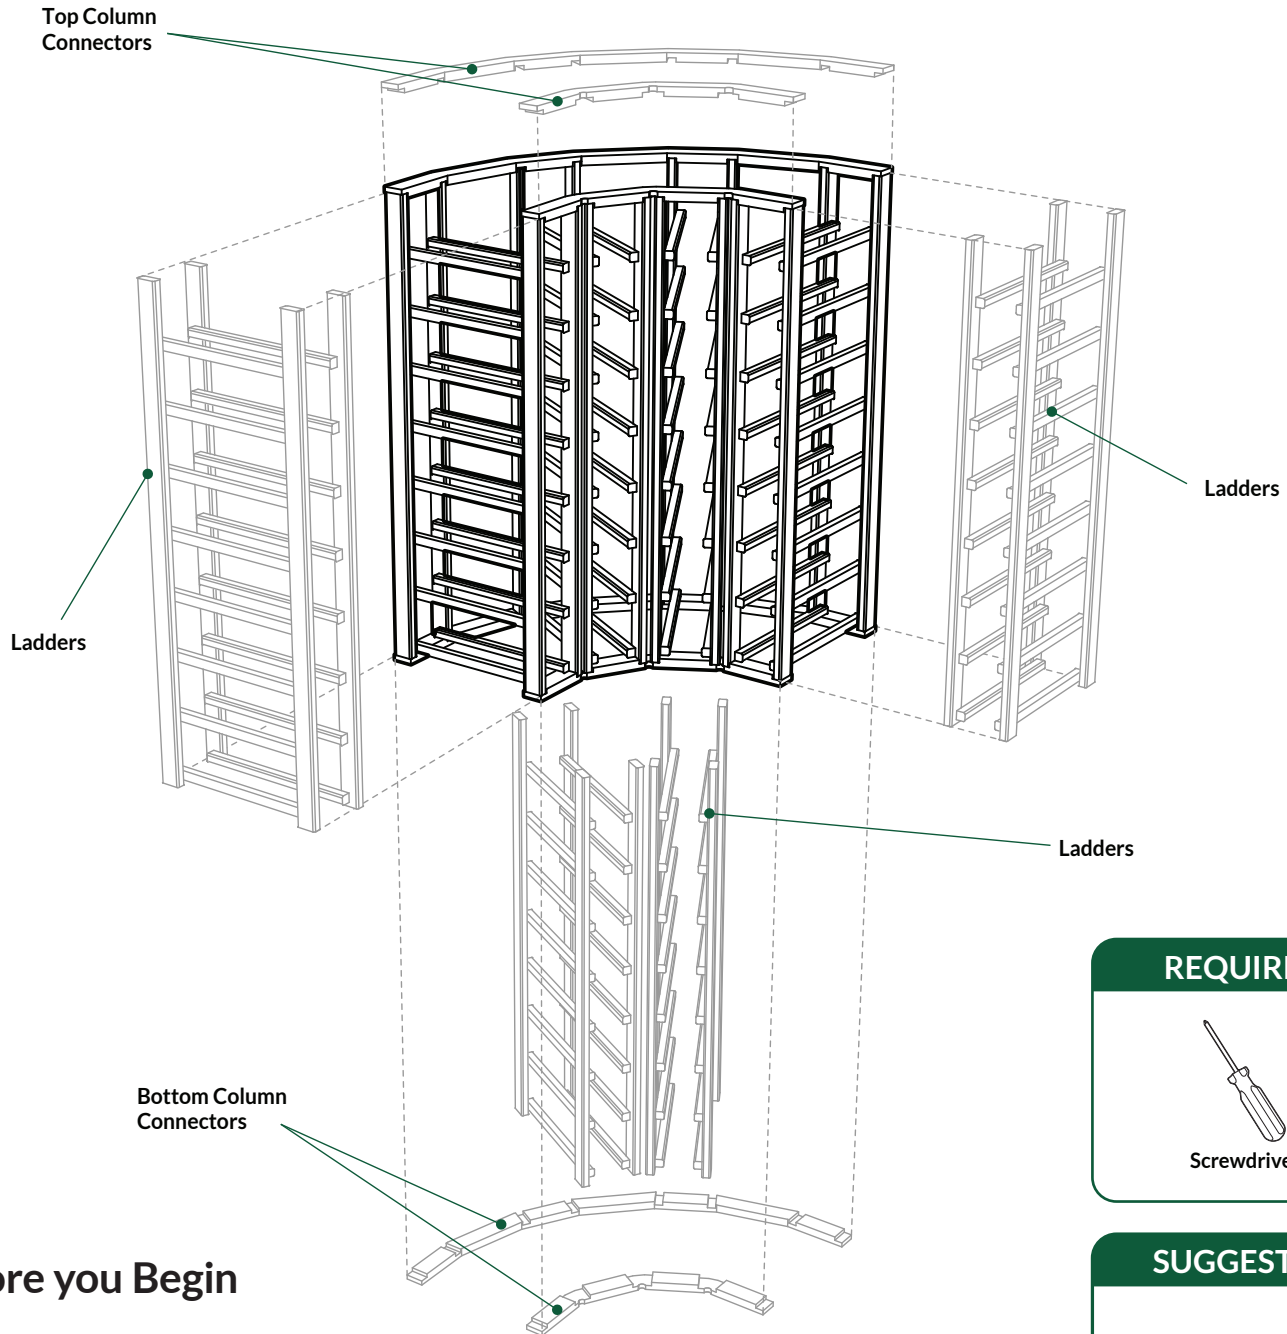


Before you Begin

- Recommended 2-person assembly
- Read all instructions before assembly
- Inspect all parts for damage and missing parts before assembly
- Please verify you have the correct parts and quantity of hardware before proceeding
- Open package in a clean, flat area
- Carefully remove all components from the box and remove banding or protective wrapping
- If parts are missing or broken, please contact our customer service department at 1(888) 373-6057
- The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.




Objects measuring over 36 inches in height, whether they stand alone or are stacked, must be securely attached to the wall to prevent potential shifting or tipping. It is also recommended to use screws or finish nails to join stacked units together.

REQUIRED

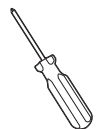

Screwdriver

SUGGESTED

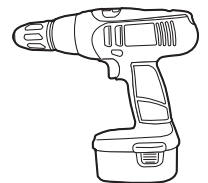

Cordless Drill




1/16" Drill Bit
Recommended for drilling
pilot holes for all screws
to avoid splitting wood




GRANDCELLAR™
COLLECTION

Standard Corner | Assembly Guide


Package Contents

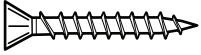


Wood Screw - Actual size
2 columns (16X)
4 columns (32X)

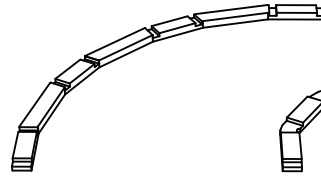

Top and Bottom Column
Connector Back (2x)

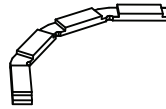


Top and Bottom Column
Connector Front (2x)

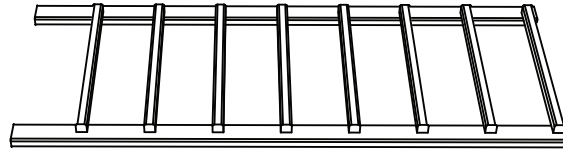

Ladders
2 Columns (4X)
4 Columns (8X)

- 1 In an open area, align the ladders with the bottle supports facing inward. Align the large gaps on both ladders. The end with the larger gap will be the top of your rack.

Identify the end with the larger gap
as the top of your rack.

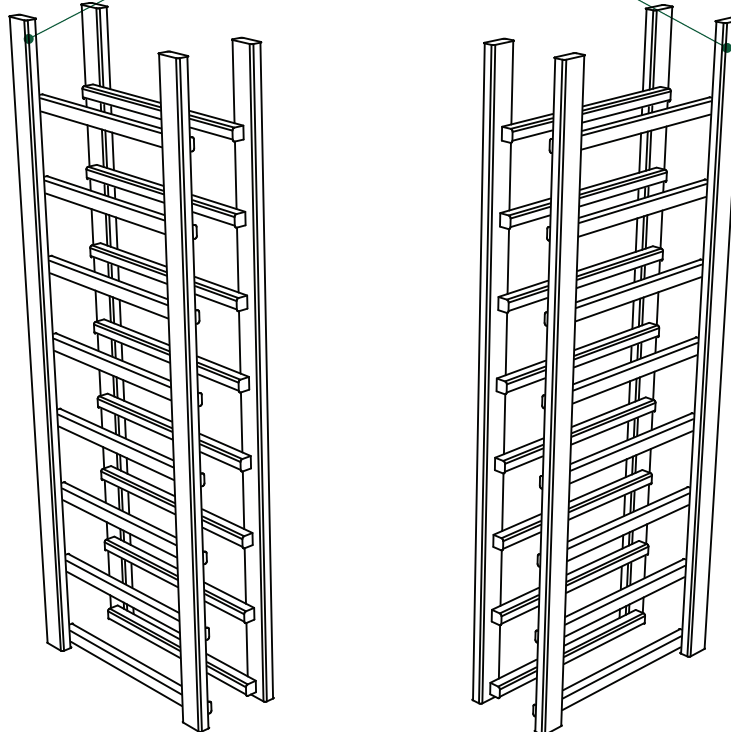





GRANDCELLAR™
COLLECTION

Standard Corner | Assembly Guide

IMPORTANT NOTE: To prevent splitting of the ladders, drill a 1/16" pilot hole before driving the wood screws. For optimal results, initially drive the screws partially using a drill, then complete tightening manually.

- 2** Secure the front and back connectors to the ladders, beginning from the outside of the unit and moving inward. Make sure the bottle supports are correctly oriented.

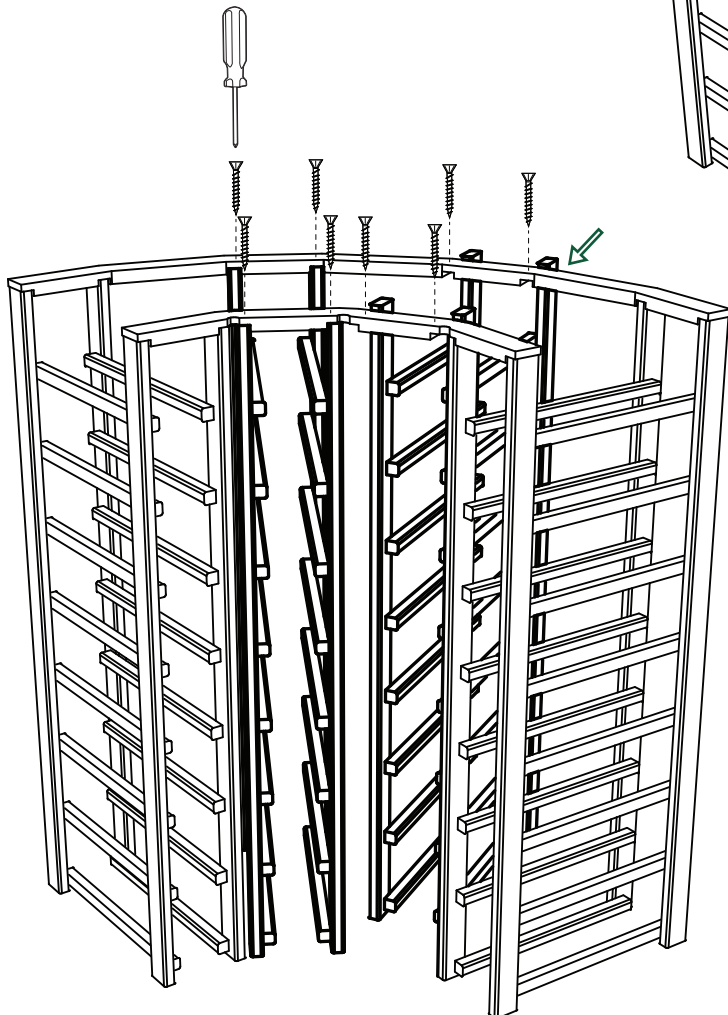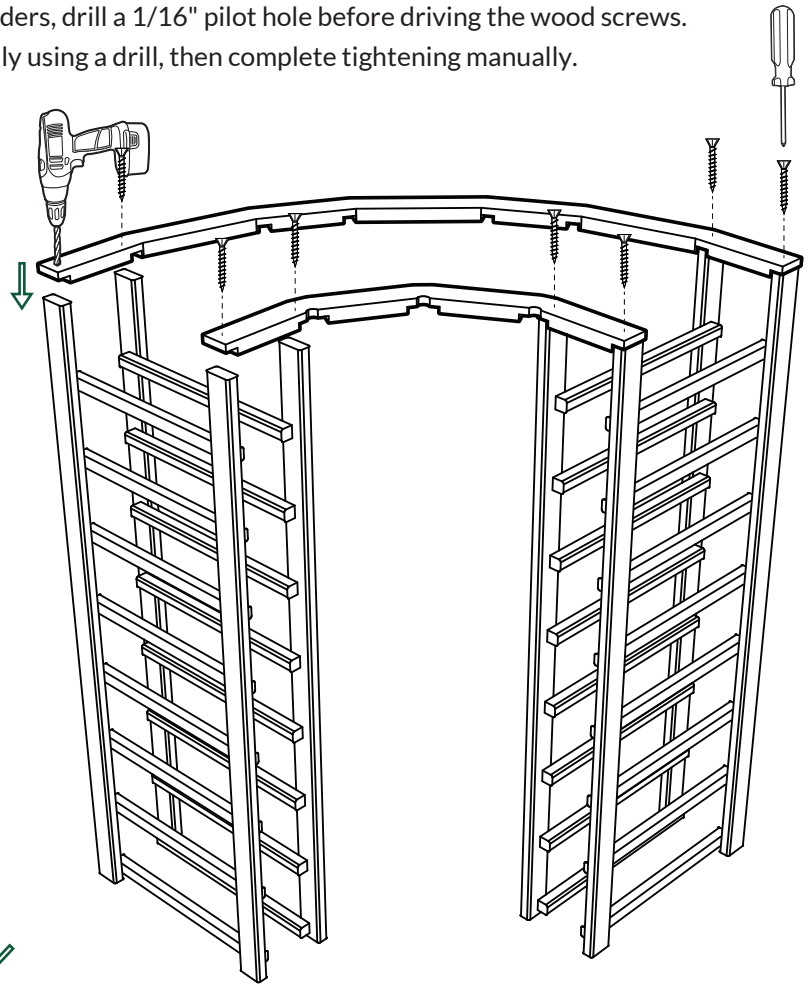

Note: Skip this step for 2 Column Version

- 3** Repeat step 2 for each remaining ladder, ensuring that the bottle supports are facing the correct orientation.




GRANDCELLAR™
COLLECTION

Standard Corner | Assembly Guide



4

Rotate the unit and attach the front and back connectors to the bottom side of the unit.

Ensure that the unit is stable and all connections are secure. Carefully move the assembled unit into its final position.

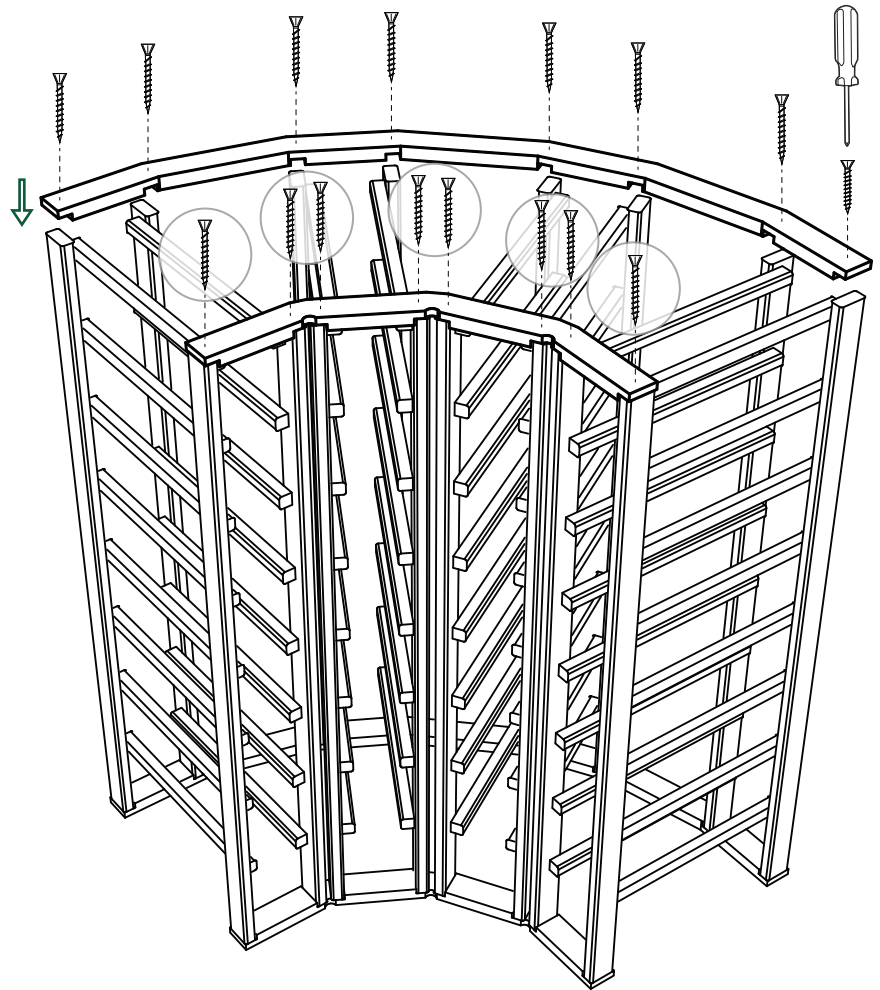

Available in 2 and 4 column configurations

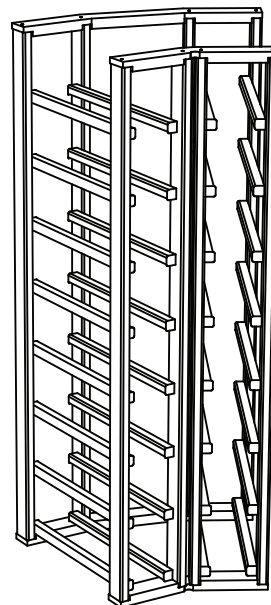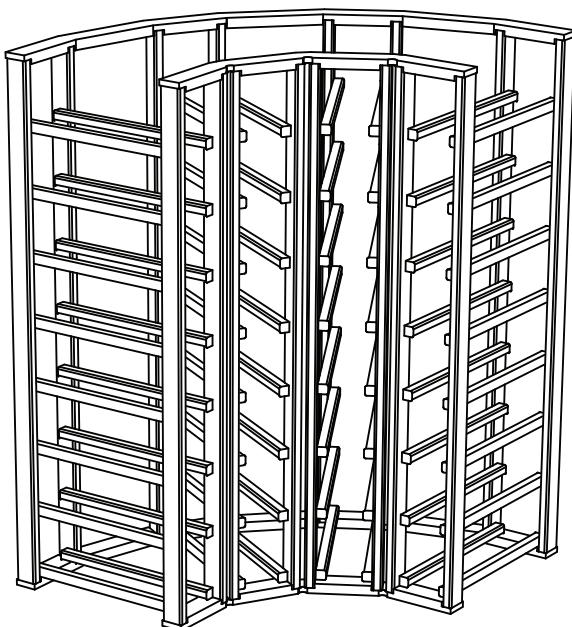

**GRANDCELLAR™**
COLLECTION

Standard Corner | Assembly Guide

Care Instructions

- Do not use chemical cleaners or abrasive cleaning materials, as they may damage the surface.
- Do not place hot items on surfaces.
- Use coasters to avoid water rings.
- Only place dry bottles on and inside the cabinet to protect against marks and stains.

For More:



Assembly Guides

Stay Connected

We adore seeing your wine sanctuaries transform into stunning masterpieces! Follow and tag us on Instagram to showcase your wine and liquor storage. [@wineracksamerica](#)

Please feel free to send any photos to photos@wineracksamerica.com

Once again, thank you for your business. Remember, customer service is available to answer any questions Monday-Friday 7:00 am - 5:00 pm MST. Please feel free to contact us for any wine storage needs.



Customer service: **888.373.6057**

Website: wineracksamerica.com


Cellar Installation Guide

After assembling all the modules, begin stacking them in place, starting from the bottom layer and working your way up. For cellar installations using the base platform and end panels, before stacking the units, ensure that the units placed directly on the base platform are recessed by 11/16" from each end to properly accommodate the end panels.

Ensure that each module is properly aligned and squared. Due to the natural characteristics of hardwood, slight warping or uneven lines may occur. In most cases, these imperfections will be hidden once the trim is installed. For secure assembly, use a finishing nailer to join the modules together at each vertical seam.

To prevent shifting or sliding, each module must be securely fastened to the wall. Align the wall anchor brackets in the desired position. It is recommended to use at least 2 wall brackets for each module. Secure the brackets to the wall using drywall or wood screws. Then, attach the brackets to the unit with 1/2" screws, ensuring they do not penetrate through the unit.

NOTE: Determine the material of the wall before selecting the appropriate hardware. The kit includes both wood screws and drywall anchors for your convenience.

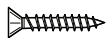


1/2" Screw (2X)



1 1/4" Screw (2X)



Drywall Anchor (2X)

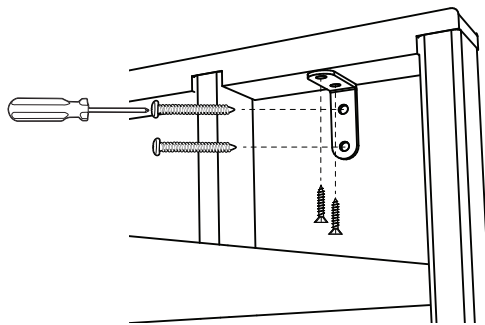

Drywall Anchor Instructions

- 1 Using a #2 Phillips screwdriver, gently press the anchor tip into the drywall to position it.

Apply pressure and rotate the anchor until it is flush with the drywall surface. Avoid overtightening.

- 2 Place the screw through the item to be mounted, then insert it into the anchor.

- 3 As you tighten the screw, the anchor will produce a "click" sound when the screw is halfway in, indicating the anchor is secure. Continue tightening the screw until it is flush with the surface. Note: The provided screw accommodates item thicknesses of 1/4 inch or less.

