


1. Use a finish nailer to attach a fluted column panel in between the front and back of your racks. Drive a finish nail through the inside of the end risers into both sides of the fluted column panel. The end with the gap is the top of the fluted column. (figure 1)

Make sure the front of the fluted column panels are flush with the end of the risers. (figure 2)

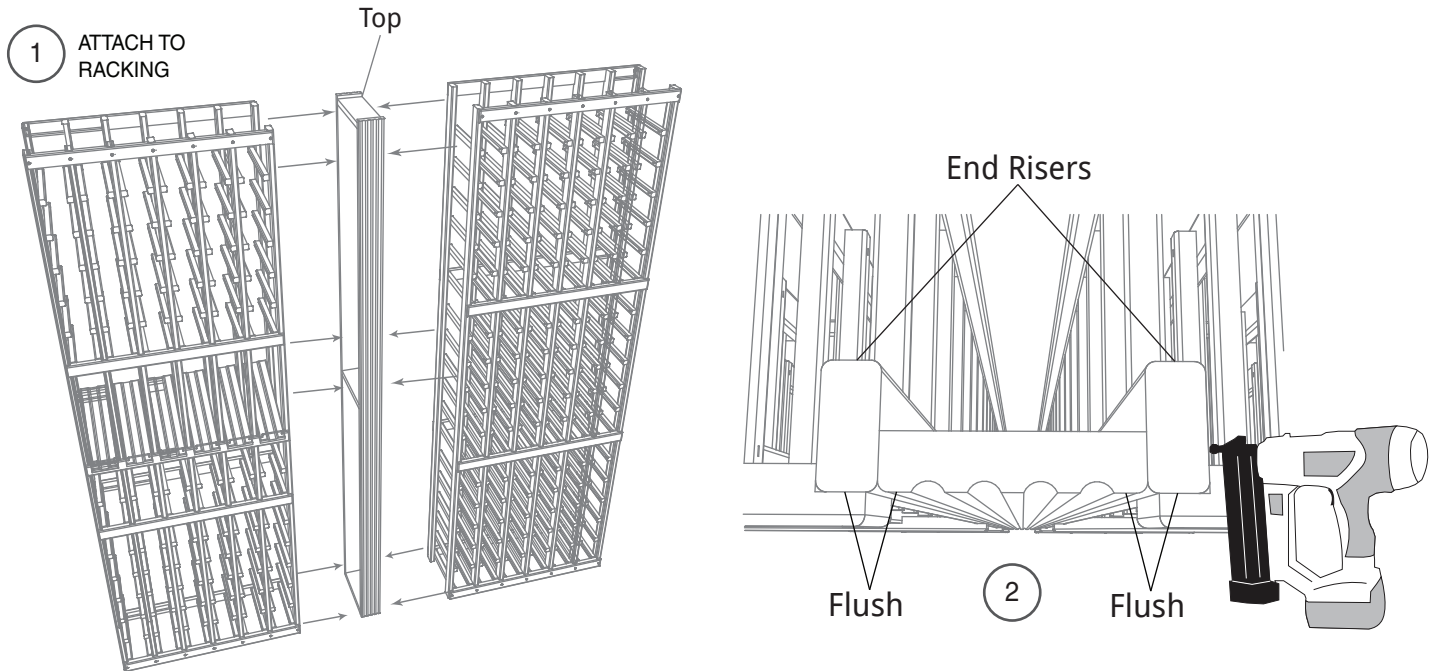

2. If you purchased a fluted column for an extender kit, repeat Step 1 to attach the panels to your racking. (figure 3)

Then, set your extender kit in place on the top or bottom of your standard racking. Place the plinth block so that the notch covers the connectors on your standard racking. Attach the plinth block to the end risers using a finish nailer. (figure 4)

