





Measuring for Roman Blinds

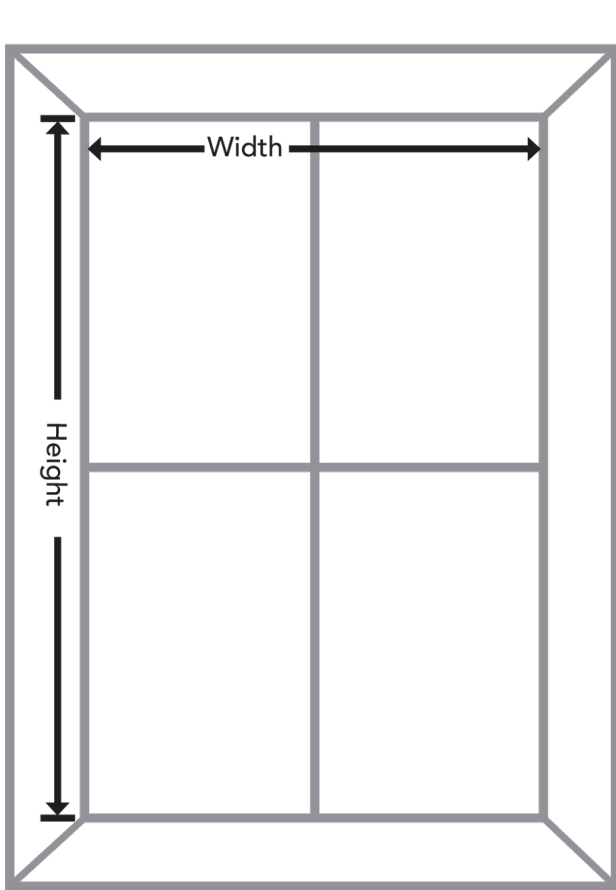

Inside Mount

* Frame must be minimum 1" deep for Inside Mount.

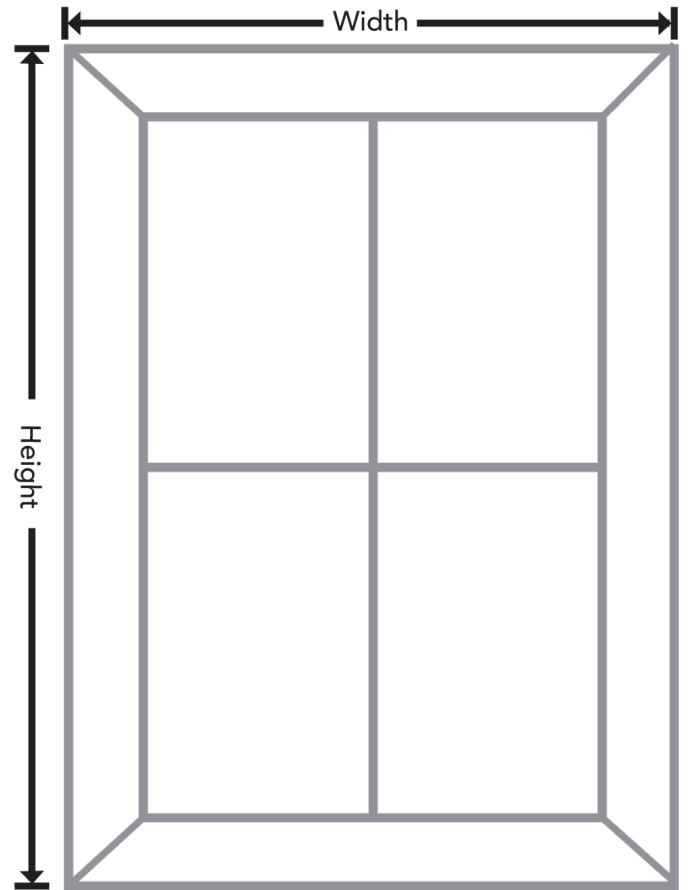

Outside Mount

* 2" space above frame is required for Outside Mount.