

Assembled 5-Panel Blanket & Individual Panel Use



FRONT VIEW

Shown with optional "Designator" patches. Designator patches are available in "SWAT", "POLICE", "SHERIFF", and "POLICIA".

Also available is "NO ARMOR - DO NOT SHOOT", for non-armored training blankets.

4" X 10" Designator patches are embroidered, gold on black, and backed with Velcro® loop so they are interchangeable.



BACK VIEW

NOTE: When inserting the extension pole, use only the left-hand pole loop on each panel except the last panel. On the last panel, use both pole loops.



5-Panel TACIII+ Blanket shown on 2002 Suburban (shown with optional 3-panel Skip Skirt™)



Close-up of "Gladiator Grip™" control system. Insert hand through forearm strap and grasp hand hold. Secure strap firmly across forearm using Velcro attachment.

Use this method when using panel as individual shield.



Questions? Please feel free to call us
TOLL FREE: 877.BLT.PRUF or direct: 805.526.3046

INSTANT ARMOR, INC.

350 E. Easy Street, Suite #1 Simi Valley, CA 93065-1850

www.instantarmor.com

The Tactical Blanket Systems are protected by U.S. Patent No. 6,161,462.


TAC III+™, Gladiator Grip™, and Skip Skirt™ are trademarks of Instant Armor, Inc. All rights reserved. Copyright © 2003

PANEL ATTACHMENT INSTRUCTIONS




Should you have any questions regarding the use, deployment, storage, or training of any Tactical Blanket System, please do not hesitate to contact us at 805/526-3046 or toll free at 877/BLT-PRUF.

ATTACHMENT INSTRUCTIONS: Have someone hold first panel or place against wall or vehicle. Overlap second panel atop first and align mounting holes. Insert attachment bolts into all three mounting holes, thread in loosely. After all bolts have been partially threaded (to insure proper alignment), finish tightening each bolt. Repeat for additional panels. Assemble and insert aluminum extension pole in pole loops (see "Assembled 5-Panel Blanket & Individual Panel Use" instruction sheet).

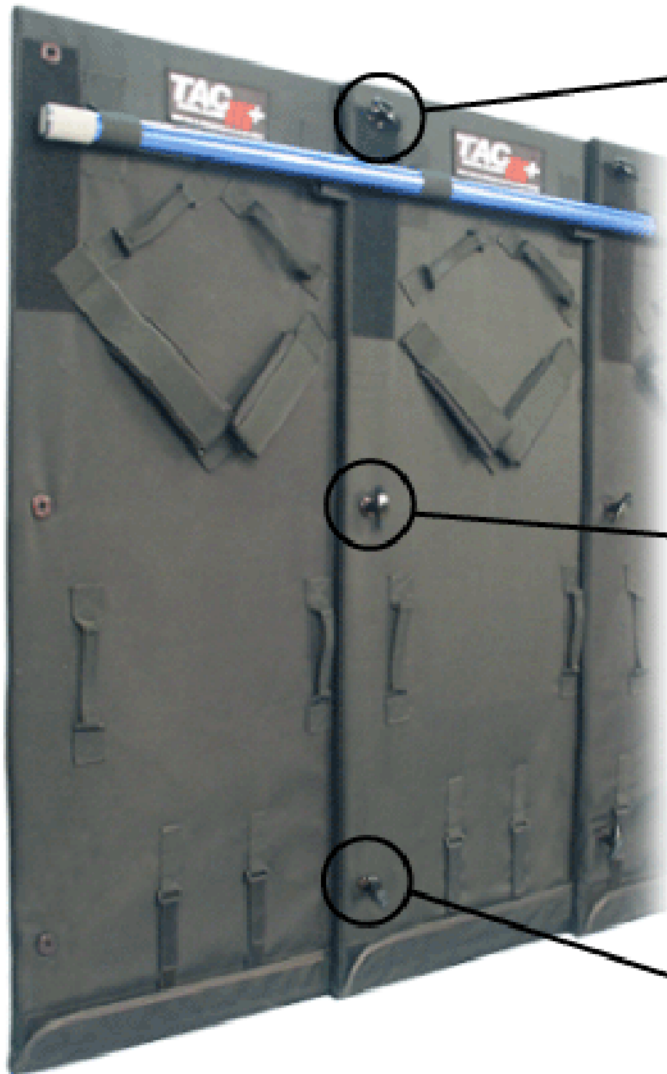

1.


Insert attachment bolt through top mounting sleeve and into rear threaded sleeve. Align and screw in slightly.

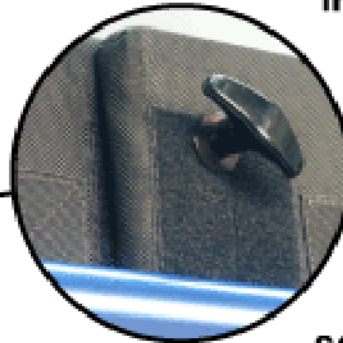

DO NOT TIGHTEN UNTIL ALL THREE BOLTS ARE INSERTED, ALIGNED, & SCREWED IN LOOSELY TO BACK PANEL.

2.


Insert attachment bolt through center mounting sleeve and into rear threaded sleeve. Align and screw in slightly.

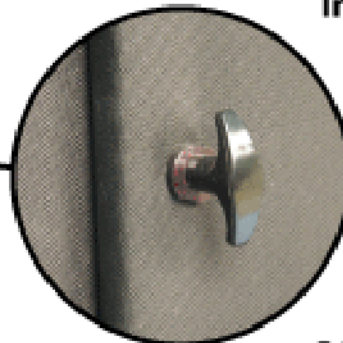

DO NOT TIGHTEN UNTIL ALL THREE BOLTS ARE INSERTED, ALIGNED, & SCREWED IN LOOSELY TO BACK PANEL.

3.

Insert attachment bolt through bottom mounting sleeve and into rear threaded sleeve. Align and screw in tight.

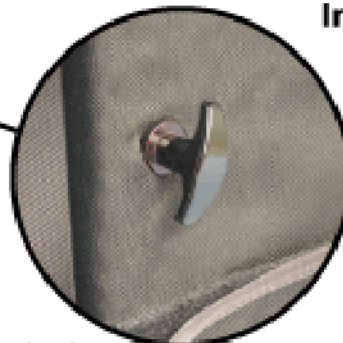

THERE IS NO NEED TO OVER-TIGHTEN BOLTS. GO BACK AND TIGHTEN THE TOP AND CENTER BOLTS.

4.

Repeat procedure for as many additional panels as desired.


Should you have any questions regarding the use, deployment, storage, or training of any Tactical Blanket System, please do not hesitate to contact us at 805/526-3046 or toll free at 877/BLT-PRUF.

The TAC III+ Hardcase provides accommodations for one to five TAC III+ Panels as well as all accessories. Once the panels are placed, use the interior straps to secure the panels. Two pole sets (4 poles) are stacked along the side of the panels. The pocket designated for the Suction Cup Straps is angled and will hold five SCS's. Use the remainder of the storage trough to hold Loop & Hook Straps, Pole Pockets and other accessories. Below the panels (not shown), built into the Hardcase, is an additional compartment for storage.

PACKING



STACKING

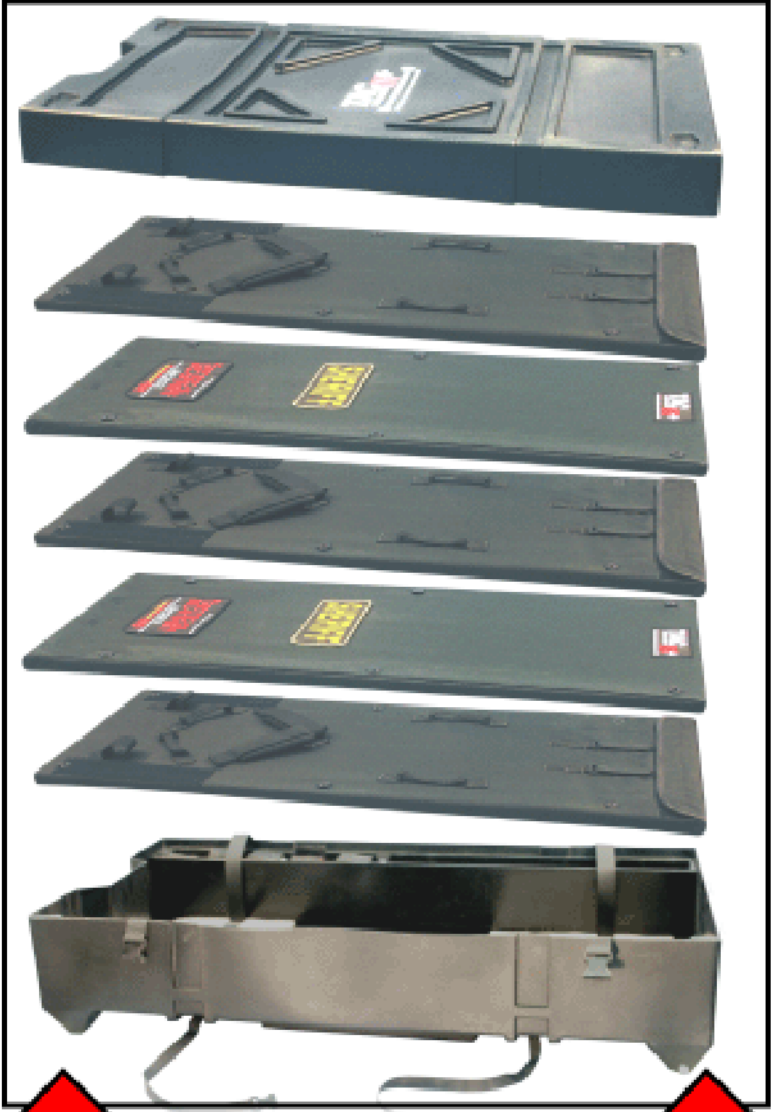

When stacking your TAC III+ panels in the case, face the first panel with the "grip" side up. Second panel, turn 180° and grip side down. Continue this orientation for the balance of panels. Refer to picture above. In this manner, the finished stack of five panels will fit snugly in the case.