

# **INSTALLATION GUIDE**

SIMBOOTH 2

# **TABLE OF CONTENTS**

### **INSTALLATION**

Parts list	3-5
Structure assembly	6-10
Floor installation	. 11-12
Optional (Half-wall, rafter and projector)	. 13-14




# **PARTS LIST**





# **PARTS LIST**

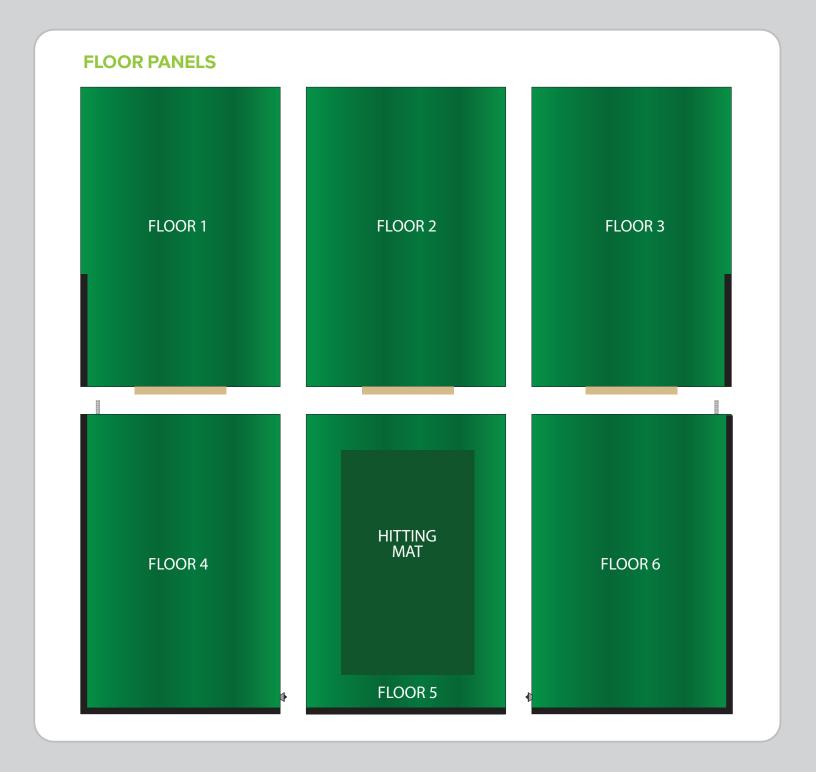

# **PARTS LIST**


# HITTING MAT BOLTS 3-1/2"(12 X) WASHERS (46 X) NUTS (34 X) WHITE SCREEN CEILING TRUSSES (2X) TEES (PACK OF 10)





### **BEFORE STARTING**


You will need four people, two ladders, and two 1/2" wrenches.

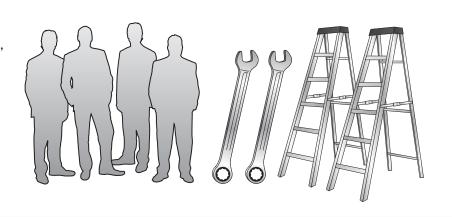



Fix the left top wall to the left front ceiling with the nuts.



Using the nuts, fix the middle front ceiling to the left front ceiling, then fix right front ceiling to the middle front ceiling.

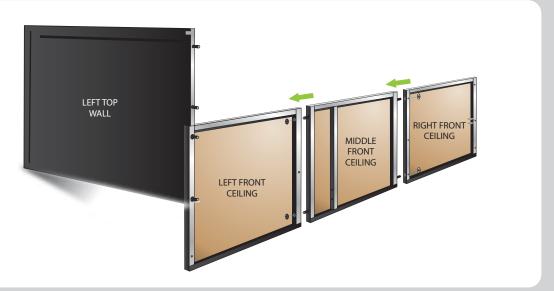

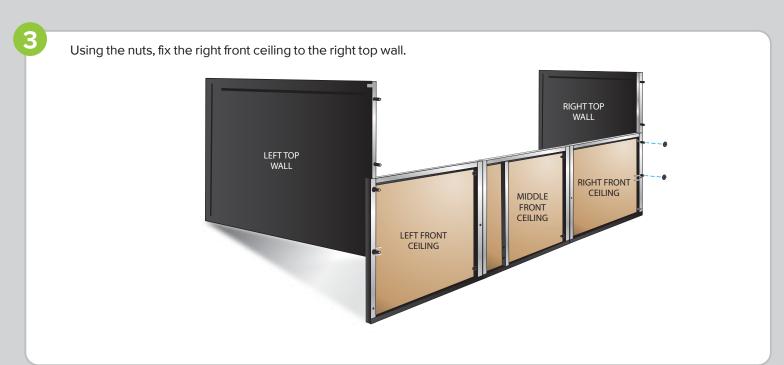

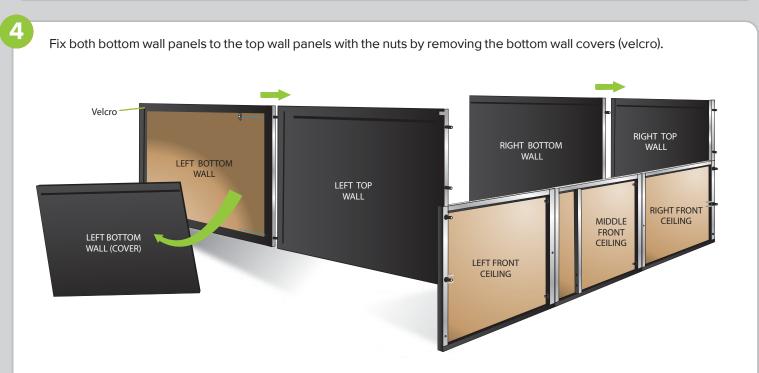

Fix the left back ceiling to the left top wall with the nuts.



Using the nuts, fix the middle back ceiling to the left back ceiling and fix the right back ceiling to the middle back ceiling. Then, fix the two middle ceilings together.



7


Fix the right back ceiling to the right top wall with the nuts.





# CEILING TRUSS INSTALLATION

Assemble the ceiling trusses with bolts and security pins, then insert them in the back ceiling and the front ceiling.




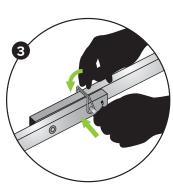





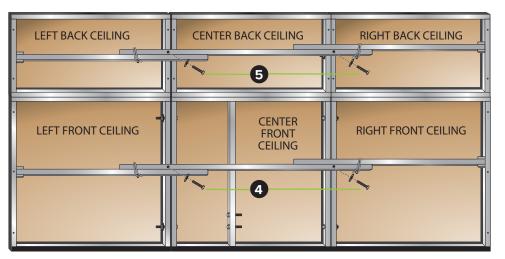

IT IS IMPORTANT TO COMPLETE THIS STEP BEFORE LIFTING THE STRUCTURE.

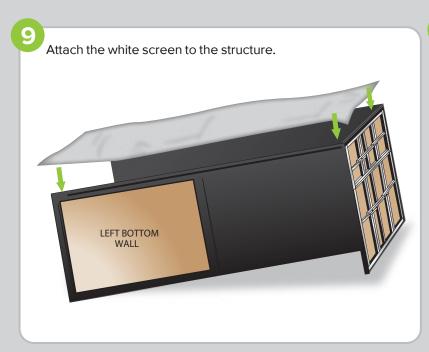

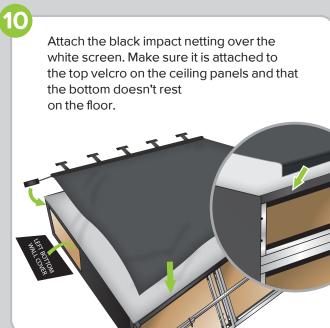

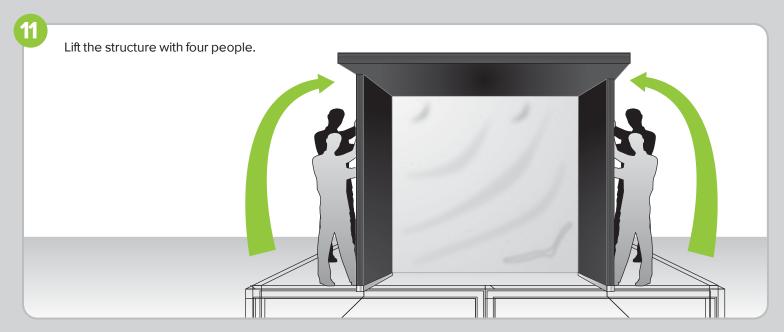




Step 1

# Lift green carpet. Step 2

Stretch the white screen behind and under the aluminum bar and reach for it through the space.

### Step 3

Fix the screen on half of the velcro on the aluminum bar

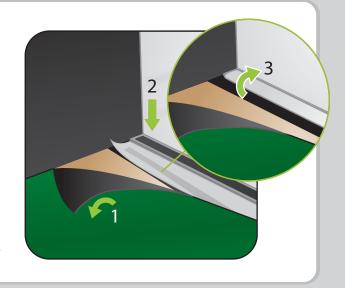

3

### Step 1


Lift green carpet.

### Step 2


Stretch the white screen behind and under the aluminum bar and reach for it through the space.

### Step 3

Stick it on the remaining half of the aluminum bar velcro.

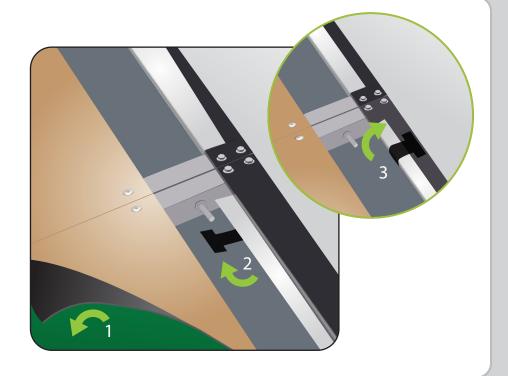

**END OF FLOOR INSTALLATION SECTION** 

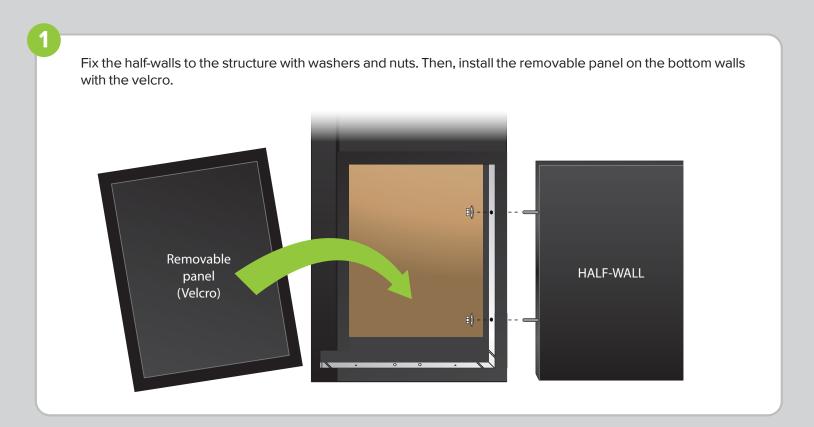

**END OF HALF-WALLS INSTALLATION SECTION** 



**END OF PROJECTOR INSTALLATION SECTION**