




## Optional Blower Kit Installation Instructions WODC.BLOW

- Contents:**
- 1 x Blower Assembly
  - 2 x Top Air Side Deflector
  - 4 x #8x1/2 screws
  - 1 x Temperature snap-switch assembly (switch and bracket)

### Blower Assembly Installation (all models):

1. Loosen the 2 screws at the center of the blower.
2. Install the temperature snap-switch assembly onto the blower by placing the bracket over the screws.
3. Tighten the screws.

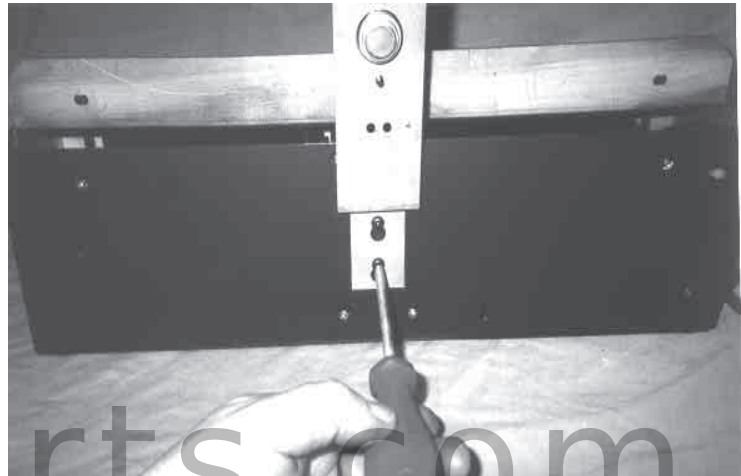


fire-parts.com



4. Ensure that the two wires are connected to the temperature snap-switch.
5. Slide the temperature snap-switch assembly up into the space between the rear shield and the firebox, ensuring that the temperature snap-switch contacts the firebox.


6. Install the two screws through the flange of the blower into the rear shield.
7. Plug the power supply cord in and check blower operation.

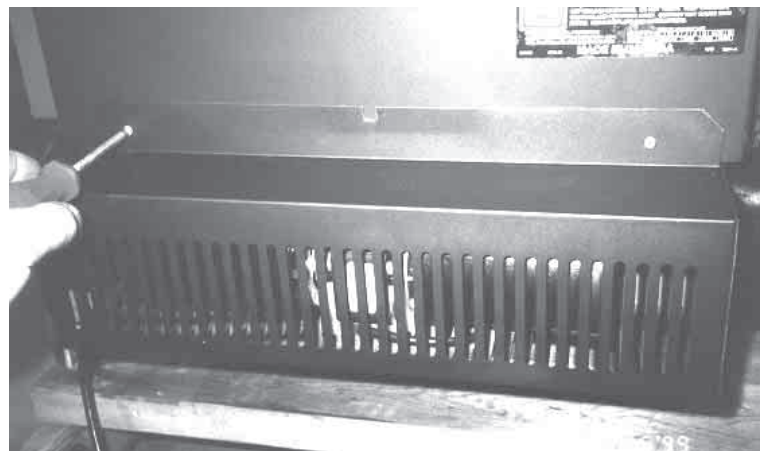

When the top air side deflectors are installed on the Vista or Summit freestanding woodstoves, they will increase the flow of air toward the front of the stove. They are not intended for use on the Super 27 woodstove.

### **Blower Assembly Installation (Vista & Summit Models):**

- 1. Place the top air side deflector in the gap between the rear shield and the back of the stove as shown in Fig. #1.**
- 2. Insert a #8x1/2" screw into the hole on the side of the rear shield.**
- 3. Slide the deflector up so that it fits snugly with the underside of the rear shield as shown in Fig. #2.**

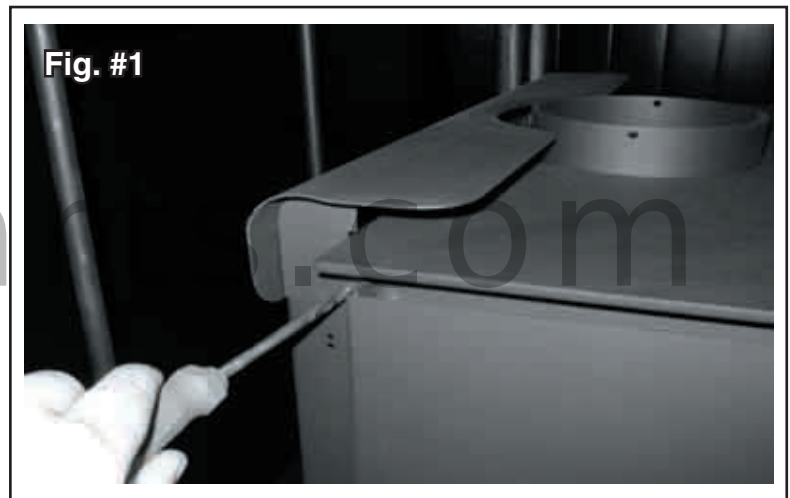

- 4. Tighten the screw.**
- 5. Repeat the procedure on the opposite side of the stove.**




## Instructions d'installation du nécessaire de soufflerie, en option WODC.BLOW

**Contenu:** 1 x Montage de soufflerie, 4 x vis #8x1/2  
2 déflecteurs d'air latéraux pour le dessus  
1 x Montage du thermodisque (interrupteur et support)


### Installation:

1. Desserrez les 2 vis, au centre la soufflerie.
2. Installez le thermodisque sur la soufflerie à l'avant du support.
3. Serrez les vis.

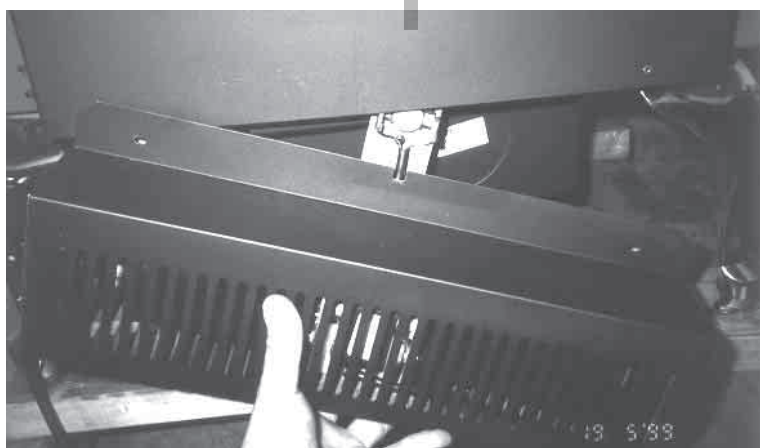

4. Assurez-vous que les deux fils sont connectés au thermodisque.
5. Glissez le thermodisque vers le haut dans l'espace entre l'écran arrière et la boîte à feu, vous assurant que thermodisque touche à la boîte à feu.


6. Installez la soufflerie à l'écran arrière en passant les vis à travers le collet de la soufflerie.
7. Branchez le fil d'alimentation et vérifiez le fonctionnement de la soufflerie.

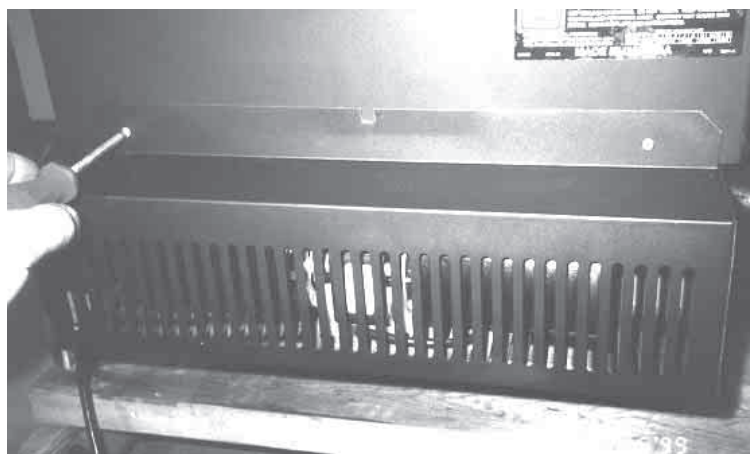

Lorsque les déflecteurs d'air latéraux du dessus sont posés sur le poêle au bois non encastré Vista ou Summit, la circulation d'air vers le devant du poêle est augmentée. Mais ils ne sont pas conçus pour être posés sur le modèle Super 27.

### **Directives pour l'assemblage et la pose du ventilateur (modèles Vista et Summit):**

1. Placer le déflecteur d'air latéral du dessus dans l'espace situé entre le bouclier arrière et le derrière du poêle, tel qu'illustré à la Fig.#1.
2. Insérer une vis #8 de 1/2" dans le trou sur le côté du bouclier arrière.
3. Glisser le déflecteur jusqu'à ce qu'il s'ajuste parfaitement au dessous du bouclier arrière, tel qu'illustré à la Fig.#2.

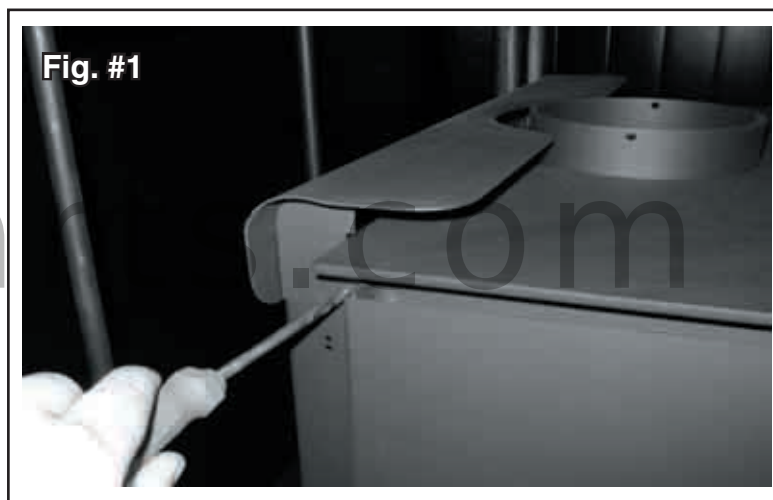

**Fig. #1**



**Fig. #2**

4. Serrer la vis.
5. Répéter la même procédure pour l'autre côté du poêle.