


REPAIR OF STONE QUOINS ON RANDOM STONE WALLS USING GROUT TIES

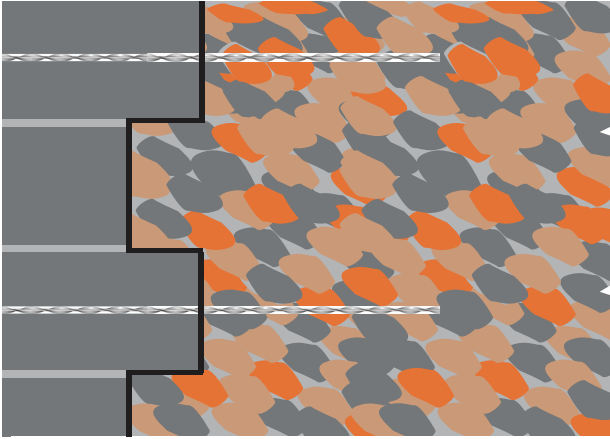

Recommended Tooling

- ▣ For drilling and insertion of Lateral Restraint Ties: SDS rotary hammer drill 650 / 700w.
- ▣ For mixing StrucSol HSGrout: SDS Rotary percussion 3-jaw chuck drill with mixing paddle.
- ▣ For installation of Lateral Restraint Ties: Lateral Restraint Tie Support Tool.
- ▣ For Injection of the StrucSol Crack Filler: A 400ml Mastic Gun is required.
- ▣ PPE Clothing and Protection.

General Notes

If you require specific advice on your project, please call the StrucSol technical help line 0116 2375082. We can supply a full support service which includes:

- ▣ Advice and assistance on all structural matters.
- ▣ Preparing repair proposals for specific projects.

Method Statement:

1. Mark the positions for the holes on the outer face of the wall.
2. Drill a 16mm clearance hole (16mm if the Grout Tie is longer than 450mm) at the required location through the stone quoin and into the back-up material to the required depth.
3. Clean out all dust from the hole and thoroughly flush with water. Ensure the slot is damp prior to commencing step 7.
4. Attach the required length of the Grout Tie Pinning Nozzle to the gun.
5. Mix StrucSol HSGrout using a power mixer and load into the Grout Tie Pointing Gun.
6. Pump grout to fill the nozzle.
7. Wind the Grout Tie into the nozzle and ensure that it is fully covered in grout.
8. Insert the nozzle to the full depth of the drilled hole and pump the grout.
9. Make good all the holes at the surface and cracks using StrucSol TE resin or StrucSol Crack Filler and leave ready for decoration. To achieve a near perfect look, use StrucSol Stain Colour Matching mortar.
10. Clean tools with clean, fresh water.

- ▣ *Pointing may be carried out as soon as is convenient after the StrucSol HSGrout has started to gel.*

SPECIFICATION NOTES

The following criteria are to be used unless specified otherwise.

A	Grout Ties are to be installed at a vertical spacing of 450mm.
B	Grout Ties are to extend at least 500mm past the joist between the quoin and the wall.
C	Depth of hole to be Grout Tie length +25mm.
D	Grout Ties are to be installed within the centre third of the wall.
E	In hot conditions, ensure the masonry is well wetted or primed to prevent premature curing of the StrucSol HSGrout due to rapid de-watering.
F	Do not use StrucSol HSGrout when the air temperature is 4°C and falling, or apply over ice. In all instances, the hole MUST be thoroughly damp or primed prior to injection of the StrucSol HSGrout.

The above specification notes are for general guidance only and StrucSol reserve the right to amend as necessary.

JT Consulting, Unit 5Q, Sibley Road Industrial Estate, Barrow Upon Soar, LE12 8LP
 Tel 0116 2375082, Email: sales@strucsol.com, www.strucsol.co.uk
 Company Reg 09707405 V.A.T Reg. GB230398223

Please always wear the appropriate safety and protective clothing when installing fixing and anchor products. Always observe the necessary Health & Safety guidelines.

© All text copyright. Above information is given as guidance only and should always be verified by a suitable engineer.
 The above information is given in good faith, and may be subject to alteration at any time without prior notification.