

Installation Tips for Anyna Pro-Line In-Ground Trampolines

INSTALLATION: For installation guidance, please read the guide and reference the videos below.


For Anyna 10'x17' Rectangular Pro-Line Flat Line Trampolines – [Click Here](#)

For Anyna 12' & 14' Round Pro-Line Flat Line Trampolines – [Click Here](#)


Familiarize yourself with the proper sequence of steps for installing your new Anyna In-Ground Trampoline. These steps are:

- 1 Assemble the top frame then the bottom frame.
- 2 Attach the black plastic retaining wall plates to the frame.
- 3 Place the trampoline on the location the trampoline will be installed.
- 4 Mark the outline of the perimeter of the frame with a shovel.
- 5 Excavate the soil with the profile dimensions shown on the below image.
- 6 Place frame in the finished excavation – adjust for stability, level, and depth.
- 7 Following the Installation Manual provided in the box, install the jump mat and springs and then pad.
- 8 Begin jumping on your new Anyna In-Ground Trampoline!

Excavation profile for Rectangle:

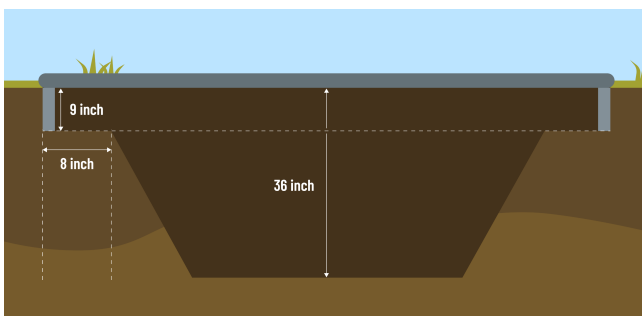

Excavation profile for Round:

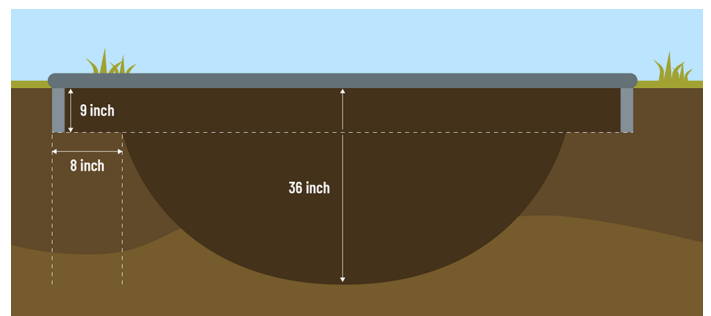

For installation assistance or other information email, text or call:

Trampolines.com **1-844-USA-JUMP** or email questions to orders@trampolines.com