


### INSTALL GUIDE


# **Adjustable Paving System**





#### PEDESTAL INSTALLATION

- 1. Fit plastic spacer gasket to top of pedestals before starting
- 2. Start in corner of area, placing 4 pedestals and levelling with each other before placing tile (FIG 1)
  - Please note: cut off 2 spacer tabs as required at edges of area. This can be done using a sharp knife of disc cutter. In corners of area (or where pedestal is directly/fully underneath tile), remove spacer gasket.
- 3. Place tile, and check for any movement/rocking, as well as the level by placing a spirit level diagonally on the tile. If required, make slight adjustments to pedestal until there is no rocking/movement and the tile is exactly level (FIG 2)
- 4. Lock the pedestals at set height with the locking nut
- 5. Place next pedestals and level with previous pedestals, before placing next tile (FIG 3)
- 6. Place next tile and repeat the process (FIG 4)

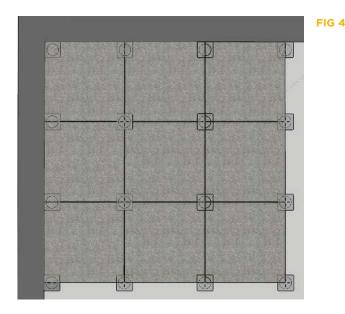

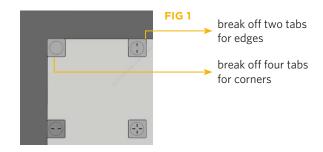

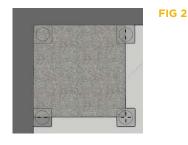

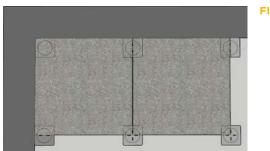





Castlepoint Castle Way Ellon AB41 9RG

sales@rynogroup.co.uk rynogroup.co.uk

RynoTerracePave Adjustable Paving System Installation Guide Rev 01 © Copyright Ryno Ltd 2020



## INSTALL GUIDE

## **Adjustable Paving System**



### **GENERAL NOTES**

- Do not move on to next tile if previous tile is rocking or moving at all
- If required, Ryno can supply perimeter spring clips to hold the paving away from the parapet and eliminate creep of the tiles
- If slope correction is required, Ryno can supply 1mm self-adhesive shims for the head of the pedestal, which can be divided in half and used to build up the lower side of the pedestal head.
- In areas receiving foot traffic, tiles should not be cut smaller than 100mm
- If required (for less durable waterproof systems), use protective rubber mats under each pedestal
- This is a floating, self-ballasting system and therefore does not need fixing down. In applications where wind uplift is an issue, contact Ryno
- This install guide covers the most common layout 600x600mm square/grid pattern. Other tile layout configurations can be achieved such as stretcher/brick bond by removing one spacer tab from each gasket and staggering the tiles. This uses approximately twice as many pedestals.

#### EQUIPMENT REQUIRED

- Spirit level, 600mm and 1800mm if possible
- Cut-off saw with diamond blade for cutting porcelain (ideally with water feed to minimise dust)
- Disc cutter with diamond blade for smaller cuts
- Tape measure
- PPE

For further advice or support call our friendly team on 01358 726000 or email sales@rynogroup.co.uk



Castlepoint Castle Way Ellon AB41 9RG

oli358 726000 sales@rynogroup.co.uk rynogroup.co.uk