

ASSEMBLY INSTRUCTIONS

Portable Collapsible Blinds



IMPORTANT!

Review ALL instructions before beginning assembly.


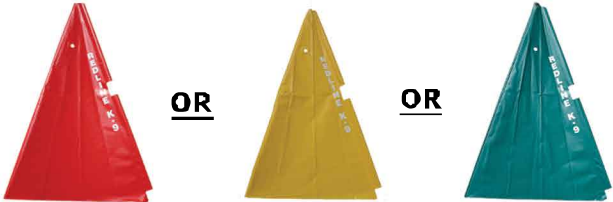



These instructions are provided to avoid problems that may occur from improper assembly. Redline K-9 and/or its distributor are not responsible for failure resulting from improper assembly.



Redline K-9
Toll Free: 1-888-856-2076
Email: support@redlinek9.com
Web: www.redlinek9.com

Revision 01 07/21/21

PARTS LIST


Collapsible Blind Pole 	Quantity 3
Sail - Red, Yellow or Green 	Quantity 1
U Bolt with locking nuts 	Quantity 1
Bungee Loop 	Quantity 1
Assembly Wrench 	Quantity 1

1

Assemble Blind Poles

Assemble blind poles by inserting small end with ball locking mechanism in to wider end of pole. Align locking mechanism with the hole in wide end.

To disassemble blind poles push ball in and pull poles apart.

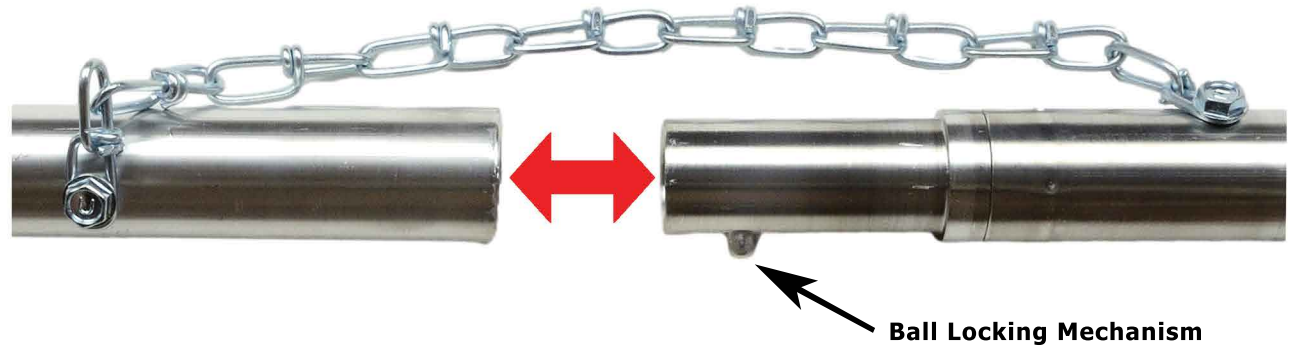

Insert Poles In Sail

2

Spread the colored sail out on a flat surface with the "REDLINE K9" lettering facing the ground and not visible.

The Sewn pocket for the middle pole should be visible on the exposed face of the sail.

From the bottom, wider section of the sail, insert one pole in each edge pocket and one pole in the middle pocket. The sharpened end of pole with the T-bar should stick out from the bottom of the sail.

3

Insert one end of the bungee loop through the hole in the top of the sail.

**4**

Remove the locking nut from one side of U bolt. Pass U bolt through outer pole and through outside loop of bungee as shown. The points of the U should be facing towards you when finished.

**5**

Pass the U bolt through the middle pole and the inner loop of bungee as shown.

**6**

Pass U bolt through the remaining outer pole and reattach locking nut. Use included wrench to tighten locking nut. Stand completed blind up.

