




Parts List

- 1 - (A) Seat Assembly
- 1 - (B) Back Assembly
- 2 - (C) Armrest Assemblies
- Hardware**
- 2 - 3 1/2" Stainless Wafer Bolts
- 2 - 2 1/2" Stainless Wafer Bolts
- 4 - 2" Stainless Wafer Bolts
- 4 - 2" Screws
- 1 - 5/32" Hex Key

Tools Required

- 5/32 Hex Key (Included)
- #2 Square Drive Bit (Not Included)

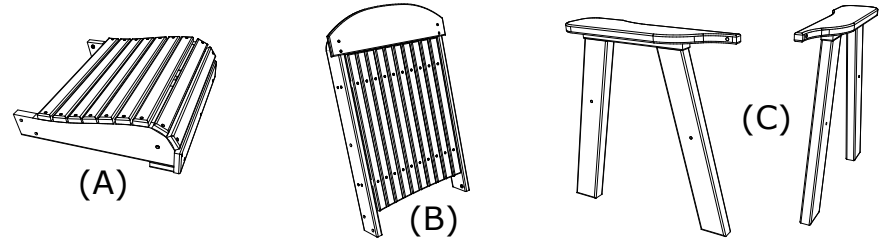

1. Attach (B) Back Assembly to (A) Seat Assembly using 1 - 2" Wafer Bolt per side, tighten with included Hex Key, Be sure to match all numbers & or letters.

2" Stainless Wafer Bolt




2. Attach (C) Armrest Assemblies to (A) Seat Assembly & (B) Back Assembly using 1 - 3 1/2" Wafer Bolt, 1- 2 1/2" Wafer Bolt, & 1 - 2" Wafer Bolt per Armrest Assembly, tighten with included Hex Key. Be sure to match all numbers & or letters.

2 1/2" Stainless Wafer Bolt


2" Stainless Wafer Bolt

3 1/2" Stainless Wafer Bolt

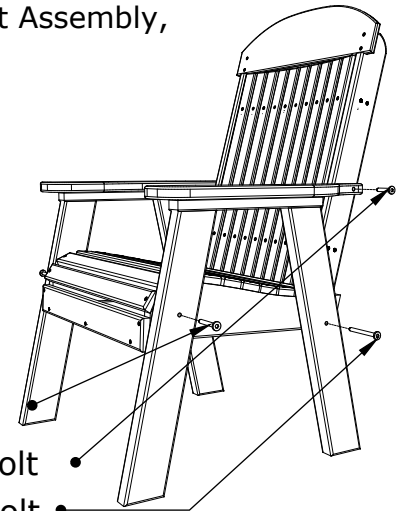

3. Install 2 - 2" Screws per side from inside of seat in predrilled holes.

2" Screw

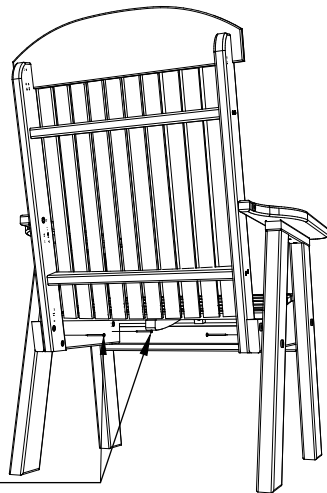

2' Classic Poly Bench Assembly Instructions

10/13/2017

R.M.