

FANBACK SWING & GLIDER ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#340 Fanback Glider



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		8	1/4" x 3" Carriage Bolt
B		8	1/4" Nut
C		8	1/4" x 3" Lag Bolt
D		2	1/4" x 3 1/2" Lag Bolt
E		6	2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. Set the back into the seat. Hold flush to seat. Fasten the back using 6 (E) 2" Screws. (Illustration 2)
3. Then fasten the arm & leg combo. Fasten the arm to the back of the seat using 1 (D) 1/4" x 3 1/2" Lag Bolt. Then fasten the legs using 4 (A) 1/4" x 3" Carriage Bolts & 4 (B) 1/4" Nuts. (Illustration 3) Repeat on the other side.
4. Attach the base rails to the glider base using 4 (C) 1/4" x 3" Lag Bolts. (Illustration 4) Repeat on the other side.



Illustration 2

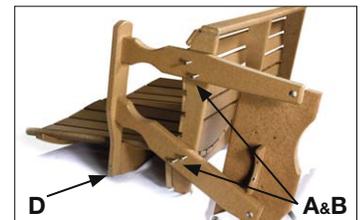


Illustration 3

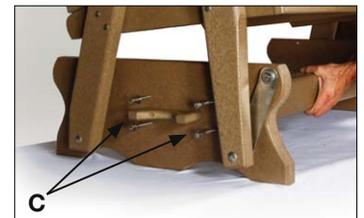


Illustration 4