

ANBACK SERIES

ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966

#352 Fan Back Swing Poly



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		2 1/4" x 3 1/2" Lag Bolt
B		8 2" Screws
C		2 5" Eye Bolt
D		2 3/8" Nut

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright on a level surface and set the back into the seat. Hold flush to seat. Fasten using 4 (B) 2" Screws. (Illustration 1)
3. Fasten 4 (B) screws on the underside (Illustration 2)
4. Fasten the arm using 1 (A) 1/4" x 3 1/2" Lag Bolt. Then fasten the leg using 1 (C) 5" Eye Bolt & 1 (D) 3/8" Nut. (Illustration 3) Repeat on the other side

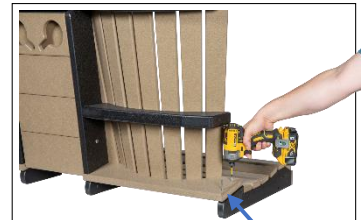


Illustration 1

B



Illustration 2

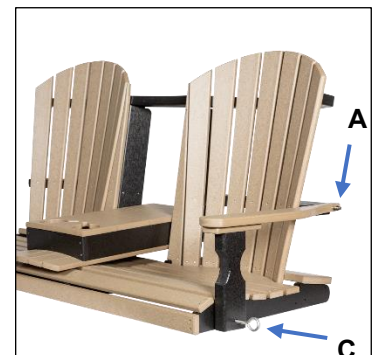


Illustration 3