

FANBACK SERIES ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#700 Folding Chair Poly



Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. Bolt the back part of the arm rest to the center brace on the back using a (C) $\frac{1}{4}$ " x $3\frac{1}{2}$ " lag bolt with washer. Also attach the front of the arm rest to the leg brace using 1 (A) $\frac{1}{4}$ " x $3\frac{1}{4}$ " carriage bolt and 1 (B) $\frac{1}{4}$ " Nut. Tighten nut securely. (Illustration 2)
3. Follow the same procedure to attach the arm on the other side. Tighten nut securely.

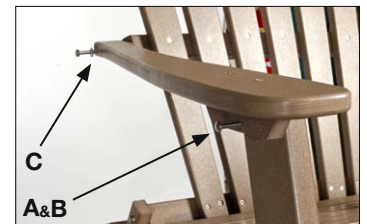


Illustration 2

Tools Required

- Hammer
- $7/16$ " Socket
- $7/16$ Wrench or Cordless Drill

Included Hardware

A		2 $\frac{1}{4}$ " x $3\frac{1}{4}$ " Carriage Bolt
B		2 $\frac{1}{4}$ " Nut
C		2 $\frac{1}{4}$ " x $3\frac{1}{2}$ " Lag Bolt