

# BALCONY & PUB ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966  
New Holland, PA

## #760 Bistro / Pub Table 60"

#760D Counter Height | #760C Counter Height | #760B Bar Height



### Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

### Included Hardware

**A**  30 2 1/2" Screws

### Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. Lay the table top face down on a protected surface. Line the legs up with the marks on the bottom of the table top (Illustration 2). Fasten the leg to the table top using 2 (A) 2 1/2" screws on each leg. (Illustration 3)
3. After you have installed all 6 table legs (Illustration 4), prepare to install the shelf. It is helpful to have another person helping you with this step.
4. Line the shelf up with the marks on the legs. Using the pre-drilled holes on the legs, fasten the legs to the shelf using 2 (A) 2 1/2" screws on each leg. (Illustration 5)
5. Then fasten the angle trim to the shelf using 1 (A) 2 1/2" screws on each leg. This is important to stabilize the table. (Illustration 6)



Illustration 2



Illustration 3



Illustration 4

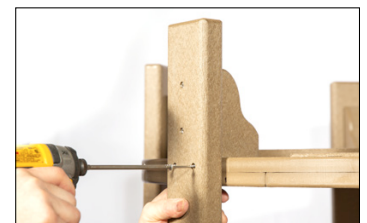


Illustration 5



Illustration 6