

Adirondack Chair

ASSEMBLY MANUAL



PATIOVA.COM

610-857-1359

**6649 North Moscow Rd
Parkesburg, PA 19365**



Thank you for your Patiova Furniture Purchase.


We are excited for the great times and memories you will share while enjoying your new Patiova furniture.

Let's gets started on the assembly!


This manual is designed to simplify the assembly process with step-by-step instructions and pictures to help along the way.

We are confident that you will be happy with the ease of the assembly process.


Parts List

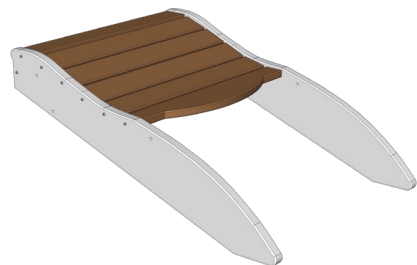


Seat Assembly

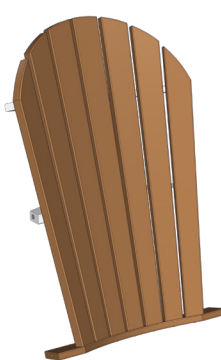


Back Assembly

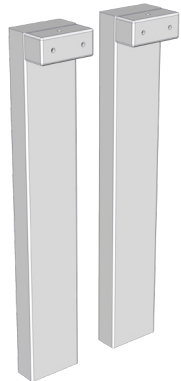

Legs

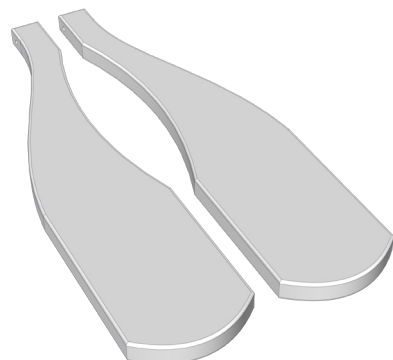


Arm Rests

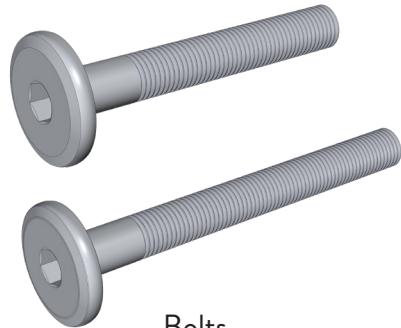

Bolts


| Description | QTY |
|---------------|-----|
| Seat Assembly | 1 |
| Back Assembly | 1 |
| Arm Rest | 2 |
| Legs | 2 |
| 2" Bolts | 6 |
| 1.5" Bolts | 4 |

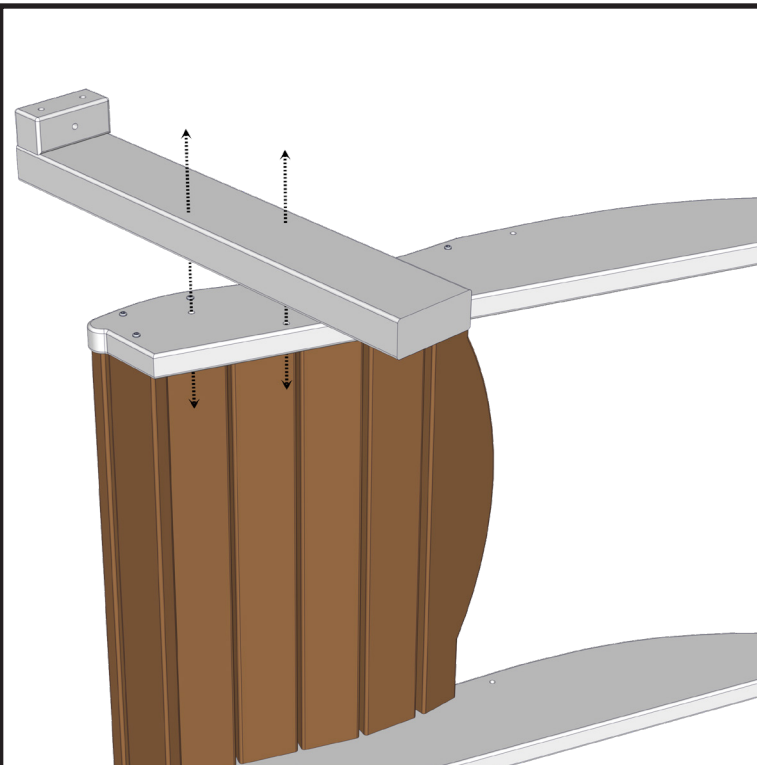

Step 1.


Start the assembly by placing the seat assembly on its side. Place one of the legs on top of the seat assembly and align the holes as shown in the illustration above.

There is a left and right leg, make sure you are using the correct one for that side.

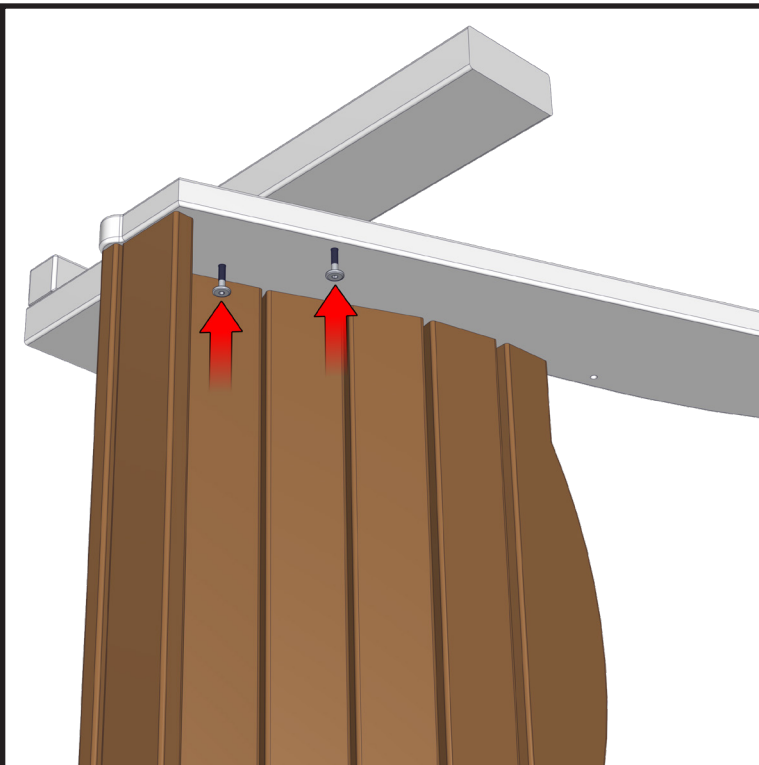


Step 2.

Fasten the leg to the seat assembly using 1 ½" bolts. Only hand tighten all bolts for now.

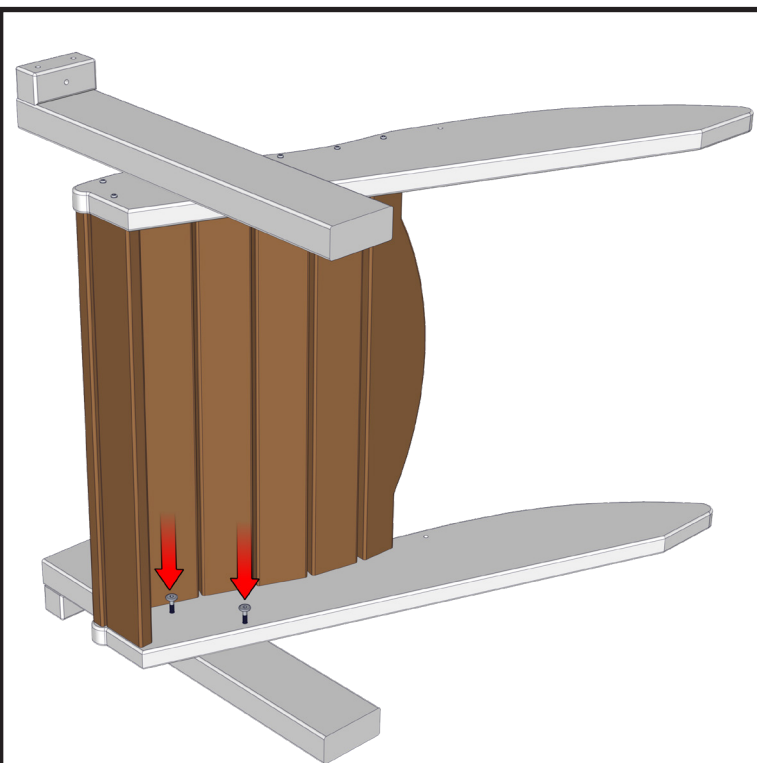

Step 3.

Repeat the last two steps to install the other leg.

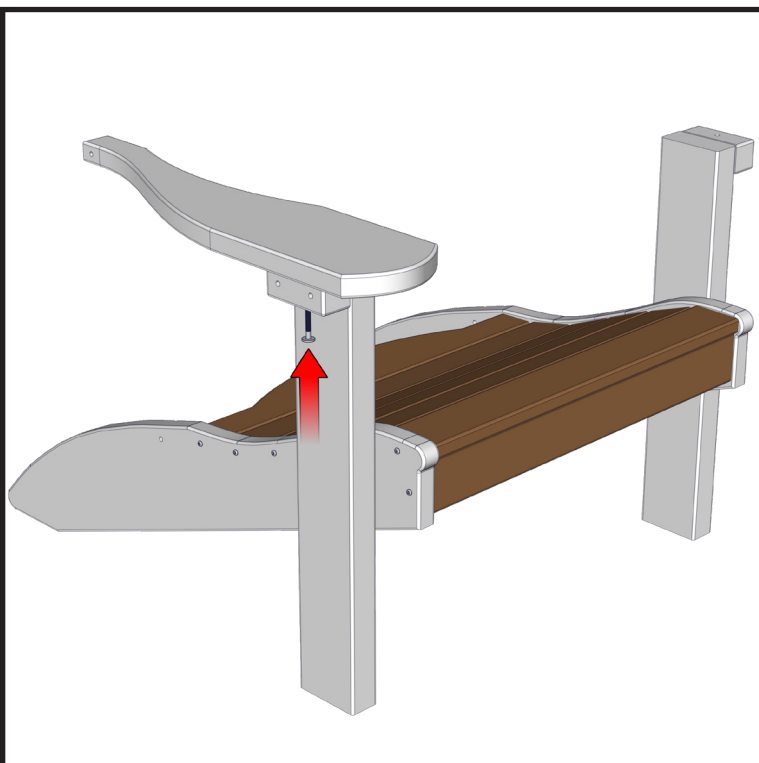

Step 4.


Set the chair upright then place one of the arm rests on top of the leg. Fasten the arm rest to the leg using a 2" bolt through the pre-drilled hole in the leg.




Step 5.
Repeat the last step to install the other arm rest.



Step 6.
Place the assembled back in position on the chair and align the holes as shown above.

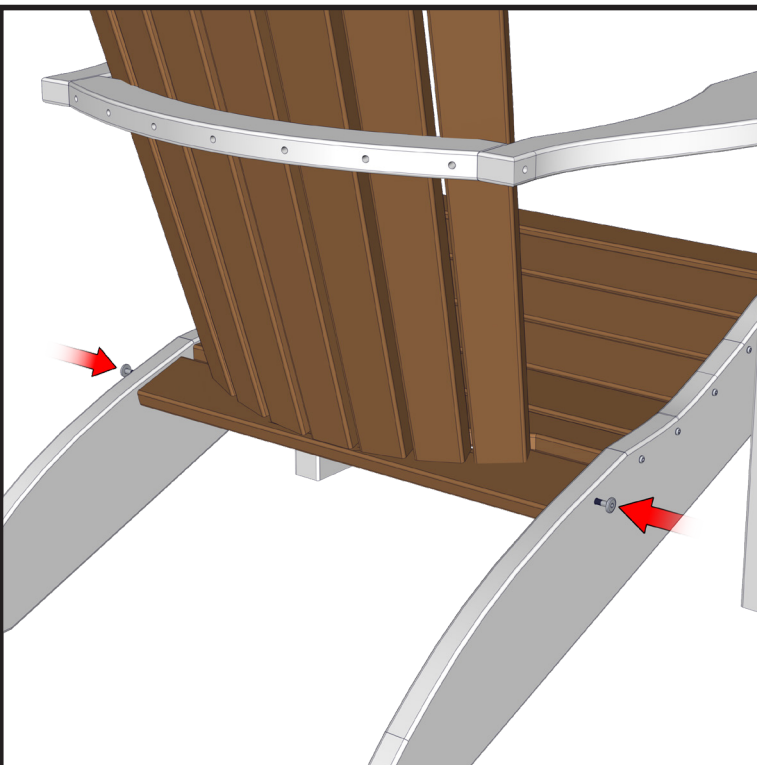

Step 7.
Use 1 1/2" bolts through the pre-drilled holes on the side supports to fasten the back of the chair.

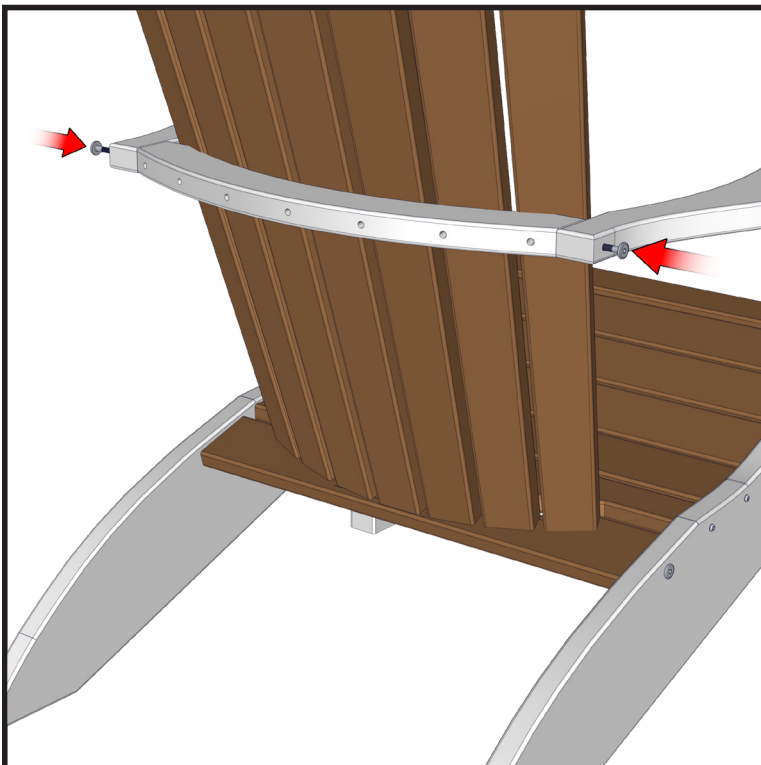


Step 8.
Use 2" bolts through the arm rests to finish installing the back of the chair.


Once the chair is finished you can tighten all the bolts on the chair.



Use these steps to install the cupholder if your chair came with one.

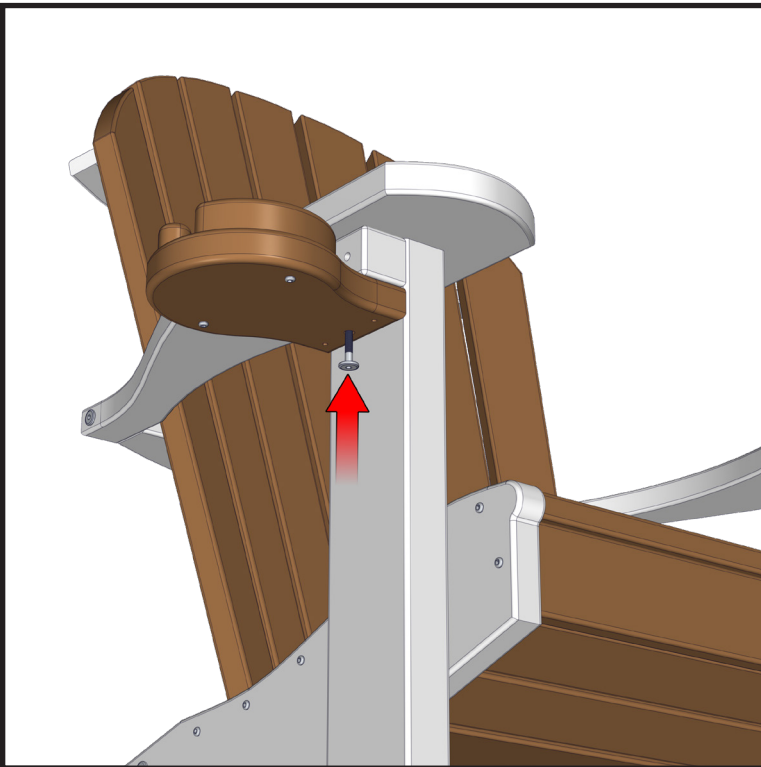

Step 1.
Remove the 2" bolt holding the arm rest to the leg and place the cup holder up against the leg support. Fasten the cupholder with a 2 ½" bolt.

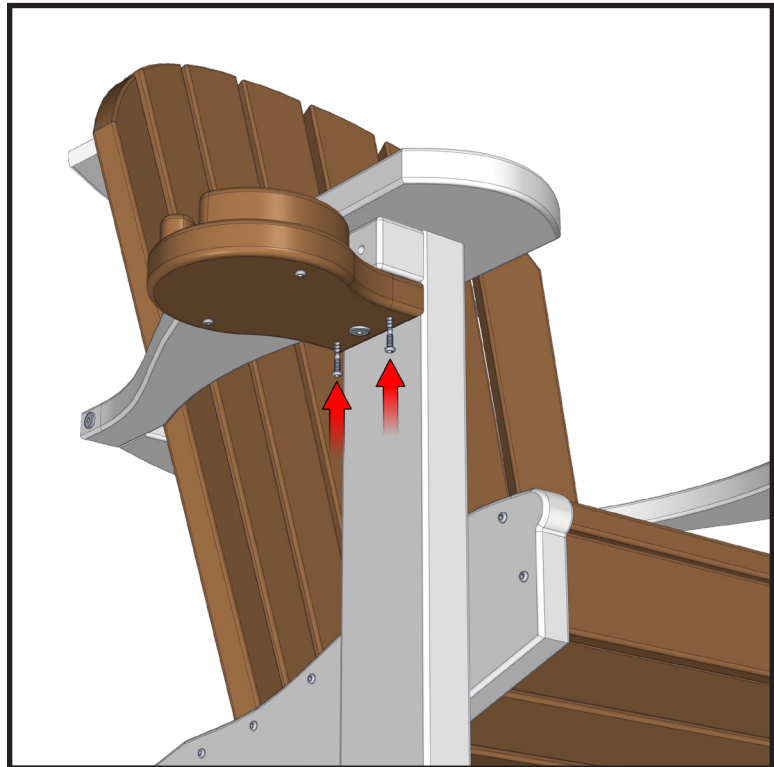

Step 2.
Use two 2" screws through the pre-drilled holes in the cupholder to finish installing it.