
ASSEMBLY INSTRUCTIONS CL102N Adirondack Rocking Chair

Tools Not Included but Required: 7/16" wrench, either a power tool, hand driver or ratchet wrench that will accept a 1/4" hex drive bit.

Tools Included: #2 Square Driver Bit, 4mm Driver Bit

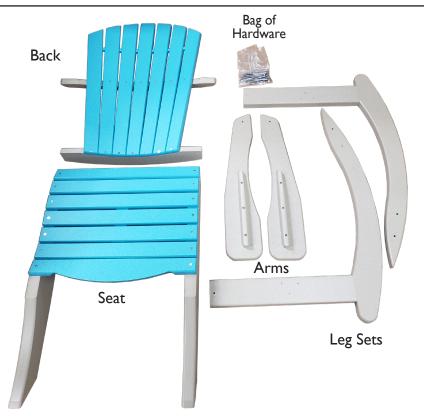


Parts Included:

- 1 Seat
- 1 Back
- 2 Arms
- 2 Leg Sets
- 1 Bag of Hardware

Stainless Steel Hardware Included:

- 10 3-1/2" Bolts
- 2 2 3/4" Bolts
- 2 2-1/2" Bolts
- 2 2" Deck Screws
- 14 Flanged Lock Nuts

Step 1

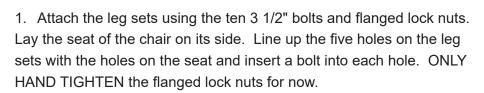



2. Attach the arms to the front legs using two 2 3/4" bolts and flanged lock nuts. The arm support under each arm should be on the outside of the front leg. The bolt should go through the front leg first and then through the arm support underneath the arm. HAND TIGHTEN the flanged locks nuts for now.

3. Attach the back to the seat using the two 2" deck screws. Make sure to push the back tightly against the back edge of the seat.





Step 4

4. Attach the arms to the upper support of the back using the two 2 1/2" bolts and flanged lock nuts. The bolt goes from the top of the arm down through the back support. You may now fully tighten these nuts along with all other remaining nuts.



PerfectChoice® / furniture

The perfect choice for lasting comfort and value.

477 Vogt Lane • Chilton, WI 53014 • 800-817-8833 www.backyardnatureproducts.com

Your outdoor furniture is guaranteed for 20 years to never crack, split or fade. To clean, wash with soap and water. For tough stains, use a solution with water and soft scrub with bleach or try our furniture cleaner.