


Assembly Instructions

LCC-108 Rock-A-Tee Table

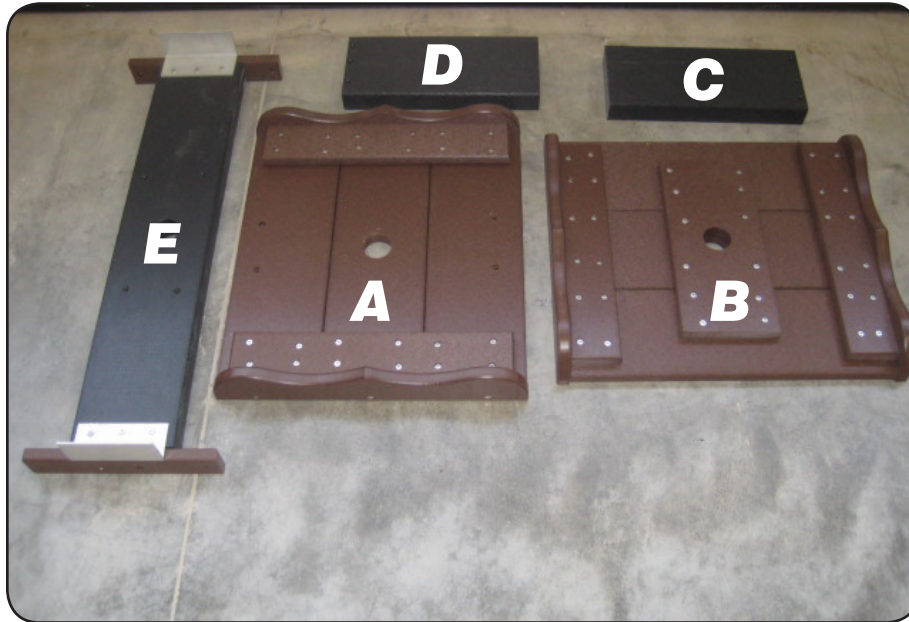

Required Tools:

- Cordless Drill
- #2 Square Drive bit

Hardware:

- (10) 2 1/2" Screws
- (8) 2" Screws



Step 1

Place cardboard on the floor, lay table (B) up-side-down, fasten (C) and (D) to ends of batton through holes provided using (6) 2 1/2" screws. NOTE: (C) and (D) are placed upright



Step 2

Now place table (A) upside down on top of what you have assembled lining up with other table fasten with (4) 2 1/2" screws.

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

Assembly Instructions

LCC-108 Rock-A-Tee Table



Step 3

Now place part (E) on top of assembly leaving previously assembled table placed upside down fasten with (4) 2" screws.

Step 4

Position your two Rock-aTees side by side and slide your T-Table brackets in slots provided at the base then fasten into bases with (4) 2" screws through predrilled holes.

Complete!



WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212

© 2017