

# **GENERAL SPECIFICATIONS ADIRONDACK CHAIR** 303/4" Overall Width 34//5" Overal Depth Overall Height 40" Seat Height 16" $23\frac{1}{2}$ Seat Width Seat Depth 171/5" Arm Height 24" Backrest Height 32" Weight 47 lb.

## **COMPONENTS**

(1) SEAT ASSEMBLY

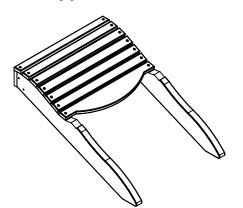


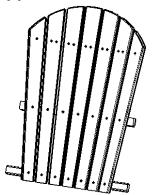



(1) ARMREST & LEG **ASSEMBLY (RIGHT)** 

(1) ARMREST & LEG **ASSEMBLY (LEFT)** 





### **HARDWARE**

PART NO.	DESCRIPTION	QTY.
1	2 1/2" Screw	2
2	1/4" Washer	2
3	1/4"-10 x 3" Lag Bolt	2
4	1/4"-20 Flange Nut	4
5	1/4"-20 x 3 1/2" Carriage Bolt	4

NOTE: PART NUMBERS CORRESPOND TO BUBBLES WITH ASSEMBLY INSTRUCTIONS.



#### P.O. BOX 455, BERLIN OH 44610

PHONE: (330) 893-4212 | FAX: 330.893.6406 EMAIL: SALES1@COTTAGEKITS.COM ADMINISTRATION: 4550 SR 39, MILLERSBURG, OH 44654 DISTRIBUTION: 4070 SR 39, MILLERSBURG, OH 44654

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN
THIS DRAWING IS THE SOLE PROPERTY
OF WILDRIDGE. ANY
ERPPODUCTION IN PART OR AS A
WHOLE WITHOUT THE WRITTEN
PERMISSION OF WILDRIDGE IS
PROHIBITED.

ITEM NO. LCC-110

SHEET 1 OF 2

### **ASSEMBLY INSTRUCTIONS**

#### **REQUIRED TOOLS**









POWDER DRILL NO. 2 SQUARE RUBBER/PLASTIC 7/16" WRENCH **DRIVE BIT** MALLET

**OPTIONAL:** 









RATCHET OR HEX SHANK TO POWER **SOCKET SQUARE DRIVE ADAPTER** 


#### 1. ATTACH ARMREST & LEG ASSEMBLIES TO SEAT **ASSEMBLY**

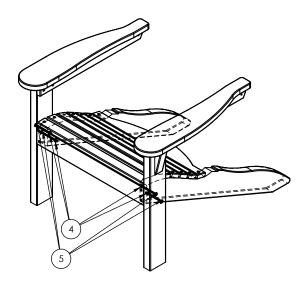

Attach left and right legs to seat assembly using  $3\frac{1}{2}$ " carriage bolts, and 4" flange nuts. Ensure that armrest support wedges are facing outward.

### 2. ATTACH BACKREST ASSEMBLY TO ARMRESTS & SEAT **ASSEMBLY**

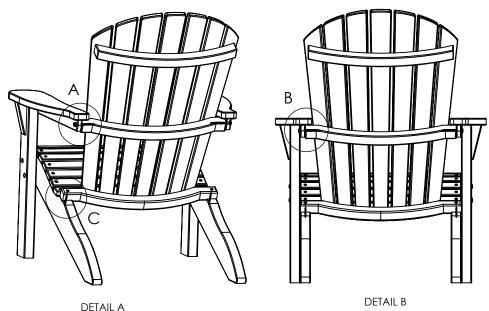

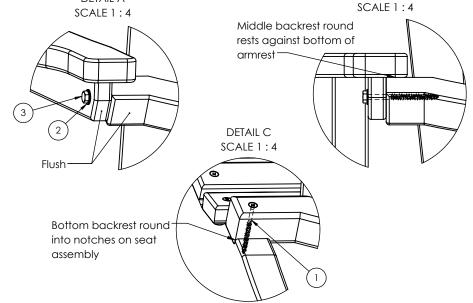

lag bolt and  $\frac{1}{4}$ " washer.



#### P.O. BOX 455, BERLIN OH 44610

PHONE: (330) 893-4212 | FAX: 330.893.6406 EMAIL: SALES1@COTTAGEKITS.COM ADMINISTRATION: 4550 SR 39, MILLERSBURG, OH 44654 DISTRIBUTION: 4070 SR 39, MILLERSBURG, OH 44654

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN
THIS DRAWING IS THE SOLE PROPERTY
OF WILDRIDGE. ANY
ERPPODUCTION IN PART OR AS A
WHOLE WITHOUT THE WRITTEN
PERMISSION OF WILDRIDGE IS
PROHIBITED.

ITEM NO. LCC-110 SHEET 2 OF 2

2. Attach bottom backrest round to seat assembly using  $2^{1/2}$ " screws.

1. Attach armrest support to middle backrest round with 3"