

Assembly Instructions


LCC-113 Child's Adirondack Chair

Required Tools:

- Hammer
- 7/16" Wrench or Socket
- #2 Square Drive bit
- Cordless Drill

Hardware:

- (2) 1/4" x 2 1/2" Bolts
- (8) 1/4" x 2" Bolts
- (10) 1/4" Flange Nuts
- (4) 1 1/4" Screws

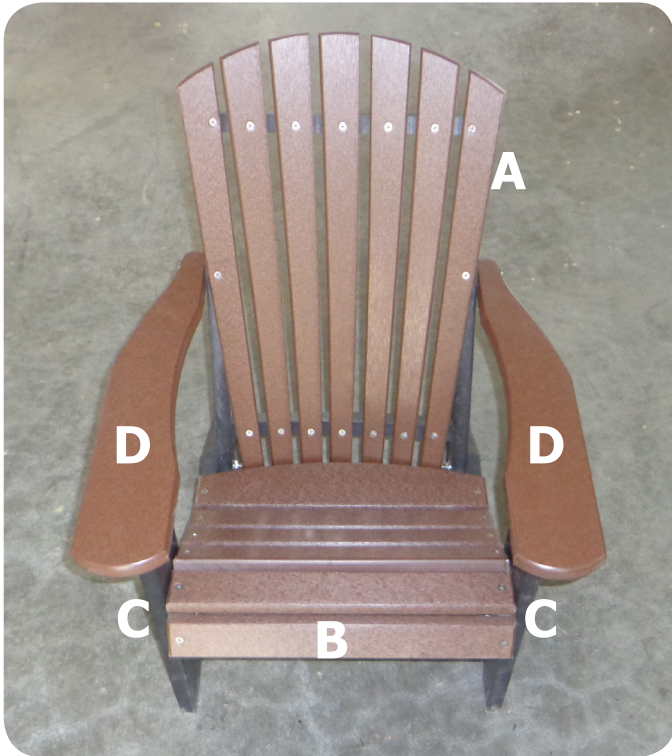

Step 1

Using (4) 1/4" x 2" bolts and (4) 1/4" nuts, attach back (A) to seat (B).



Step 2

Using (4) 1/4" x 2" bolts and (4) 1/4" nuts, attach legs (C) to seat (B).



Step 3

Using (2) 1/4" x 2 1/2" bolts, and (2) 1/4" nuts, attach arm rests (D) to chair back (A) and using (4) 1 1/4" screws attach arm rests (D) to chair legs (C). Measure 3/4" from inside as shown.



www.wildridge.com
330-893-4212