


Required Tools:

- Hammer
- 7/16" Wrench or Socket
- #2 Square Drive bit
- Cordless Drill

Hardware:


- (2) 1/4" x 2 1/2" Bolts
- (8) 1/4" x 2" Bolts
- (10) 1/4" Flange Nuts
- (4) 1 1/4" Screws

- A = Back**
- B = Seat**
- C = Legs**
- D = Arms**

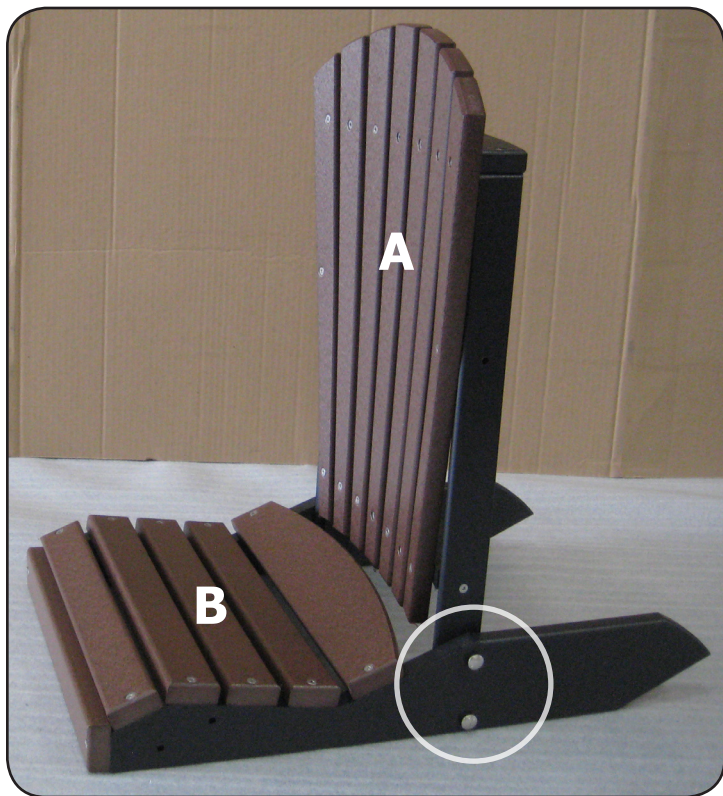


Step 1

Using (2) 1/4" x 2" bolts and (2) 1/4" nuts, attach back (A) to seat (B). Repeat on other side.

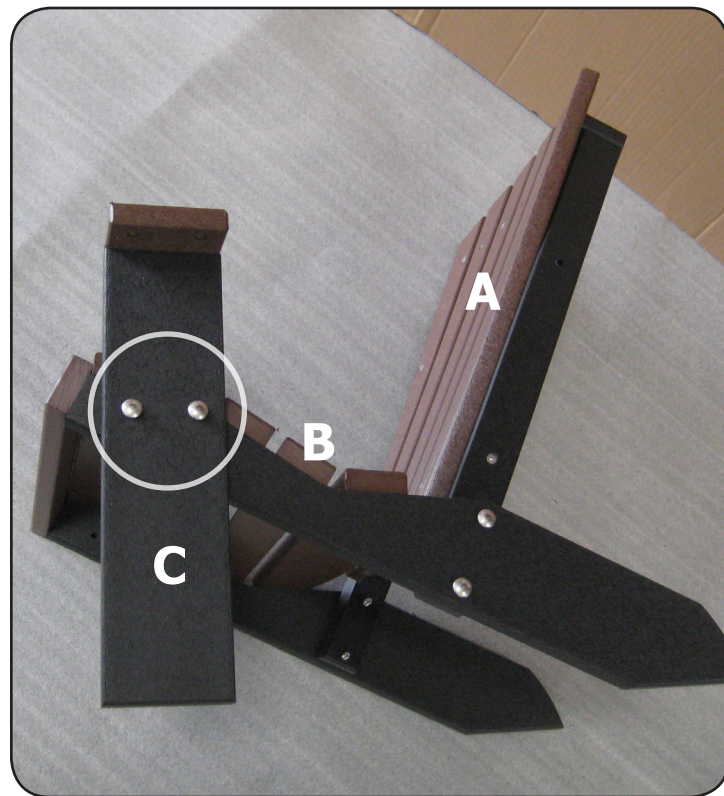


Step 2

Using (2) 1/4" x 2" bolts and (2) 1/4" nuts, attach leg (C) to seat (B). Repeat on other side.

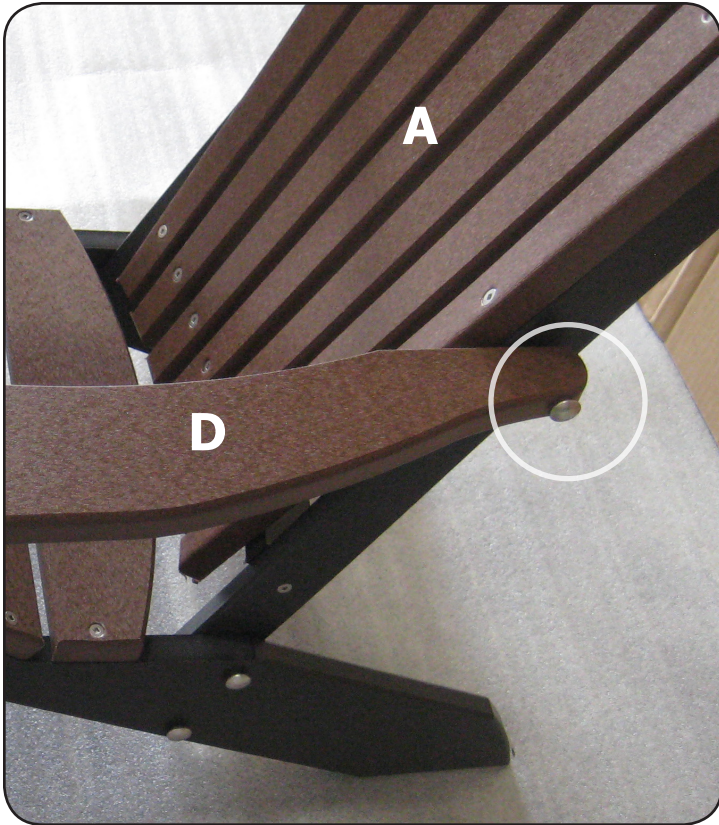

Step 3
Using (1) 1/4" x 2 1/2" bolts, and (1) 1/4" nuts, attach arm rest (D) to chair back (A). Repeat on other side.

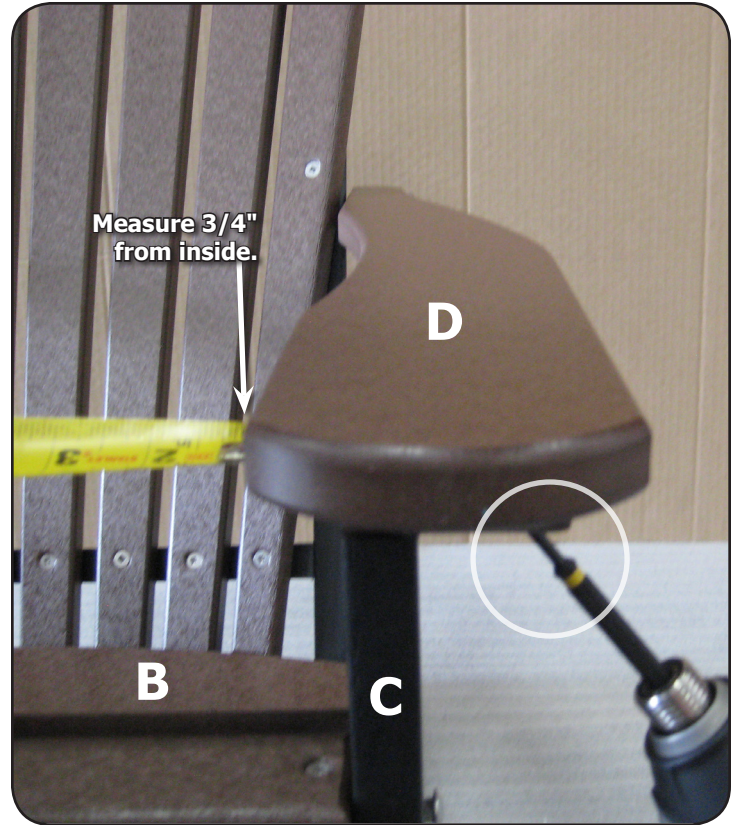

Step 4
Measure 3/4" from inside as shown. Using (2) 1 1/4" screws attach arm rest (D) to chair leg (C). Repeat on other side.



Complete