


Assembly Instructions

LCC-114 Adirondack Chair

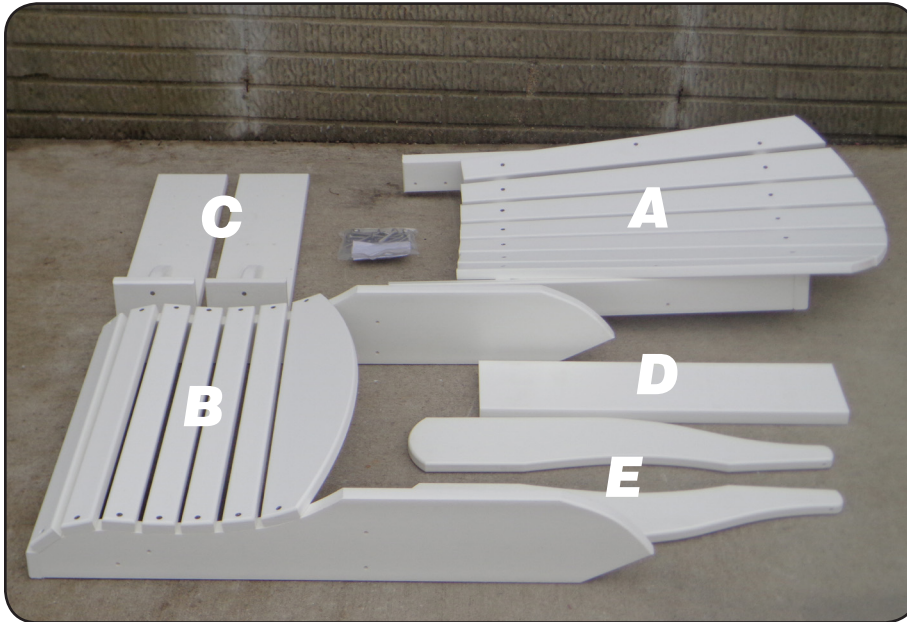

Required Tools:

- 7/16" Wrench or Socket
- Hammer
- #2 Square Drive Bit
- Cordless Drill

Hardware:

- (8) 1/4" x 2 1/4" Bolts
- (10) 1/4" Flange Nuts
- (4) 2" Screws
- (2) 1/4" x 2 3/4" Bolts
- (8) 1 1/4" screws



Step 1

Using (4) 1/4" x 2 1/4" bolts and (4) 1/4" nuts, attach back (A) to seat (B).



Step 2

Using (4) 1/4" x 2 1/4" bolts and (4) 1/4" nuts, attach legs (C) to seat (B).

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

Assembly Instructions

LCC-114 Adirondack Chair



Step 3

Using (4) 2" screws, attach brace (D) to legs (C).



Step 4

NOTE: measure a 1" overhang from the inside as shown.
Using (2) 1/4" x 2 3/4" bolts and (2) 1/4" nuts attach arm rests (E) to chair back (A) and using (8) 1 1/4" screws, attach arm rests (E) to chair legs (C).

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212

© 2017