

#### Required Tools:


- 1/2" Wrench Or Socket
- Mallet/Non Marring Hammer  
(Do Not Use Metal Headed Hammer)

#### Hardware:

- (4) 5/16" X 5" Bolts
- (6) 5/16" X 3 1/2" Bolts
- (10) 5/16" Flange Nuts

#### Parts:

- A = Chair Back
- B = Chair Seat
- C = Right Arm Assembly
- D = Left Arm Assembly

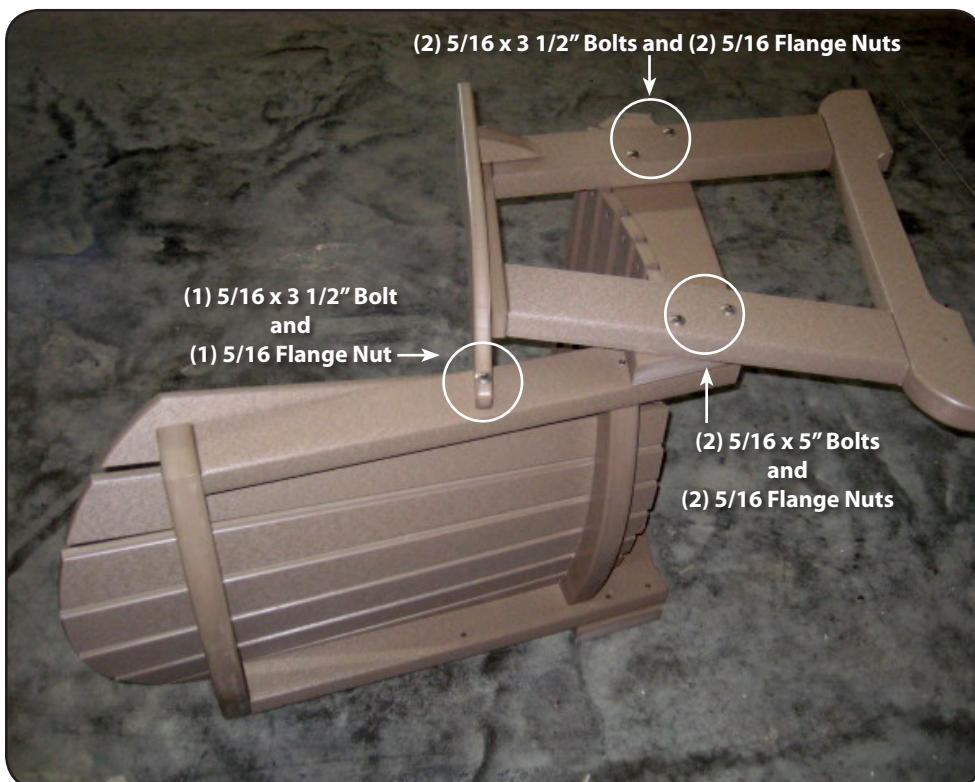

#### Step 1

Using (2) 5/16" x 5" Bolts, (3) 5/16" x 3 1/2" Bolts and (5) 5/16" Flange Nuts, attach the right arm assembly (C) to the right side of the chair back (A) and chair seat (B). DO NOT TIGHTEN FLANGE NUTS AT THIS TIME. Repeat on other side using the left arm assembly (D).



#### Step 2

Once chair is together, adjust chair so it sits evenly. Using a 1/2" wrench or socket, go back and tighten all connecting points. Your chair is now complete!

*Thank you for purchasing from Wildridge.*