


Assembly Instructions

LCC-117 High Fan Back Chair

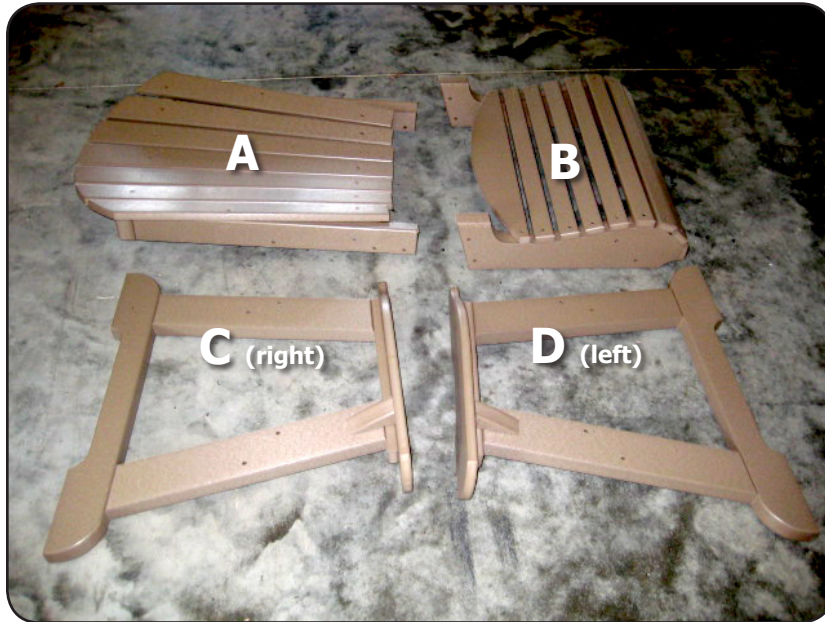


Required Tools:

- 1/2" wrench or socket
- Hammer

Hardware:

- (4) 5/16" x 5" Bolts
- (6) 5/16" x 3 1/2" Bolts
- (10) 5/16" Flange Nuts

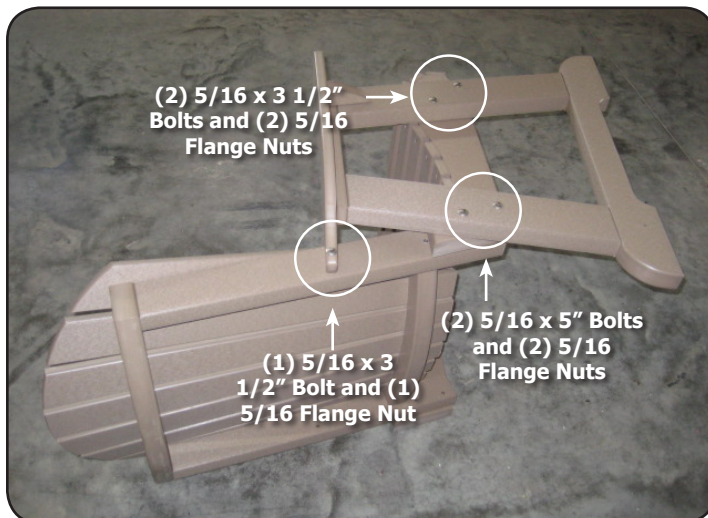

Step 1

Using (2) 5/16" x 5" Bolts, (3) 5/16" x 3 1/2" Bolts and (5) 5/16" Nuts, attach leg/arm (C) to the right side of the chair back (A) and chair seat (B). DO NOT TIGHTEN NUTS AT THIS TIME. Repeat on other side using leg/arm (D).



Step 2

Once chair is together, adjust chair so it sits evenly. Using a 1/2" wrench or socket, go back and tighten all connecting points.

Complete!



www.wildridge.com

330-893-4212