
## **ASSEMBLY INSTRUCTIONS**

 ${
m WILDRIDGE}^{\circ}$ 

HERITAGE HIGH ADIRONDACK

LCC-119

330-893-4212 • www.wildridge.com

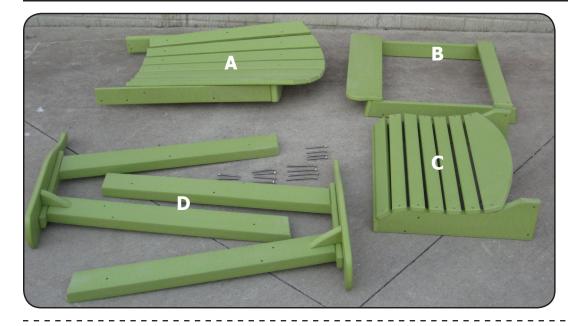

#### **Required Tools:**


- 7/16" Wrench or Socket
- Mallet/Non-Marring Hammer (Do not use Metal Headed Hammer)

#### **Hardware:**

- (4) 1/4" x 4" Bolts
- (4) 1/4" x 3" Bolts
- (6) 1/4" x 2 3/4" Bolts
- (14) 1/4" Flange Nuts

#### Parts:

- A: Chair Back
- B: Foot Rest
- C: Chair Seat
- D: Legs

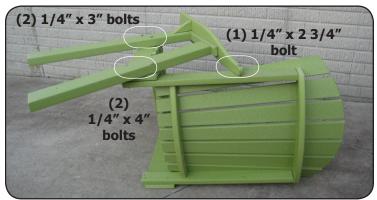

# **Step 1**Using (2) 1/4" x 4" bolts, (2) 1/4" x 3" bolts, (1) 1/4" x 2 3/4" bolt, (5) 1/4", flange nuts, attach legs (D) to chair back (A) and chair seat (C) DO NOT TIGHTEN FLANGE NUTS AT THIS TIME.



#### Step 2

Turn chair over and repeat "Step 1" to attach leg to other side. Once chair is together adjust it so it sits evenly and using a 7/16" wrench or socket, go back and tighten all the flange nuts.



### Step 3

Using (4) 1/4" x 2 3/4" bolts and (4) 1/4" flange nuts, attach the chair legs (D) to the foot rest (B). Tighten using a 7/16" wrench or socket.

Your chair is now complete.

Thank you for purchasing from Wildridge.