


# Assembly Instructions

## LCC-119 High Adirondack

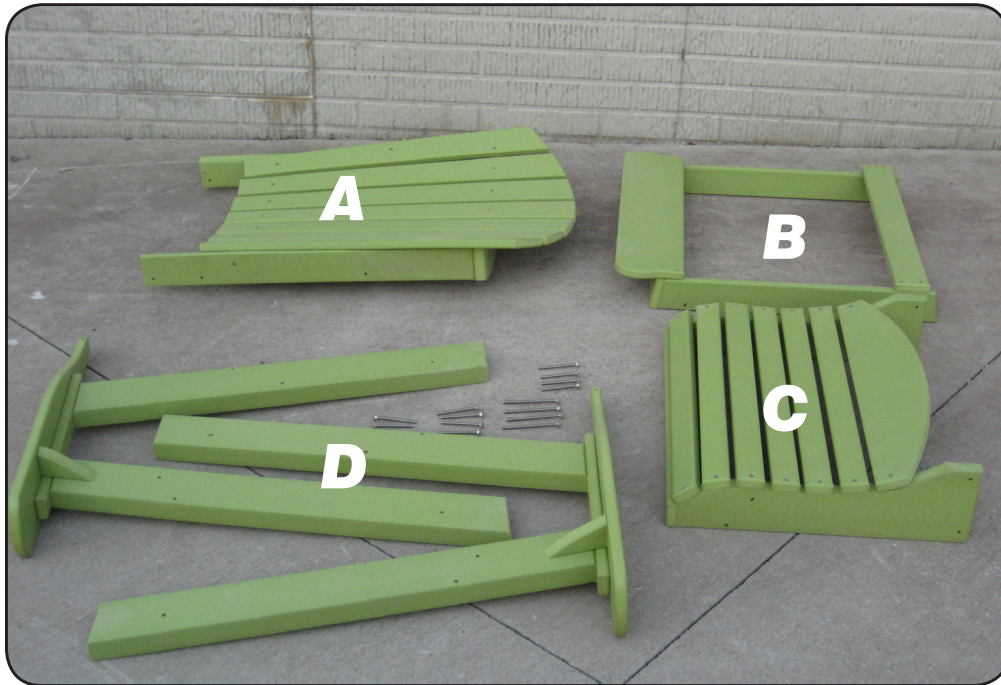


### Required Tools:

- 7/16" Wrench or Socket
- Hammer


### Hardware:

- (4) 1/4" x 4" Bolts
- (6) 1/4" x 3" Bolts
- (4) 1/4" x 2 3/4" Bolts
- (14) 1/4" Flange Nuts

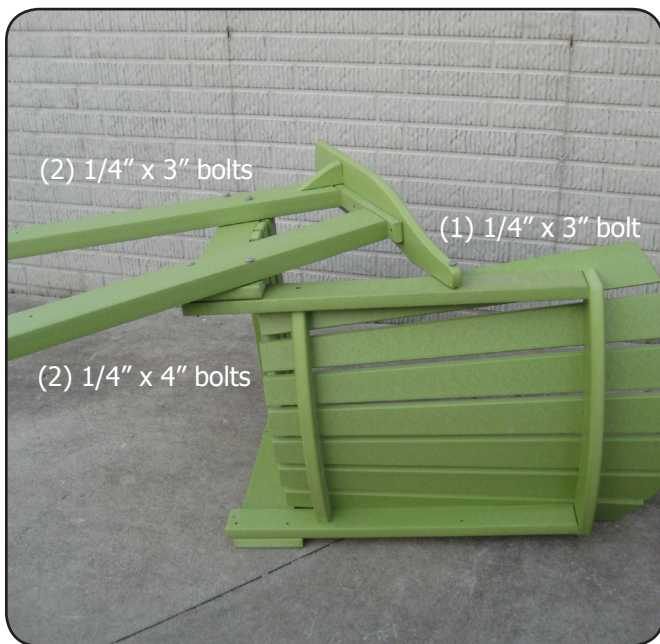

### Step 1

Using (2) 1/4" x 4" bolts, (3) 1/4" x 3" bolts, (5) 1/4" flange nuts, attach legs (D) to chair back (A) and chair seat (C)- DO NOT TIGHTEN NUTS AT THIS TIME.

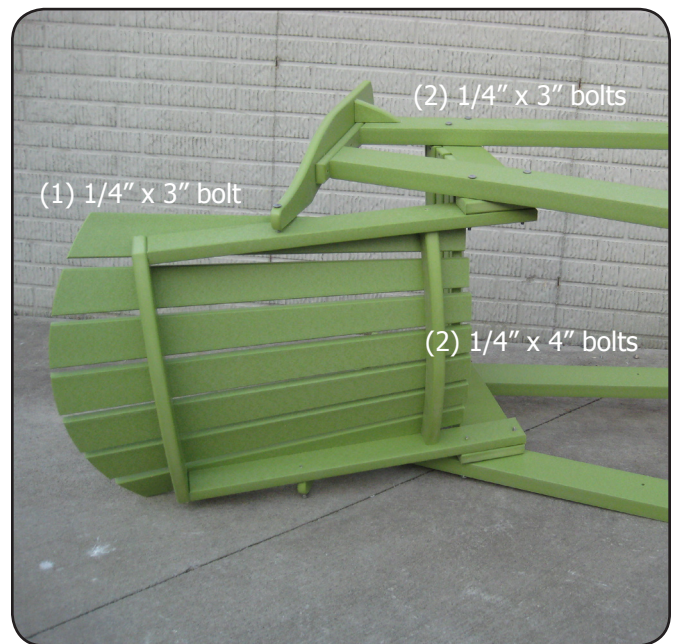

### Step 2

Turn Chair over and repeat Step 1 to attach leg to other side. Once chair is together using a 7/16" wrench or socket, go back and tighten all connecting points with nuts provided.

**WILDRIDGE**<sup>®</sup>  
PURVEYORS OF QUALITY POLY FURNITURE

# Assembly Instructions

## LCC-119 High Adirondack

### Step 3

Using (4) 1/4" x 2 3/4" bolts and (4) 1/4" flange nuts, attach the chair legs (D) to the foot rest (B). Tighten using a 7/16" wrench or socket.

**Complete!**



[www.wildridge.com](http://www.wildridge.com)

330-893-4212

© 2017