**Required Tools:**

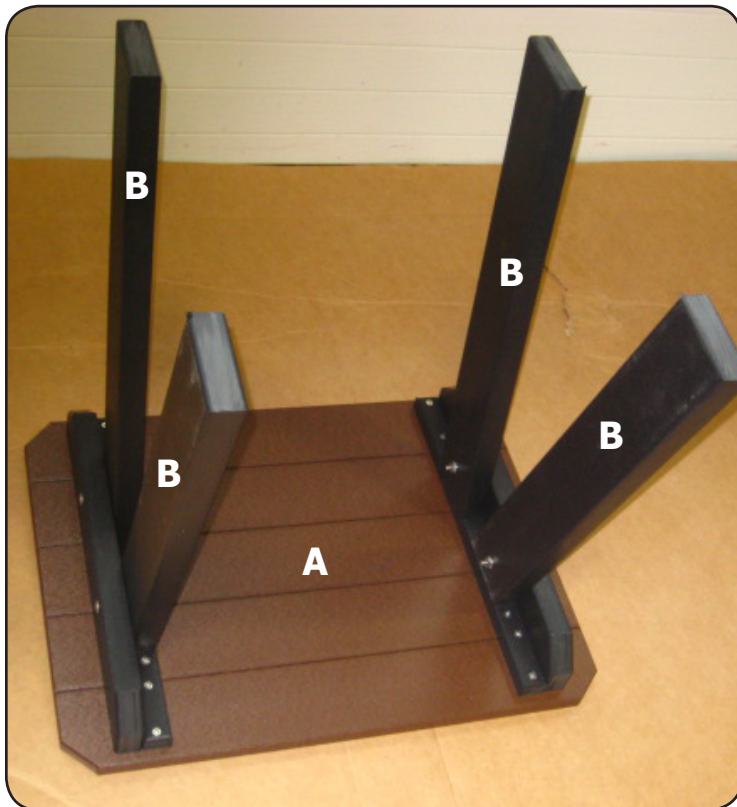
- Mallet/Non Marring Hammer
(Do not use Metal Headed Hammer)
- 7/16" Wrench or Socket

Hardware:

- (8) 1/4" x 2 3/4" Bolts
- (8) 1/4" Flange Nuts

Parts:

- A = (1) Table Top
- B = (4) Table Legs
- C = (1) Shelf

**Step 1**

Lay the table top (A) upside down on a soft surface, as shown. Using (1) 1/4" x 2 3/4" bolt and (1) 1/4" flange nut per leg, attach each leg to the table top through the holes provided. **DO NOT TIGHTEN FLANGE NUTS AT THIS TIME.**

**Step 2**

Using (4) 1/4" x 2 3/4" bolts and (4) 1/4" flange nuts, attach the shelf (C) to the legs, as shown, through the holes provided. Making sure the table is level, tighten all the flange nuts. Your table is now complete! *Thank you for purchasing from Wildridge.*