


Assembly Instructions

LCC-124 Garden Bench

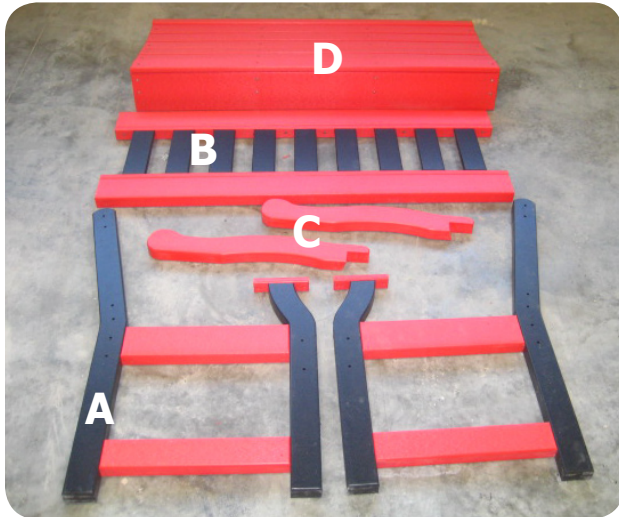

Required Tools:

- Cordless Drill
- #2 Square Drive bit
- #3 Square bit

Hardware:

- (16) #14 x4" Screws
- (4) 2" Screws
- (2) 2 1/2" Screws



Step 1

Set seat (D) on end, place side assembly (A) on top, measure 1" as shown. Space evenly on sides and fasten through holes provided with (4) 4" screws.



Step 2

Set back (B) on end as shown above, position evenly and fasten with (4) 4" screws through holes provided. Repeat on other side.



Step 3

Put arm rest (C) on top of front leg as shown below. NOTE: left and right. Fasten with (2) 2" screws through pocket holes as shown (Space equally on sides).



Step 4

Fasten back of arm rest with (1) 2 1/2" screw. Repeat on other side.



Complete!

WILDRIDGE
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com
330-893-4212