


# Assembly Instructions

## LCC-129 Double Adirondack

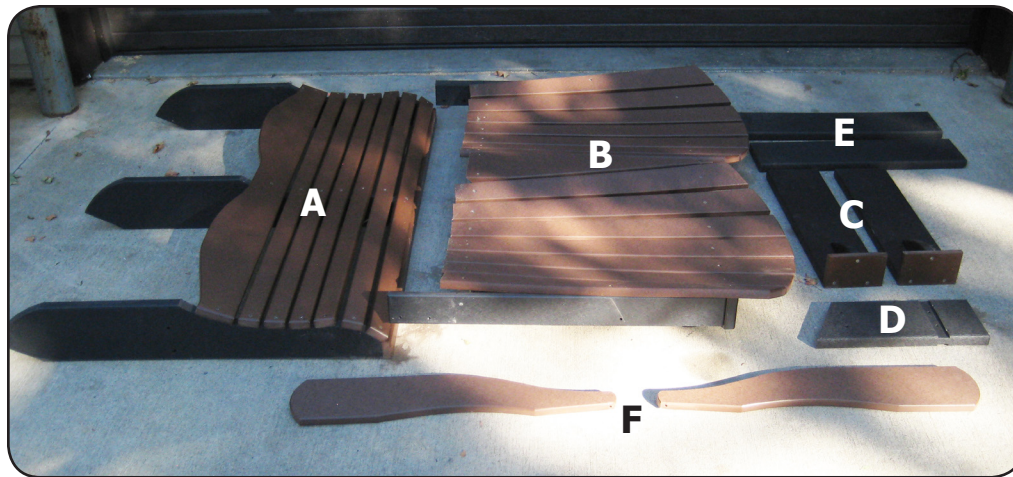

### Required Tools:

- Hammer
- 7/16" socket or wrench
- Cordless Drill
- #2 Square Drive Bit


### Hardware:

- (10) 1/4" x 2 1/2" Bolts
- (2) 1/4" x 3" Bolts
- (12) 1/4" Flange Nuts
- (2) 2 1/2" Screws
- (8) 1 1/4" Screws
- (8) 2" Screws



### Step 1

Position Seat (A) and back (B) as shown and fasten with (4) 2 1/2" Bolts and Nuts.

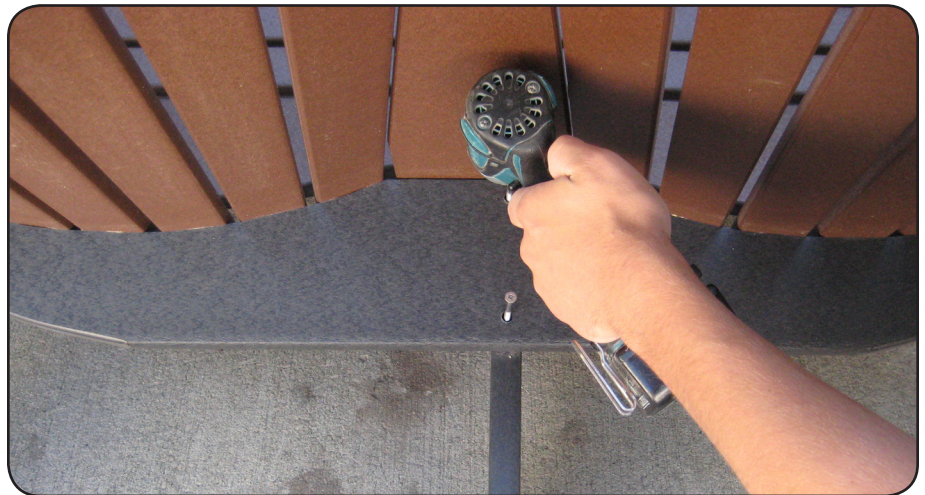


### Step 2

Fasten lower back support to middle seat support with (2) 2 1/2" Screws through predrilled holes as shown.



### Step 3

Fasten outside legs (C) as shown with (4) 2 1/2" Bolts and Nuts.

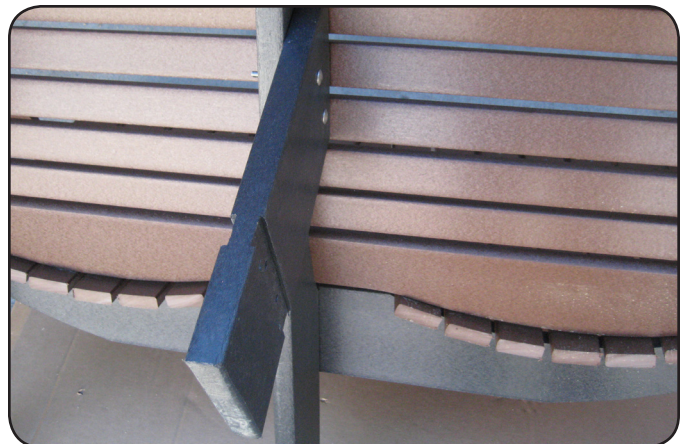

### Step 4

Fasten middle leg (D) as shown on right side of middle seat support with (2) 2 1/2" Bolts and Nuts.



# Assembly Instructions

## LCC-129 Double Adirondack



**Step 5**  
Fasten leg support (E) in groove with (4) 2" screws (2 on each side).



**Step 6**  
Fasten other leg support (E) in groove with (4) 2" Screws. NOTE: Screws in middle have to be screwed from bottom as shown.



**Step 7**  
Fasten arm rest (F) to siderail in back with (1) 3" bolt and nut. Now measure 1" from inside of leg as shown and fasten on outside with (4) 1 1/4" screws as shown. Repeat on other side.



**Complete!**



[www.wildridge.com](http://www.wildridge.com)  
330-893-4212