

Required Tools:

- Mallet/Non Marring Hammer
(Do not use Metal Headed Hammer)

- 7/16" Wrench or Socket

Hardware:

-(4) 1/4" x 5" Bolts

-(4) 1/4" x 3 1/2" Bolts

-(4) 1/4" x 2 3/4" Bolts

-(14) 1/4" Flange Nuts

-(2) 1/4" x 3 1/4" Bolts

Parts:


A = (1) Chair Back

B = (1) Foot Rest

C = (1) Chair Seat

D = (1) Right Arm Rest

E = (1) Left Arm Rest

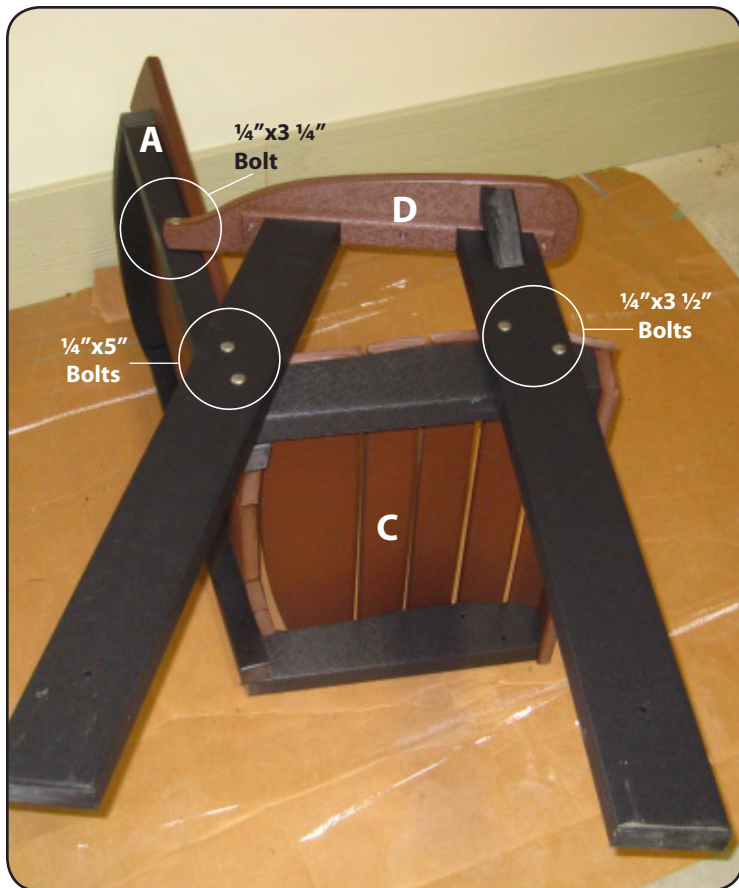

Step 1

Using (2) 1/4" x 5" bolts, (2) 1/4" x 3 1/2" bolts and (1) 1/4" x 3 1/4" bolt, (5) 1/4" flange nuts, attach right armrest (D) to right side of chair legs (D) and chair back (A) and chair seat (C). DO NOT TIGHTEN FLANGE NUTS AT THIS TIME. Turn chair over and repeat with left armrest (E) to the other side. Once chair is together using a 7/16" wrench or socket, go back and tighten all connecting points.



Step 2

Using (4) 1/4" x 2 3/4" bolts and (4) 1/4" flange nuts, attach the chair legs (D) to the foot rest (B). Tighten using a 7/16" wrench or socket.

Your chair is now complete.

Thank you for purchasing from Wildridge.