**Required Tools:**

- Mallet/Non Marring Hammer
(Do not use Metal Headed Hammer)

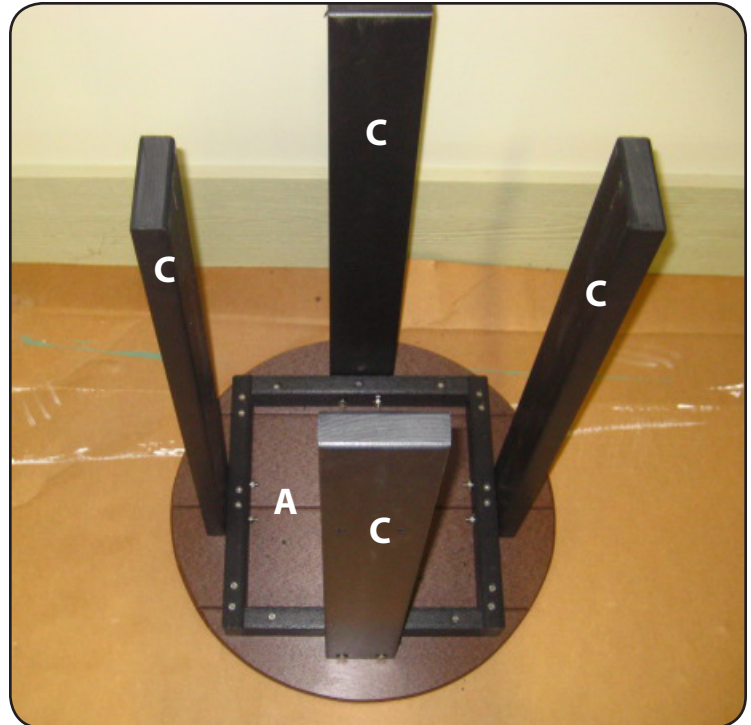
- #2 Square Drive bit
- 7/16" Wrench or Socket

Hardware:

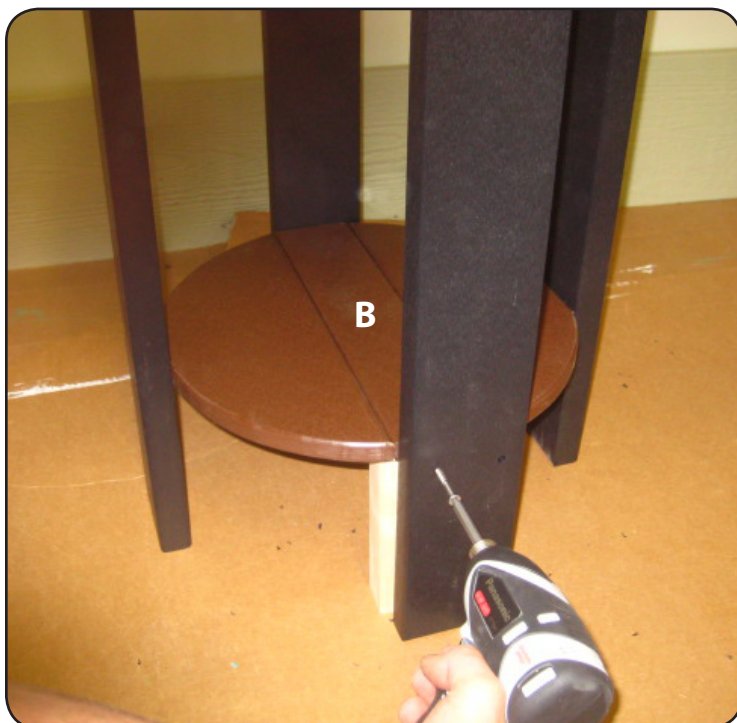
- (8) 1/4" x 2 3/4" bolts
- (8) 1/4" nuts
- (8) 2 1/2" screws

Parts:

A = Table Top
B = Shelf
C = Legs

**Step 1**

Using (8) 1/4" x 2 3/4" bolts and (8) 1/4" nuts (two per leg) attach legs (C) to table top (A). Tighten all connecting points with 7/16" wrench or socket.

**Step 2**

Turn table upright. Now fasten shelf using (8) 2 1/2" screws. Align screws with pre-drilled holes in shelf.



Your table is complete.

Thank you for purchasing from Wildridge.