ASSEMBLY INSTRUCTIONS

330-893-4212 • www.wildridge.com

HERITAGE DINING CHAIR WITH ARMS


LCC-154


Required Tools:

- Mallet/Non Marring Hammer (Do not use Metal Headed Hammer)
- 7/16"Wrench or Socket
- Cordless Drill
- 6" #2 Square Drive Bit
- Tape Measure

Hardware:

- (16) 2" Screws
- (4) 1 1/4" Screws
- (2) 1/4" x 3 1/4" Bolts
- (2) 1/4" Flange Nuts
- (4) 2 1/2" Screws

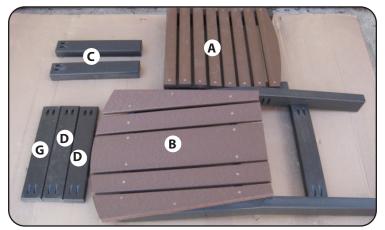

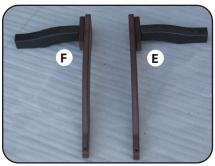


Parts:

- A = (1) Seat
- B = (1) Backrest
- C = (2) Front Legs
- D = (2) Leg Supports E = (1) Right Armrest
- F = (1) Left Armrest
- G = (1) Stretcher (Note: Identical to Leg Supports)



Step 1

On a soft surface, lay seat (A) upside down. Place a leg (C) with the holes facing inward up against the apron on the seat as shown, and fasten with (2) 2" screws through the pocket holes and into the seat brace. Fasten the other leg (C) on other side, in the same manner.

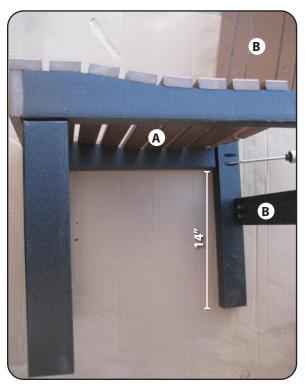

Step 2

Lay seat (A) and backrest (B) on its side. Measuring 14" from the bottom of the leg to the bottom of the seat and fasten them together with (2) 2" screws thru the pocket holes provided. Repeat on other side.



Step 3

Lay chair on its back. Fasten a leg support (D) between the front and back leg, keeping it flush on the inside and 2 3/4" up from the bottom (use one of the other leg supports as a guide for height). Fasten with (4) 2''screws. Repeat on other side.

ASSEMBLY INSTRUCTIONS

 ${
m WILDRIDGE}^{\circ}$

HERITAGE DINING CHAIR WITH ARMS

LCC-154

330-893-4212 • www.wildridge.com



Step 4


Now fasten the stretcher (G) in the center between the two other leg supports, as shown, measuring so its centered and fasten with $(4) \ 1 \ 1/4''$ screws, 2 on each side.

NOTE: DO NOT USE 2" SCREWS.



Step 5

Fasten the right armrest (E) to the backrest, as shown, with (1) 1/4" x 3 1/4" bolts and (1) 1/4" flange nuts. Repeat with left armrest (F) on the other side of the chair.

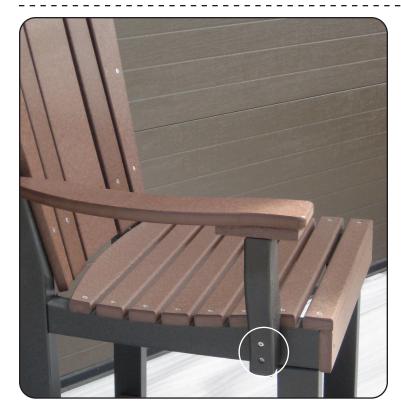

Step 6

Fasten front of armrest to the seat with (2) 2 1/2" screws. Keep flush with bottom of seat support. Repeat on other side.



Step 7

Your dining chair with arms is complete.

Thank you for purchasing from Wildridge.