





Required Tools:
- Cordless Drill
- #2 Square Drive Bit



Hardware:
- (4) 1 1/4" Screws

A = Seat/Leg Assembly (Notch Facing Up)

B = Seat/Leg Assembly (Notch Facing Down)

C = Table Top

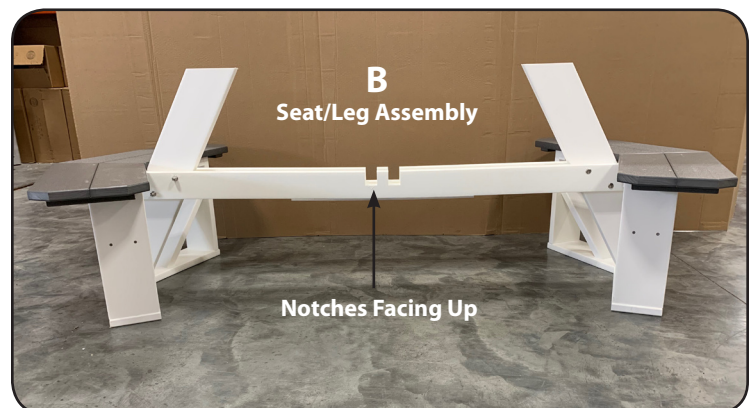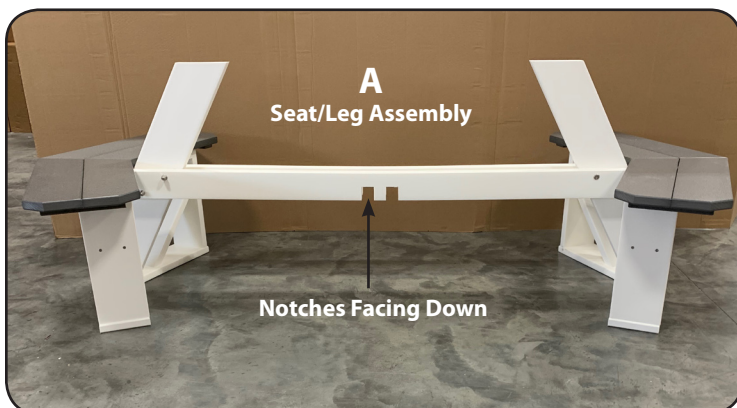

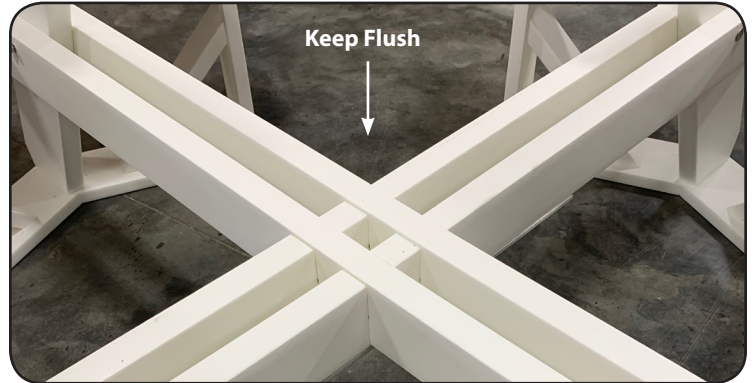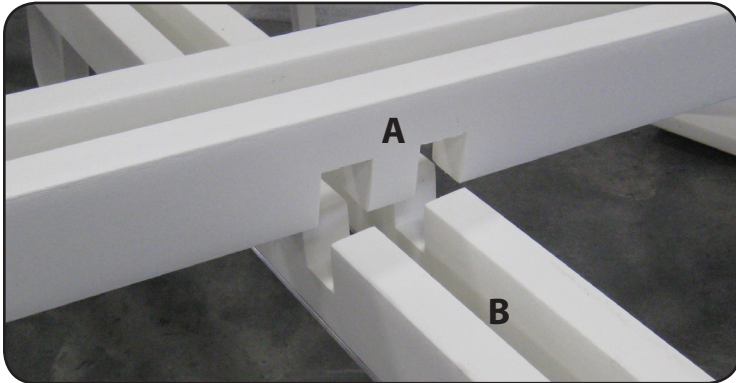

Step 1

Place the seat/leg assembly (A) section so that it fits into the notches on seat/leg assembly (B) as shown, keep flush.

Step 2

To fasten the table top (C) to the frame, find the screw holes on the aluminum frame that are on the underside of the table top. Turn the table top so that it will line up with the table legs. To see where the holes are located see the photo to the right.

Attach the aluminum frame to the leg as shown below, with (1) 1 1/4" screws, repeat on the remaining three legs.

Completed table shown below right.

