


Assembly Instructions

LCC-165 Picnic Table With Attached Bench

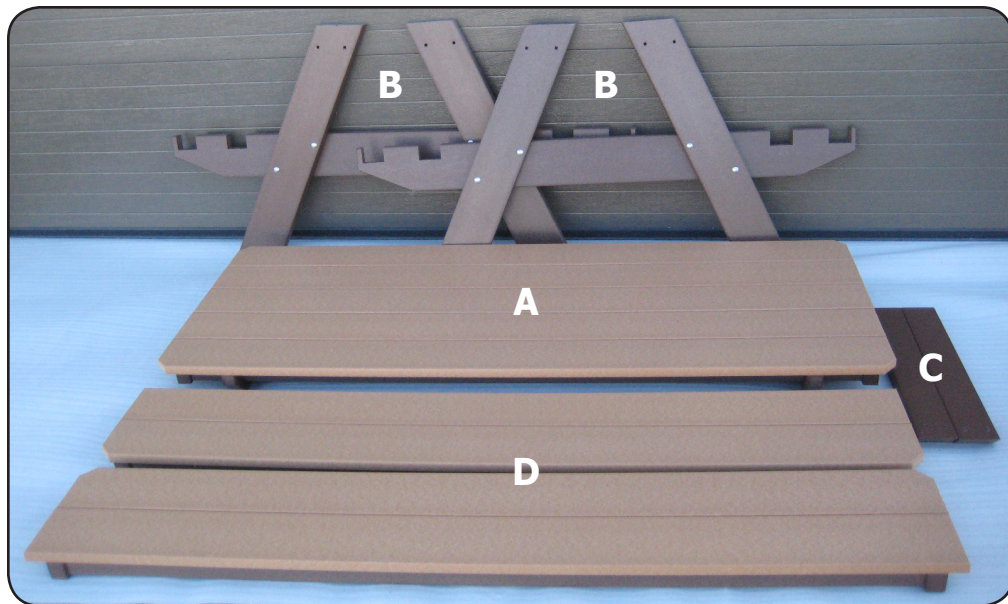

Required Tools:

- Hammer
- 1/2" Wrench or Socket
- #2 Square Drive bit
- Cordless Drill


Hardware:

- (8) 5/16" x 3 1/2" Carriage Bolts
- (8) 5/16" Flange Nuts
- (16) 2 1/2" Screws



Step 1

Lay top (A) upside down on a soft surface and attach legs (B) with (8) 5/16" x 3 1/2" carriage bolts and (8) 5/16" flange nuts.

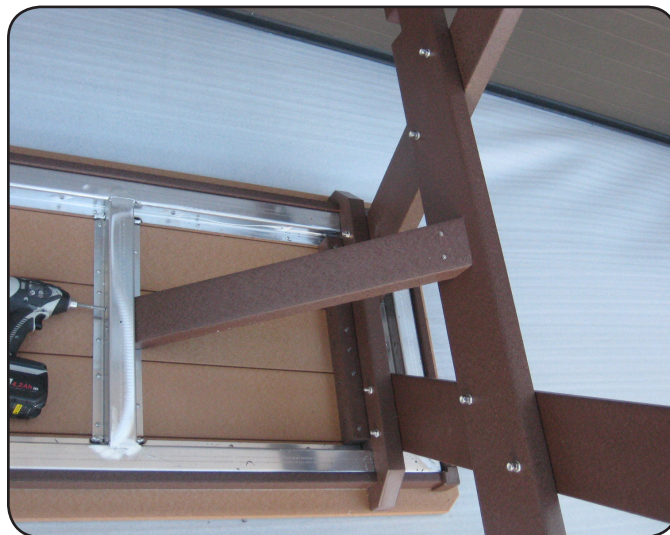

Step 2

Fasten brace (C) where shown with (8) 2 1/2" screws. Repeat this step with brace on other side.

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

Assembly Instructions

LCC-165 Picnic Table With Attached Bench



Step 3

Place seats (D) in notch and fasten with (8) 2 1/2" screws.



Complete

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com
330-893-4212