

Required Tools:


- Mallet/Non Marring Hammer
(DO NOT Use Metal Headed Hammer)
- 1/2" Wrench or Socket
- #2 Square Drive Bit
- Cordless Drill

Hardware:

- (8) 5/16" x 3 1/2" Carriage Bolts
- (8) 5/16" Flange Nuts
- (4) 1 1/4" Screws
- (4) 2" Screws


Parts:

- A = (1) Table Top
- B = (2) Leg Assemblies
- C = (2) Braces

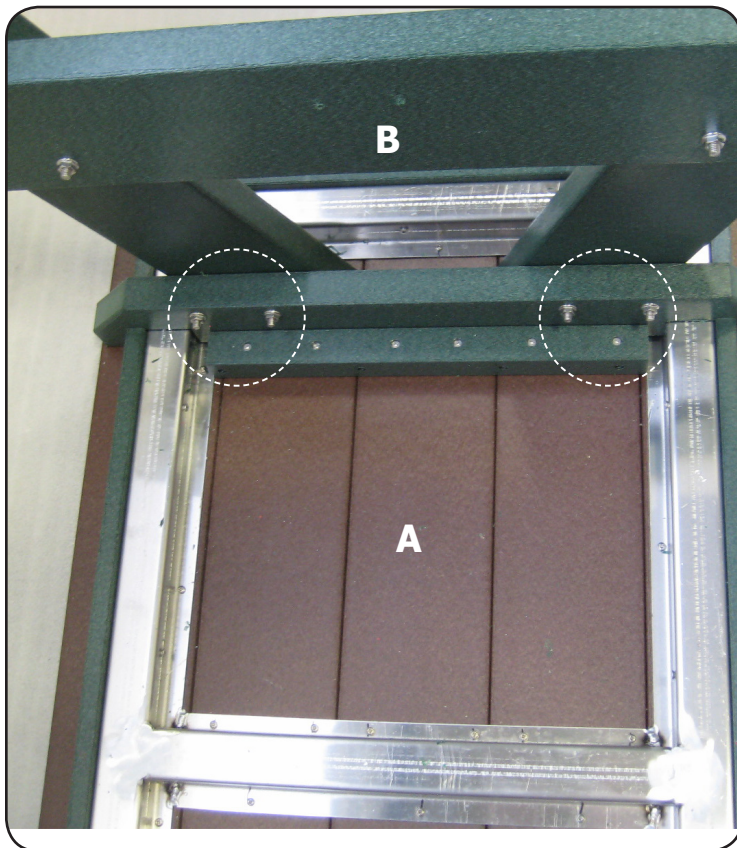

Step 1

Lay table top (A), upside down on a soft surface and attach one of the leg assemblies (B) as shown with (4) 5/16" x 3 1/2" carriage bolts and (4) 5/16" flange nuts. Repeat with other leg assembly on other side.

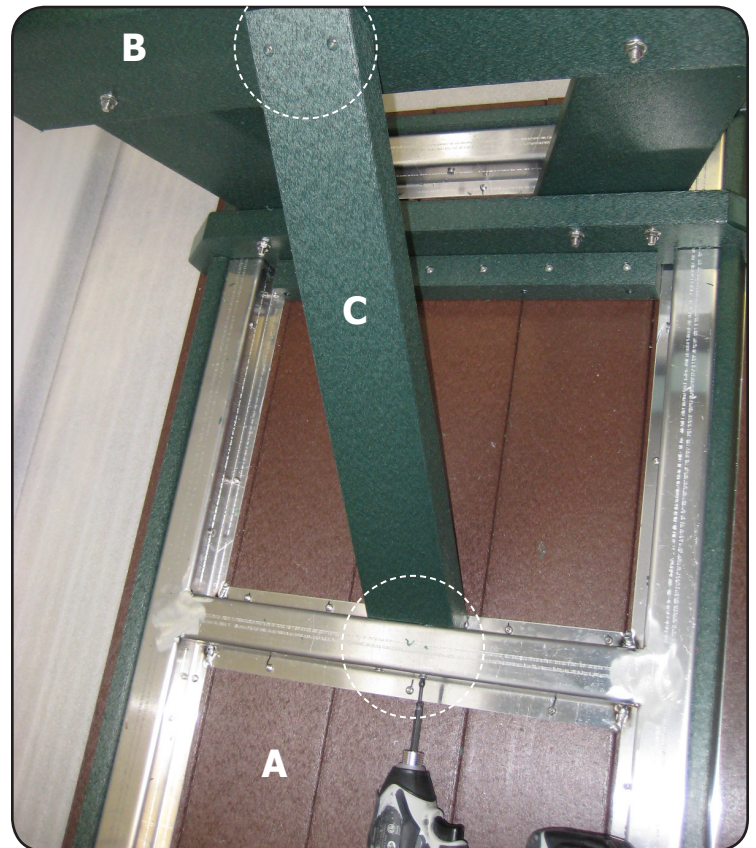

Step 2

Fasten brace (C) where shown with (2) 1 1/4" screws through hat channel and (2) 2" screws into leg assembly. Repeat on other side.



Step 3
Your table is now complete.



**Note: Benches Will Be Shipped Fully
Assembled**