

Required Tools:


- Mallet/Non Marring Hammer (Do not use Metal Headed Hammer)
- 7/16" Wrench or Socket
- Cordless Drill
- #2 Square Drive bit

Hardware:

- (8) 1/4" x 2" bolts
- (8) 2 1/2" screws
- (8) 1/4" flange nuts


Parts:

- A = (1) Table Top
- B = (2) Leg Assemblies
- C = (2) Cross Members

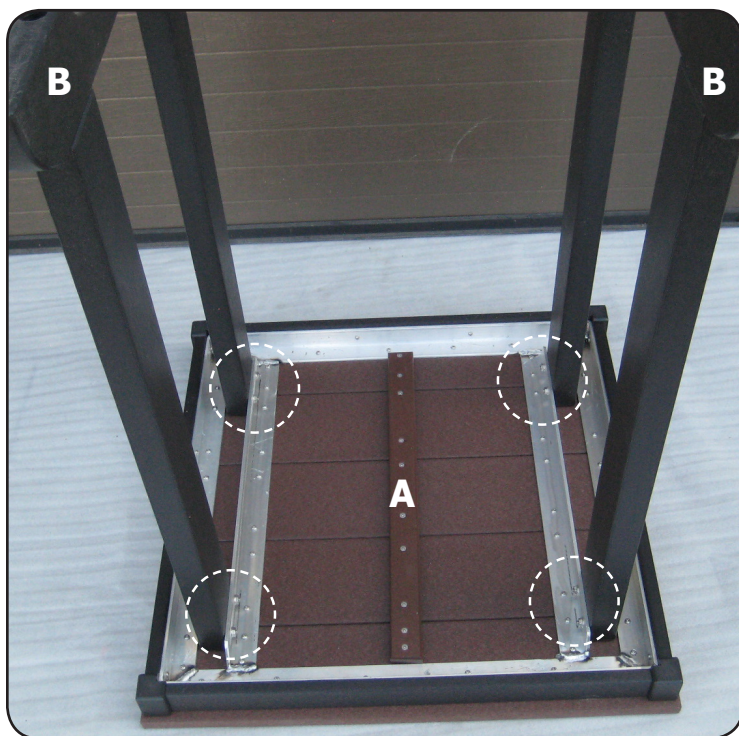

Step 1

Lay table top (A) upside down on a soft surface. Attach each leg assembly (B) to the outside of angle iron, as shown with (4) 1/4" x 2" bolts and (4) 1/4" flange nuts, on each leg assembly.

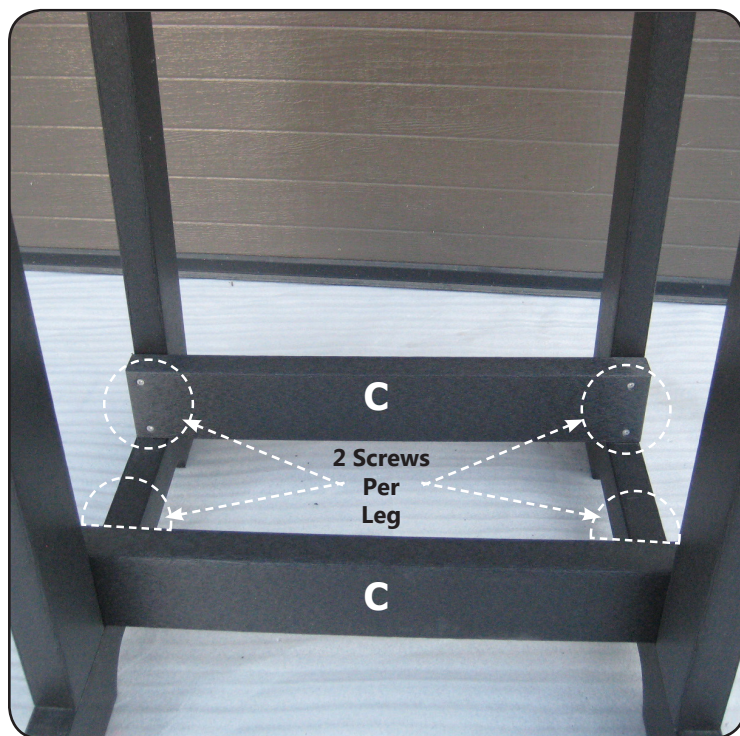

Step 2

Fasten each cross members (C) where shown on the inside of the legs with (8) 2 1/2" screws, 4 per cross member.



Step 3

Your table is complete.

Thank you for purchasing from Wildridge.