

Assembly Instructions


LCC-172 Patio Table

Required Tools:

- Hammer
- 7/16" Wrench or Socket
- Cordless Drill
- #2 Square Drive bit

Hardware:

- (8) 1/4" x 2" bolts
- (8) 2 1/2" screws
- (8) 1/4" flange nuts

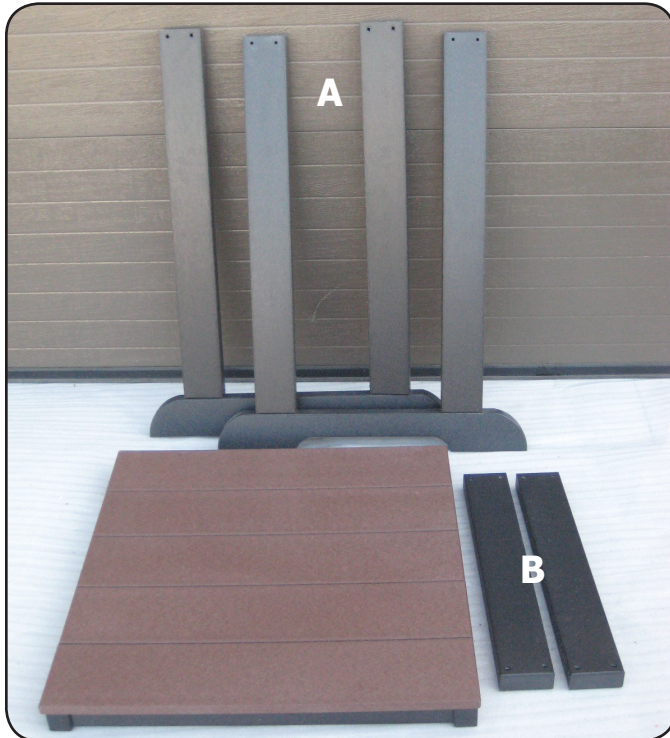

Step 1

Lay table top upside down on a soft surface. Attach leg (A) on outside of angle iron as shown with (8) 1/4" x 2" bolts and (8) 1/4" flange nuts.



Step 2

Fasten cross members (B) where shown on inside of leg with (8) 2 1/2" screws.



Complete



www.wildridge.com

330-893-4212