

Required Tools:

- Mallet/Non Marring Hammer (Do Not Use Metal Headed Hammer)
- 7/16" Wrench Or Socket
- #2 Square Drive Bit
- Cordless Drill

Hardware:





- (12) 1/4" X 3 1/2" Carriage Bolts
- (12) 1/4" Flange Nuts
- (3) 3" Screws
- (1) 2" Screws

Parts:

- A = (1) Seat
- B = (3) Leg Assemblies
- C = (1) Cross Support Without Pocket Hole
- D = (1) Cross Support With Pocket Hole

Step 1

Lay seat (A) upside down on soft surface. Place one of the leg assemblies (B) inside and up against the end of the seat frame, from the outside tap (4) 1/4" x 3 1/2" carriage bolts through the four holes provided, and add (1) 1/4" flange nut to each of the four bolts.

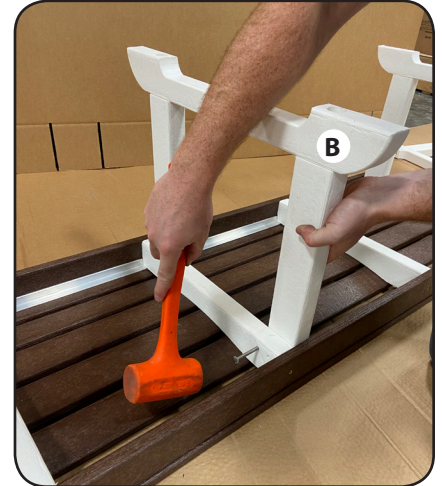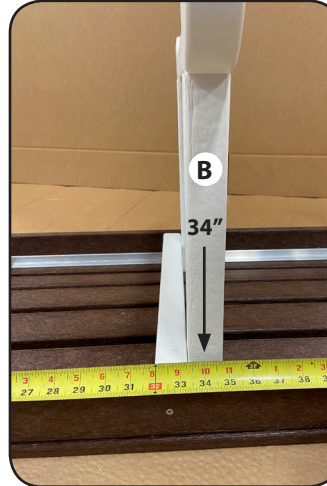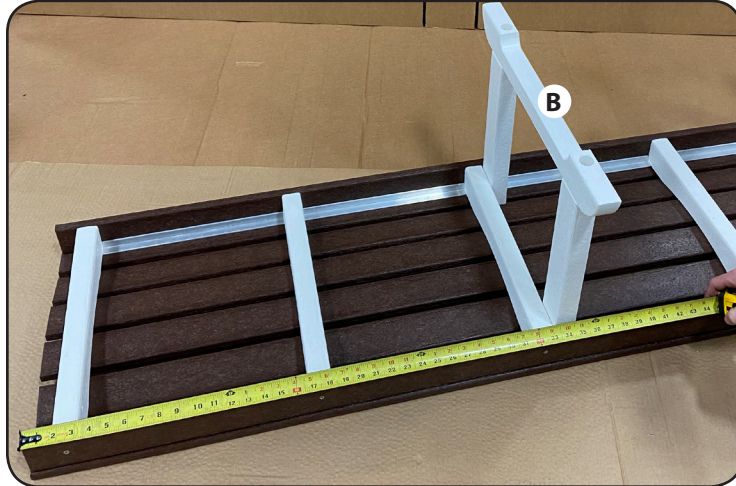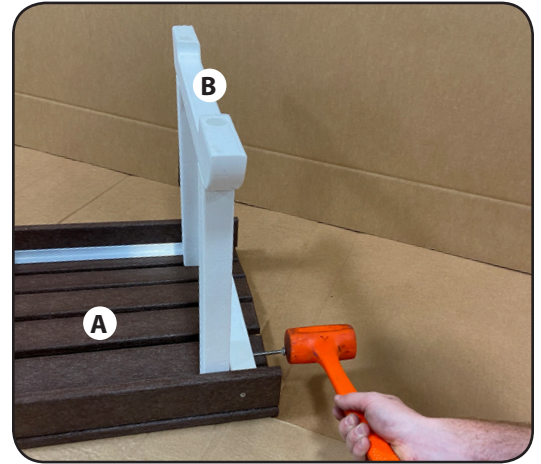


Step 2

To place the second leg assembly (B) for the center of the bench, measure in from the end of the bench to the center 34 inches, then place the center of the leg assembly at the 34" mark. Fasten the leg assembly to the frame with (4) 1/4" x 3 1/2" carriage bolts and (4) 1/4" flange nuts.

Step 3



On the other end of the bench, place the third leg assembly (B) inside and up against the end of the seat frame, from the outside tap (4) 1/4" x 3 1/2" carriage bolts through the four holes provided, and add (1) 1/4" flange nut to each of the four bolts.

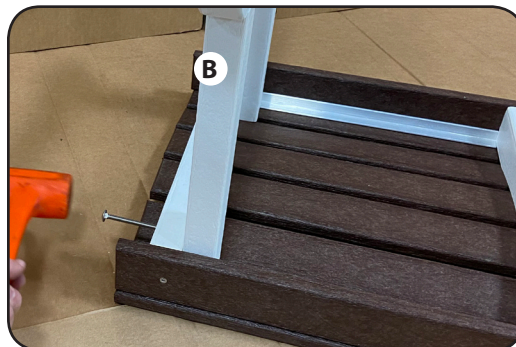



Step 4

Place (C) the cross support WITHOUT pocket hole in between the end leg assembly and the middle leg assembly. Center the cross support, then fasten it (as pictured above left) to the end leg assembly using (1) 3" screw. Next attach the cross support (as pictured above right) to the middle leg assembly, making sure its centered, and fasten using (1) 3" screw.

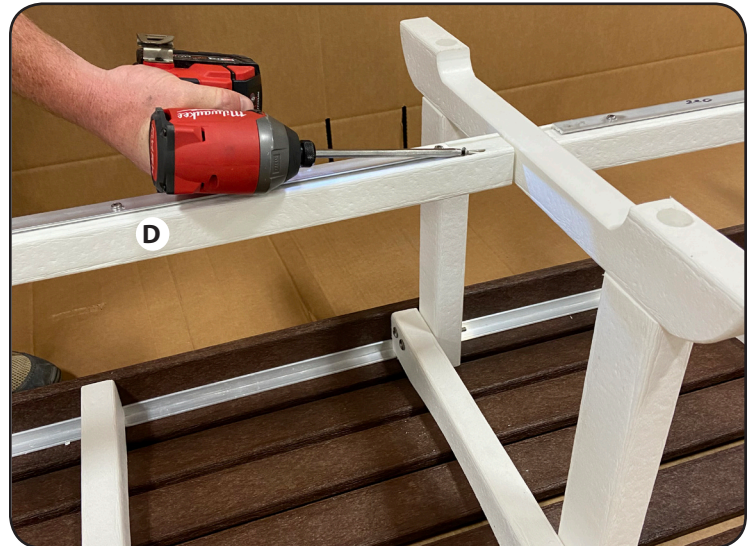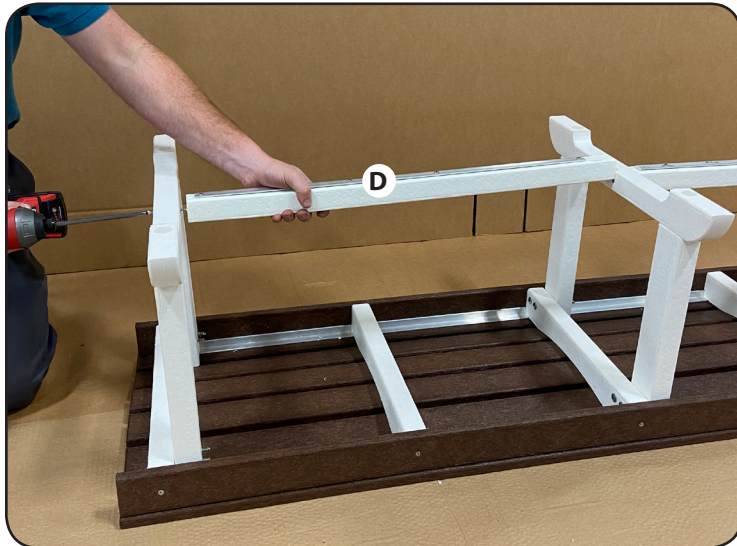

Step 5

Position (D) the cross support WITH pocket hole into place, making sure the pocket hole is facing towards the middle leg assembly. Centering the cross support, fasten it to the end leg assembly (as picture above left) with (1) 2" screw. To attach the cross support to the middle leg assembly, use (1) 2" screw and fasten it through the pocket hole and into the middle leg assembly (as pictured above right).



Step 6

Your bench is now complete.

Thank you for purchasing from Wildridge.