

Assembly Instructions

LCC-179 Pub Table




Required Tools:

- Cordless Drill
- #2 Square Drive bit
- 7/16" Wrench or Socket


Hardware:

- (8) 2" Screws
- (8) 2 1/2" Screws
- (8) 2" Bolts
- (8) Flange Nuts
- (16) 1 1/4" Screws

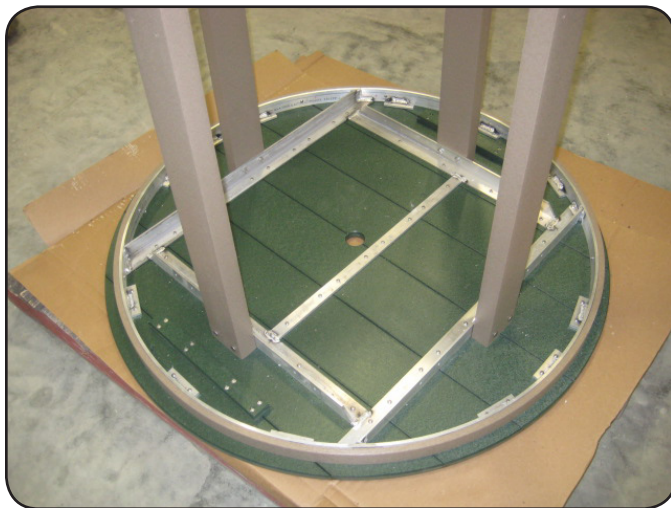

Step 1

Turn Table upside down on soft surface and attach leg with (2) 2" bolts and (2) nuts. Repeat on all sides..

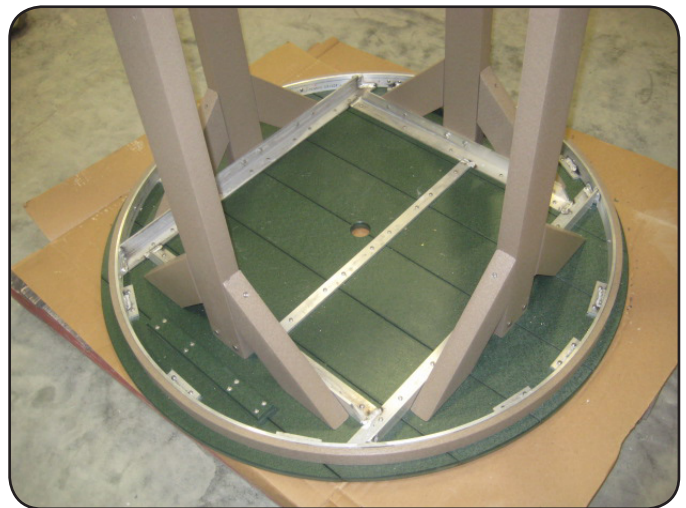

Step 2

Attach braces as shown with (4) 1 1/4" screws, repeat on all sides with routed end against leg.

Step 3

Attach braces to leg with (1) 2" screw per brace, repeat on all sides.



www.wildridge.com

330-893-4212

© 2017

Assembly Instructions

LCC-179 Pub Table



Step 4

Set bottom table on 2 stilts provided and fasten through holes provided with (8) 2 1/2" screws.

NOTE: Bottom table boards should be turned the same way as top table board.

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212

© 2017