


Assembly Instructions

LCC-182 Bar Stool

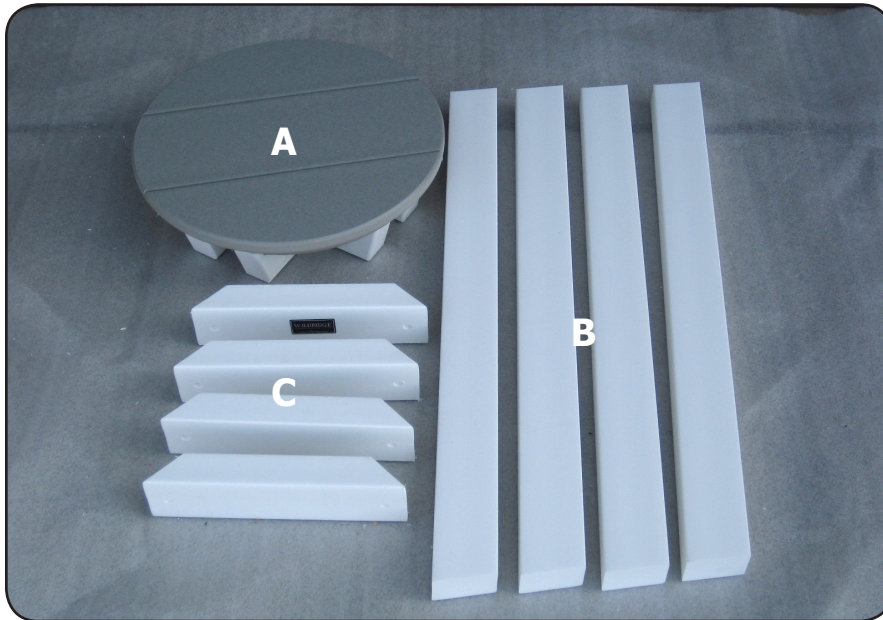

Required Tools:

- Tape Measure
- Cordless Drill
- #2 Square Drive bit

Hardware:

- (16) 2 1/2" Screws
- (8) 2" Screws



Step 1

Lay round top (A) upside down on smooth surface and attach legs (B) in pockets as shown with (16) 2 1/2" screws.



Step 2

Now fasten braces as shown with (8) 2" screws. NOTE: measuring 11 1/4" as shown.



Complete



www.wildridge.com

330-893-4212